
ntouch Mobile

for Apple iOS Devices

User Guide

App Version 8.0

Table of Contents

- New 8.0 Features 2
- Set Up ntouch Mobile 3
- Make and Receive Calls..... 12
- Share Text, Contacts and Location 21
- Use Voice Carry Over (VCO) 37
- Use Personal SignMail Greeting 40
- Send Deaf SignMail..... 46
- View Your SignMails 50
- See Call History..... 57
- Add a Profile Photo 64
- Use the Phonebook..... 75
- Use the Video Center..... 99
- Use Yelp Search..... 102
- Change Settings..... 110
- Use App Help 130



Version 8.0
February 29, 2016

New 8.0 Features

What's New in 8.0?

Sorenson's ntouch Mobile for iOS 8.0 app includes these new features:

- **Favorites** — The Favorites feature lets you create a list of favorite contacts. You can store your most important contacts in the Favorites list to make them easy to find quickly. Using the Favorites list is especially helpful if you have a large number of contacts. You can add a phone number to your Favorites list at the time you create the contact or afterwards. You can open your Favorites list on the *Phonebook* screen.
- **Hide My Caller ID** — The Hide My Caller ID feature lets you make videophone calls that do not send Caller ID information in your outgoing calls. When this feature is enabled, you will not be able to call Sorenson users who have enabled the “Don't Accept Anonymous Calls” feature (described below) on their endpoints.
- **Don't Accept Anonymous Calls** — The Don't Accept Anonymous Calls feature lets you reject incoming videophone calls that do not have Caller ID information. This feature can help reject solicitation calls or calls from people who are hiding their Caller ID information. Remember, if you turn on the Don't Accept Anonymous Calls feature, other Sorenson users will not be able to call you if they have enabled the “Hide My Caller ID” feature (described above) on their endpoints.
- **N11 Dialing** — The N11 Dialing feature which lets you dial 211, 311, 511, 611, 711 and 811 numbers yourself. In the past, you could only directly dial 411 and 911 calls. When you dial an N11 number, your call will be connected to the appropriate service, if that service is available. All N11 calls are handled as Sorenson Relay calls, except 611 calls which are directly routed to Sorenson Customer Support. N11 services are not available in all areas. Your provisioned 911 Location address is used for N11 phone number look-up. If you have a non-standard address format, N11 number look-up may fail. The N11 numbers are: **211** = Community information and referrals; **311** = Non-emergency police dispatcher; **411** = Phone directory assistance; **511** = Traffic and transportation information; **611** = Customer service (directly dials Sorenson Customer Service); **711** = State TTY relay service; **811** = Local utility “call-before-you-dig” service; **911** = Emergency dispatcher.
- **Yelp Search** — The Yelp Search feature lets you search for phone numbers of local businesses. This feature replaces the Sorenson Directory feature in previous releases.
- **New VRS Call** — The New VRS Call feature gives you more control when making Sorenson VRS calls. After the interpreter ends the hearing side of a VRS call, you can then dial the phone number for a new call yourself instead of having to sign the number to the interpreter and you stay connected to the same interpreter.
- **Spanish Contact** — This feature lets you choose to show the SVRS Espanol contact in your Contacts list or hide this contact if you do not use Sorenson's Spanish VRS.
- **Company Name** — This feature lets you add a company name to the contact records in your Phonebook.

Set Up ntouch Mobile

You can install the ntouch Mobile app on your iPhone or iPod by downloading the app from the Apple App Store. After installing the ntouch Mobile app, you must register the app on your device with your Sorenson account.

To Register Your Account

Step 1. After installing ntouch Mobile, tap the **ntouch** icon as shown below.

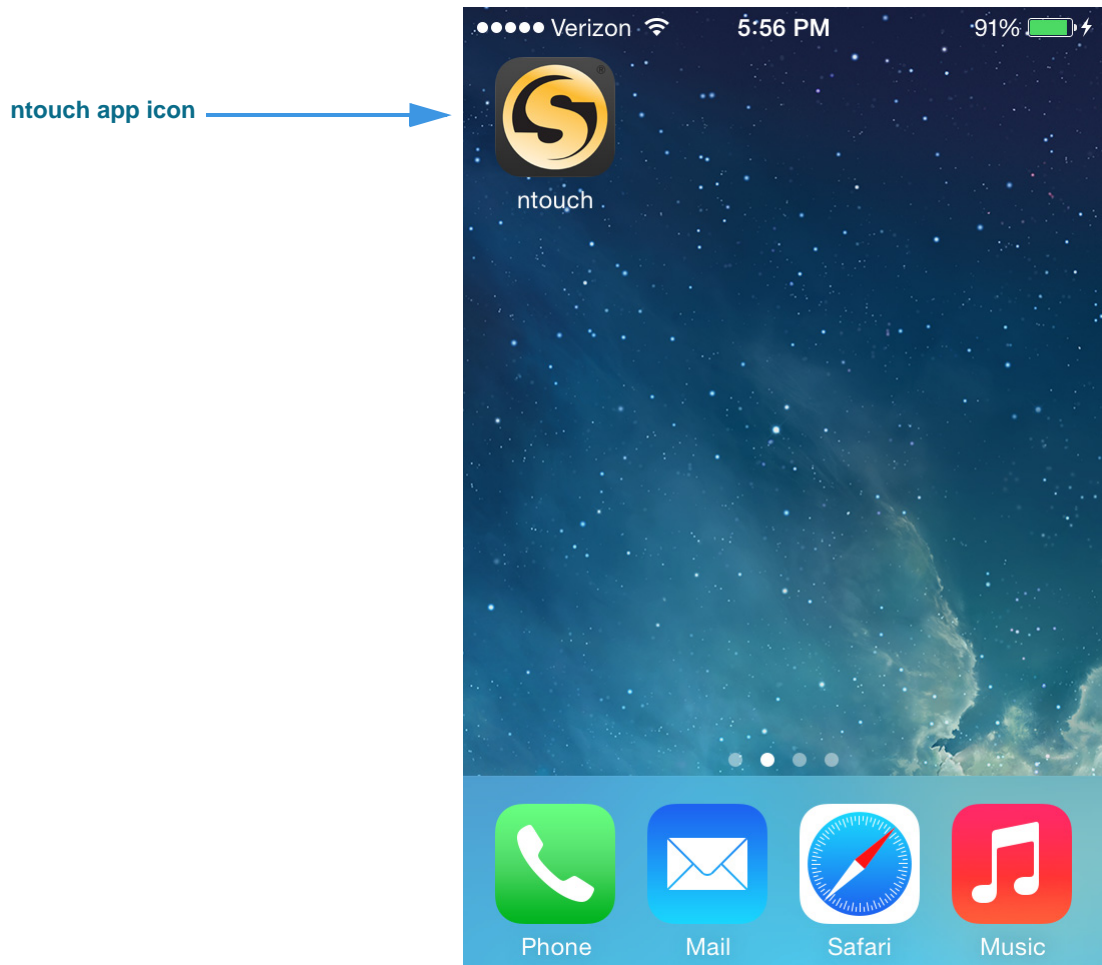


Figure 1 — ntouch app icon on main OS screen

Step 2. When ntouch Mobile is launched, the app's splash screen appears as shown below.



Figure 2 — ntouch Mobile splash screen

This app splash screen will usually appear for only a few seconds.

Set Up ntouch Mobile

Step 3. You will then see the Setup Account screen as shown below.

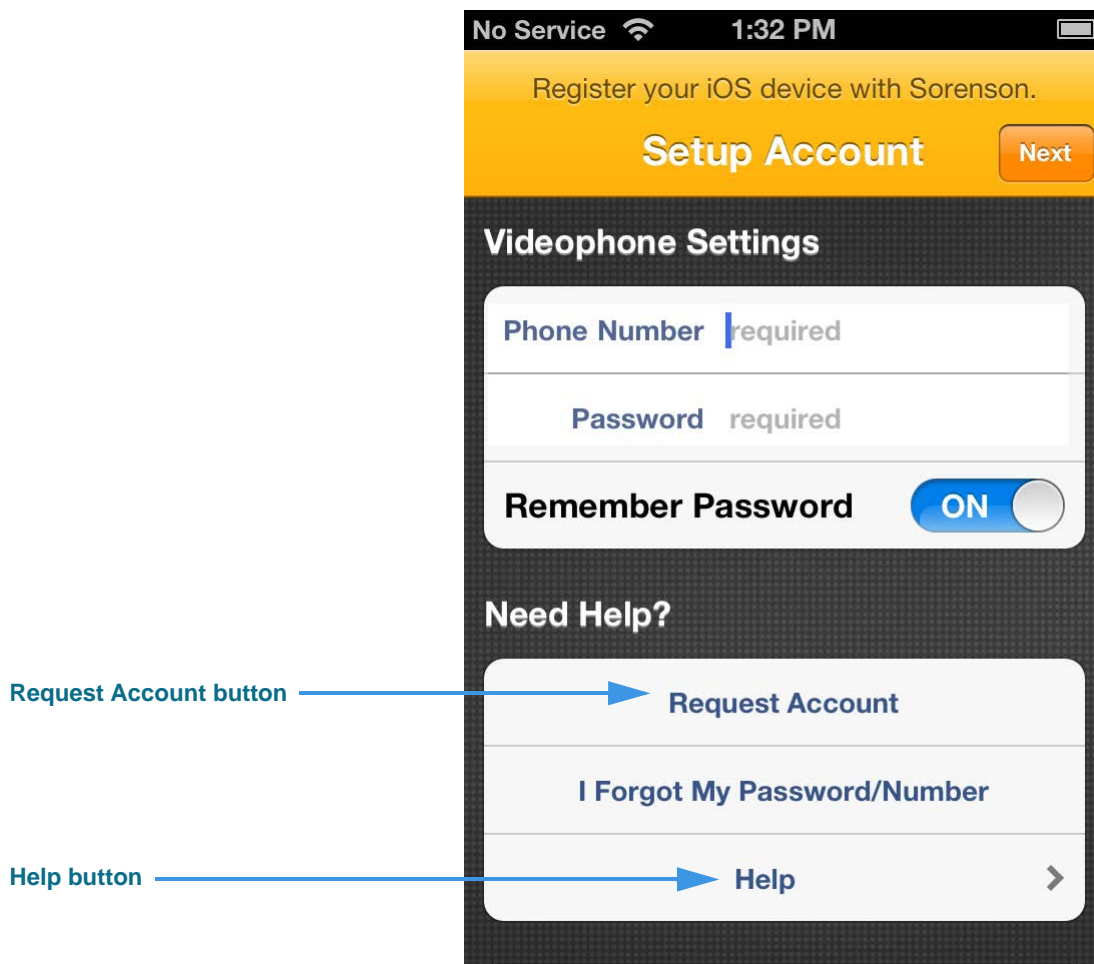


Figure 3 — Setup Account screen

To begin using the app, you must first request an ntouch Mobile account if you do not already have one. The **Request Account** button is used to open a website at which you can request an ntouch Mobile account. When your account is created by Sorenson, you will be assigned an ntouch Mobile phone number and password.

Step 4. Tap the **Request Account** button. When the registration web page opens on your phone's display, complete the request form. You will receive your new ntouch Mobile phone number and password by email. You can exit the app while you wait for the email.

Note: If you have problems, you can select the **Help** button. You will then see a button that you can select to make a videophone call to the Sorenson CIR department. If you call CIR, the person helping you will tell you the new number and password assigned to your ntouch Mobile account.

Step 5. After you get your new number and password, you can register the app. To do so, launch the app again to return to the Setup Account screen.

Step 6. Tap the **Phone Number** field. A keypad will then appear on the screen as shown below.

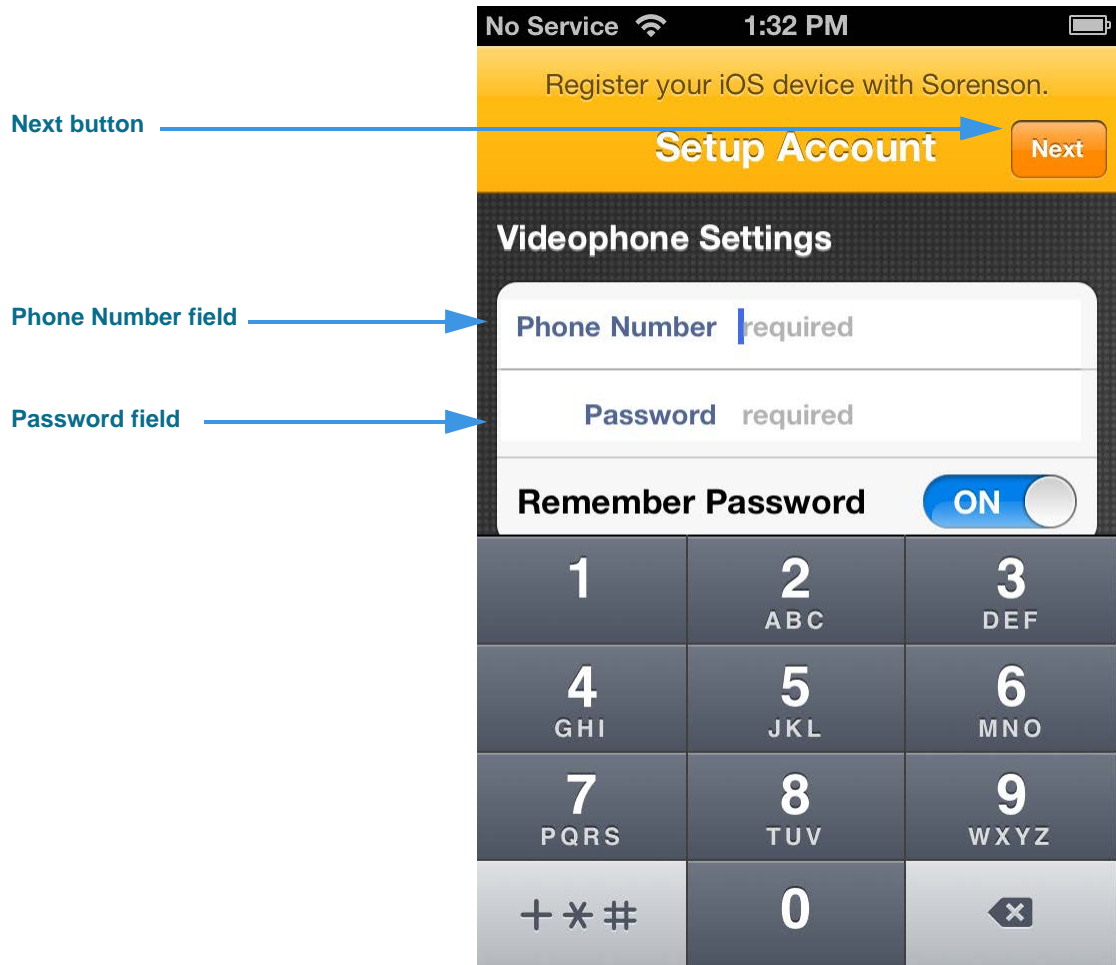


Figure 4 — Entering number and password to register

Step 7. First, enter your ntouch Mobile phone number using the keypad.

Step 8. Then, move to the **Password** field to enter the password assigned to your account.

Step 9. Finally, tap the **Next** button to register the app.

Set Up ntouch Mobile

- Step 10. If you entered a valid ntouch Mobile phone number and password, you will see the Agreement screen as shown below.

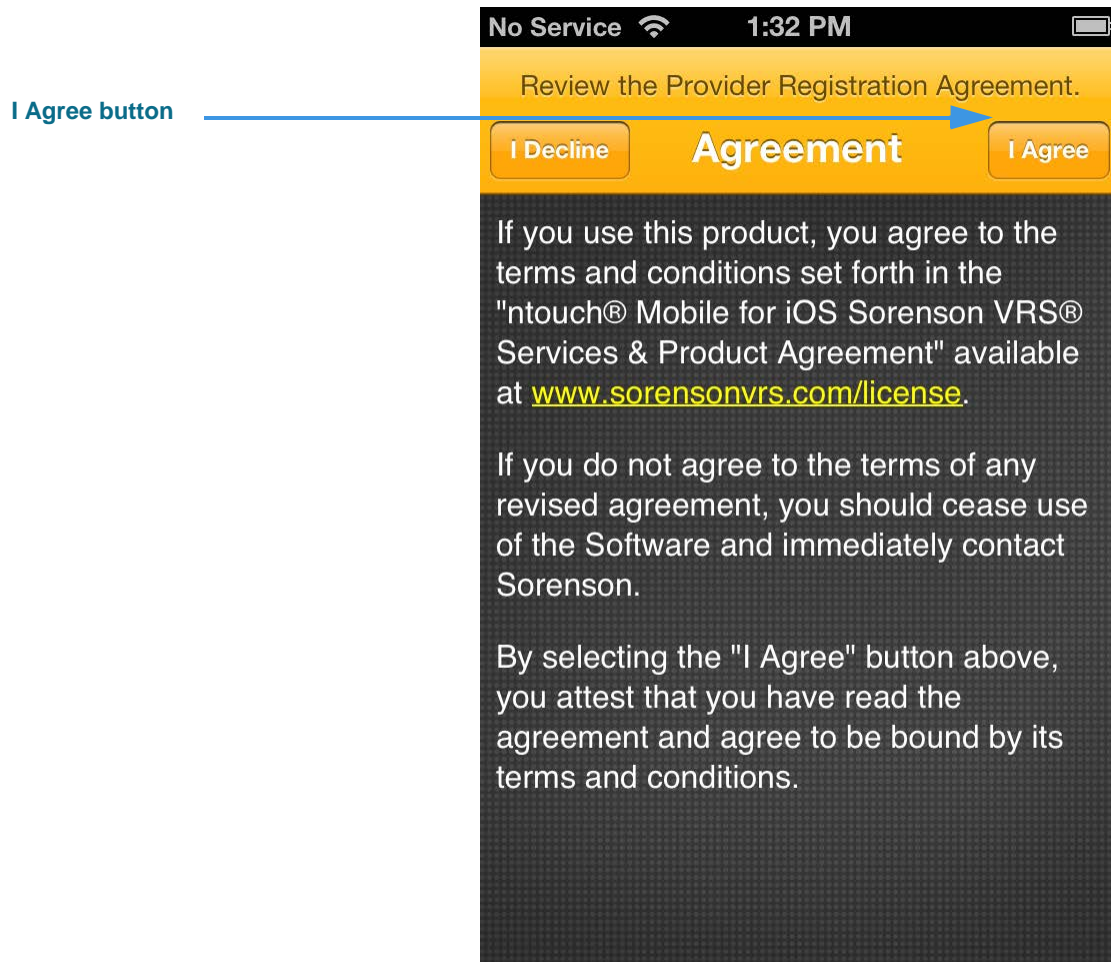


Figure 5 — Agreement screen

You must read and accept the Provider Registration Agreement. By accepting, you acknowledge that you have received and understood certain information. You also certify that you have a medically-recognized hearing or speech disability that requires your use of the Telecommunications Relay Service (TRS) provided by ntouch Mobile.

You can read the entire agreement at www.sorensonvrs.com/license

- Step 11. Carefully read all the text on the screen. When ready, tap the **I Agree** button.

Step 12. The Contacts Imported screen will then appear as shown below.

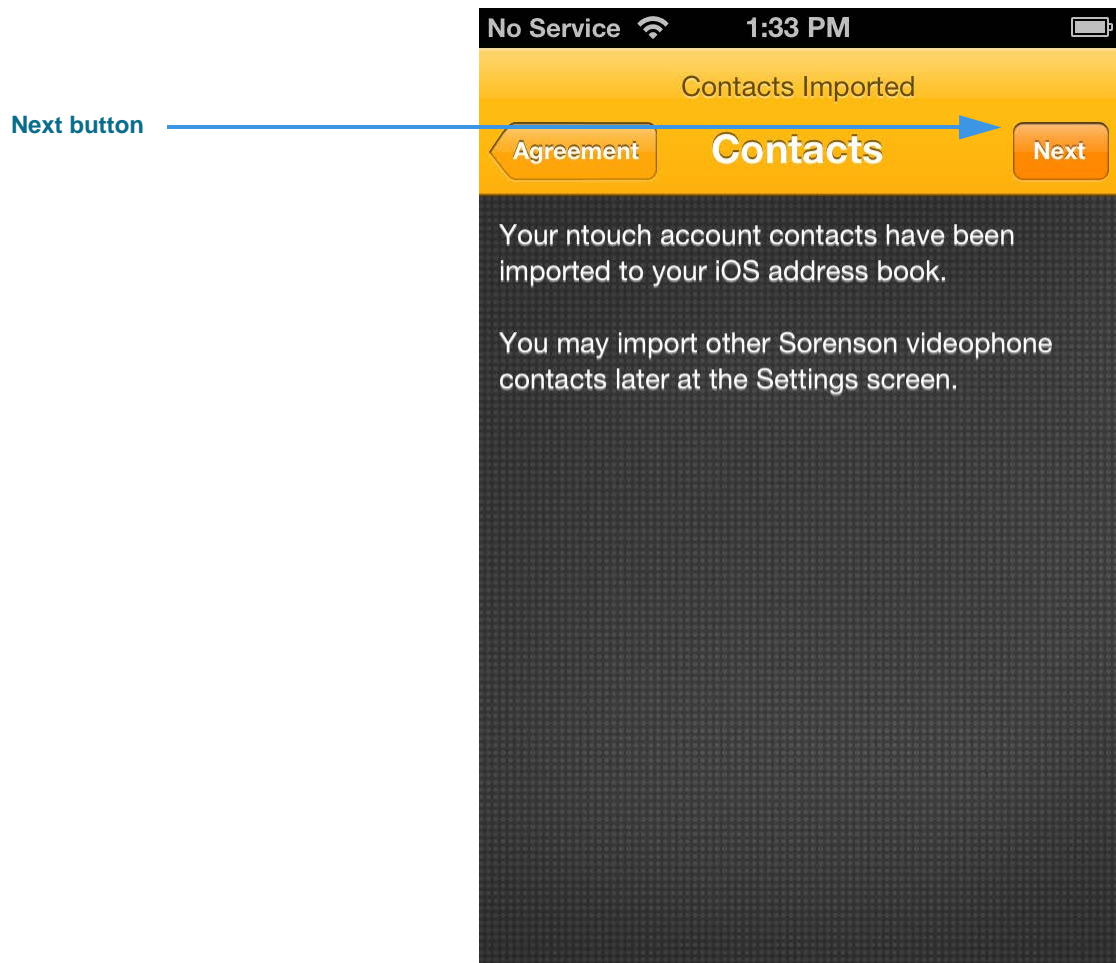


Figure 6 — *Contacts Imported* screen

This screen appears to tell you that any existing contacts from your ntouch Mobile and Tablet account have been imported into your iOS address book. You can also choose to import contacts from another Sorenson videophone account. See **Page 120** for details.

Step 13. Tap the **Next** button to continue.

Step 14. The 911 Location Info screen will then appear as shown below.

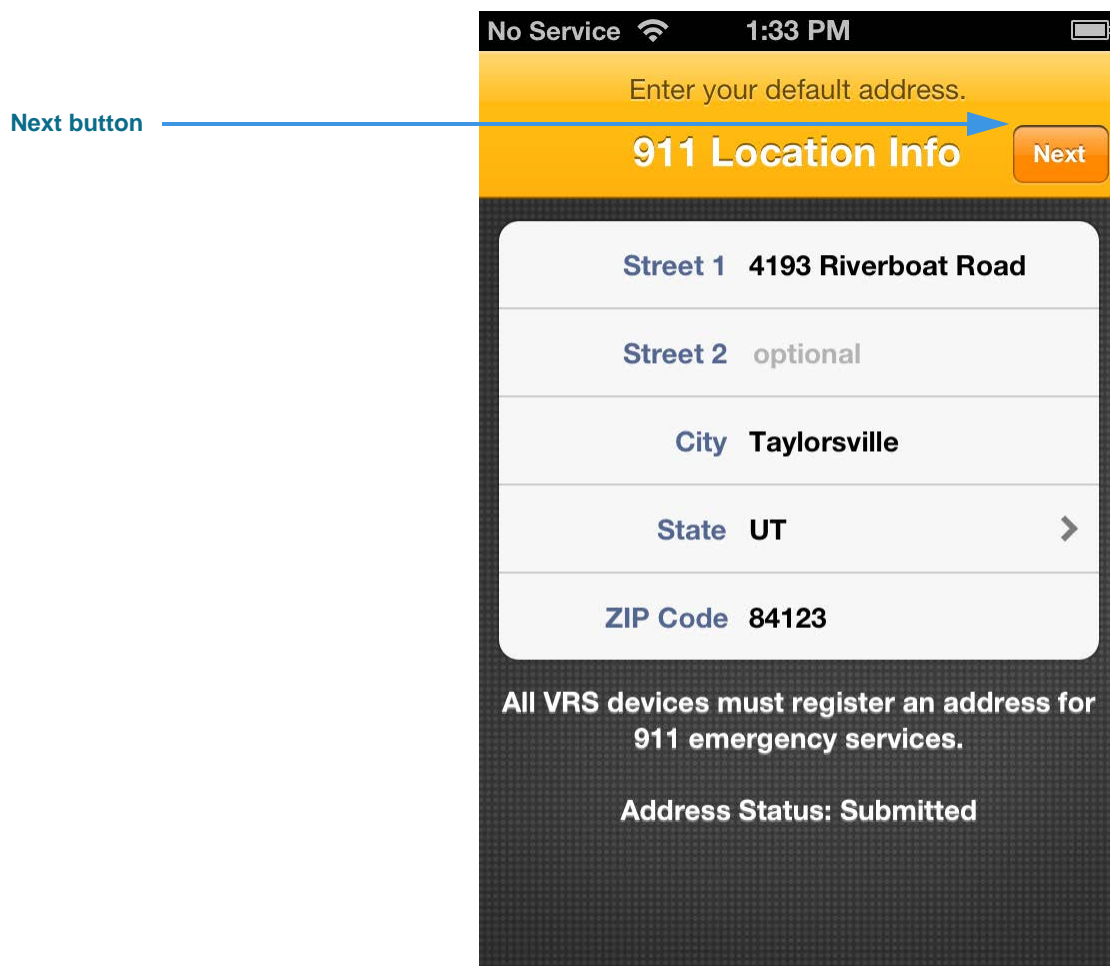


Figure 7 — 911 Location Info screen

This screen shows the address that was registered for your ntouch Mobile account. If you are unable to sign your current location to the Sorenson VRS interpreter during a 911 call, the default address you enter here will be given to the emergency services dispatcher. You should probably *enter the address where you are most likely to be* at any give time. For example, you could enter your home address or your work address.

You should enter the address where you are most likely to be at any give time (for example, your home address or your work address) on this screen.

Step 15. Check the address shown on the screen. Make any necessary changes. When ready to continue, tap the **Next** button.

Step 16. The Welcome! screen will then appear as shown below.

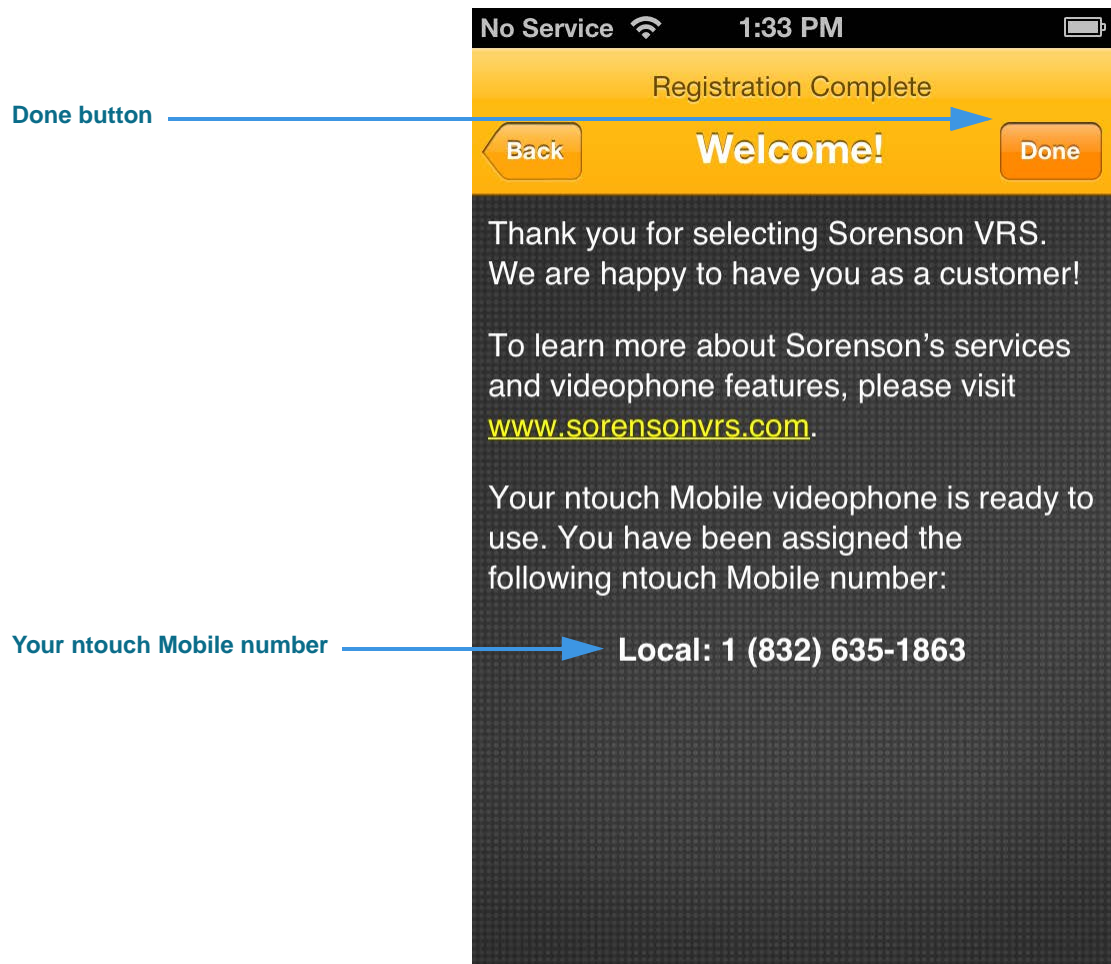


Figure 8 — Welcome! screen

When this screen appears, the registration process is complete. The new phone number that was assigned to your ntouch Mobile account is shown at the bottom of the screen.

Step 17. Tap the **Done** button to proceed.

Set Up ntouch Mobile

Step 18. A dialog will then appear as shown below.

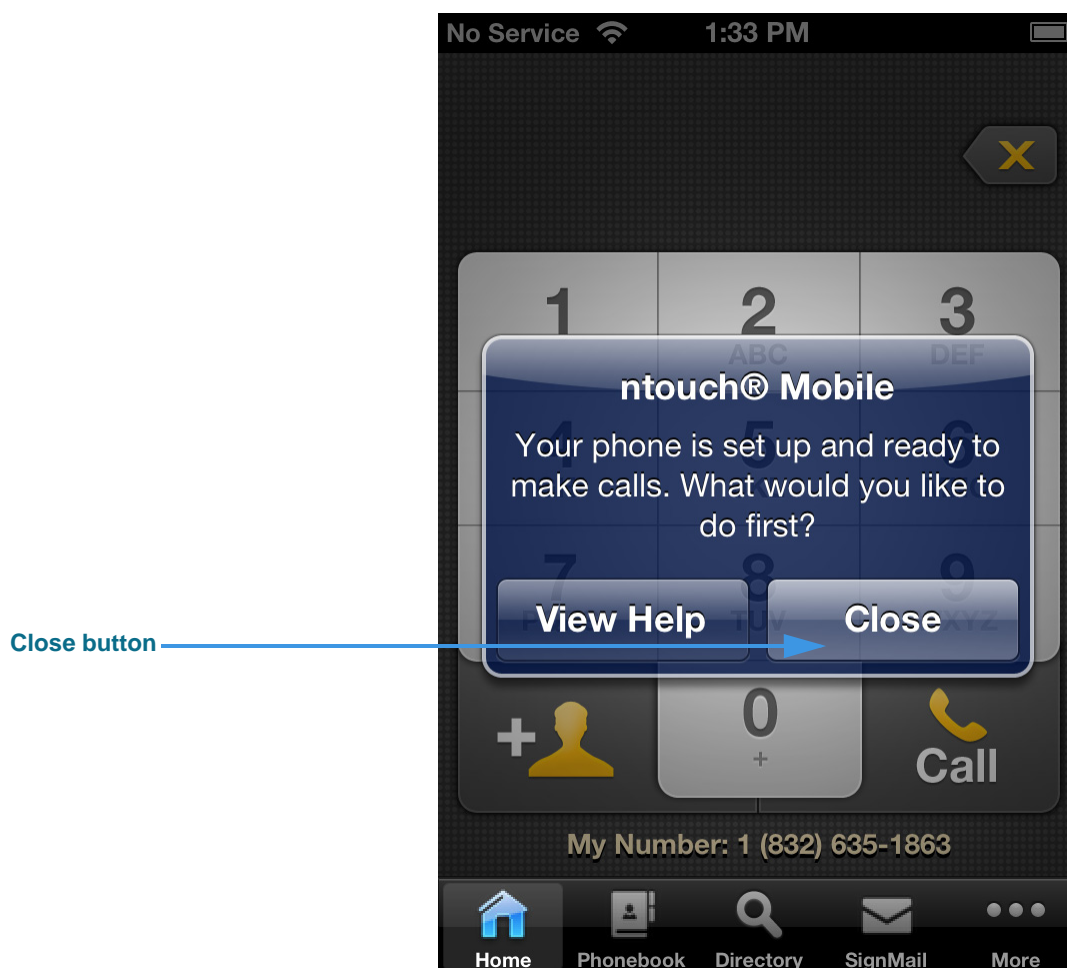


Figure 9 — Phone is set up dialog

This dialog appears when registration of the ntouch Mobile app is complete. You can now choose to:

- View a Help video about ntouch Mobile
- Close the dialog and go to the Home screen

Step 19. To continue with the steps given in the next section of this document, answer the dialog by tapping the [Close](#) button.

Step 20. Go on to the next section to see how to make and receive calls.

Make and Receive Calls

ntouch Mobile's *Home* screen is used to make outgoing calls to hearing or deaf people. You can make or receive calls from any hearing person through Sorenson VRS (SVRS). You can also make calls to and receive calls from other deaf videophone users.

To Make an Outgoing Call

- Step 1. Tap the **Home** button to open ntouch Mobile's Home screen shown below.
- Step 2. Enter the phone number of the person or business you want to call.

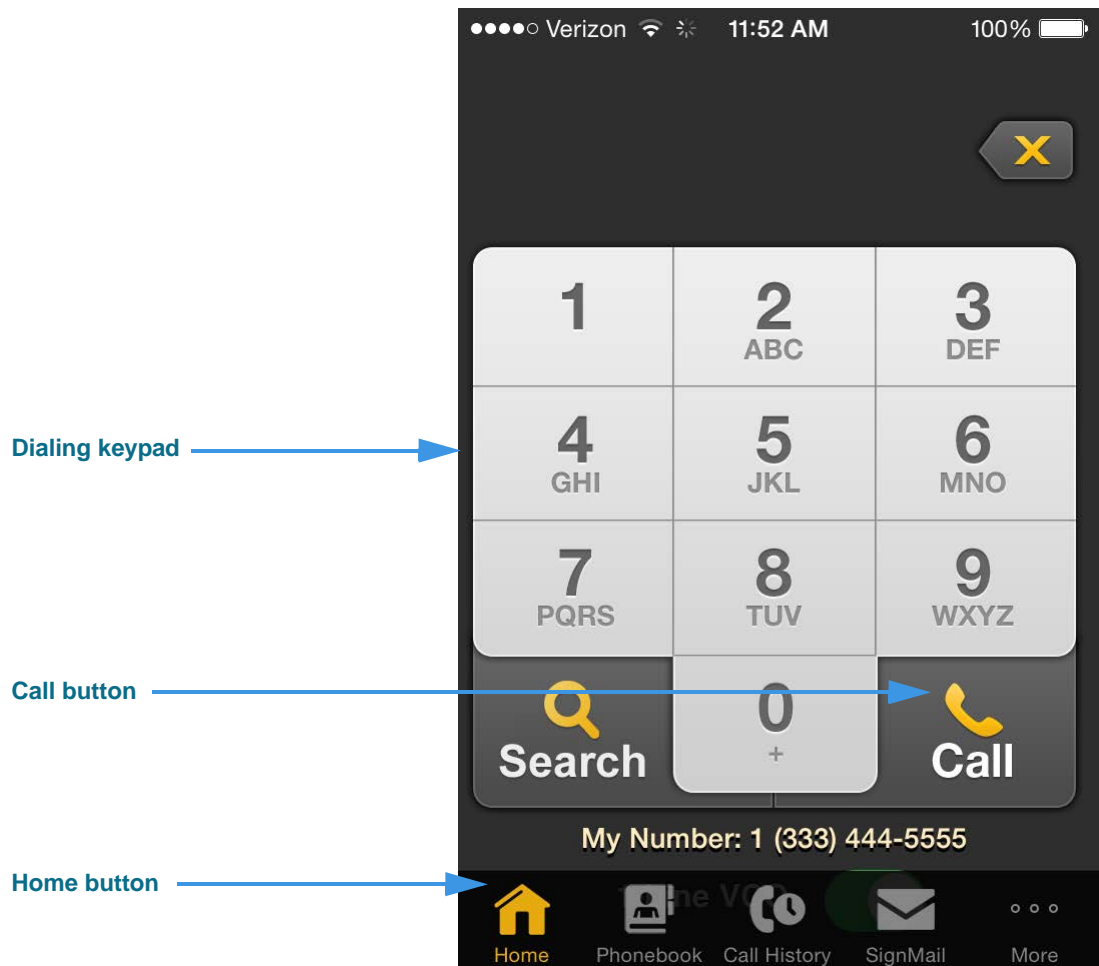


Figure 10 — Dial number using *Home* screen

- Step 3. Tap the **Call** button when ready to dial the number.

Make and Receive Calls

Step 4. The screen will then look like the image shown below.

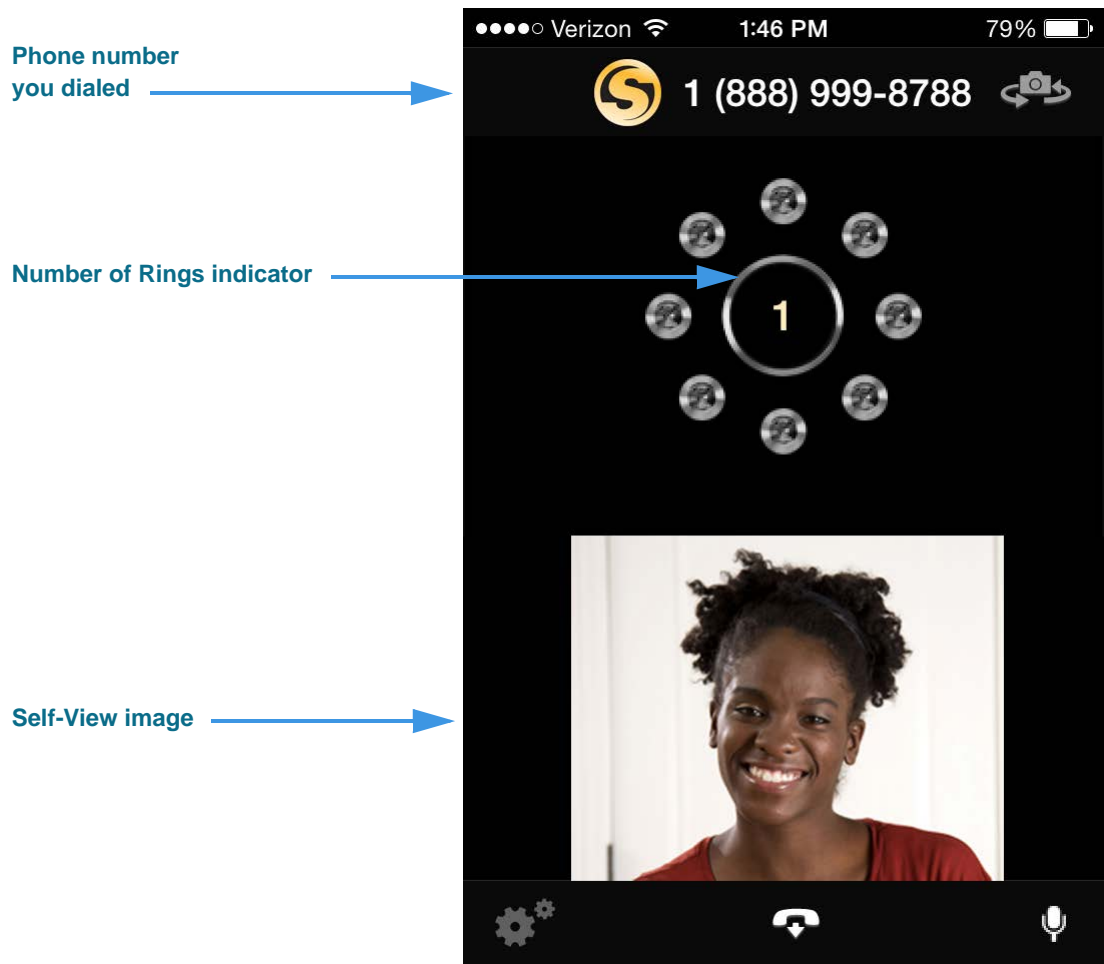


Figure 11 — Dialing screen with Rings indicator

This screen shows the video image being *sent* by the phone (that is, the Self-View image). The Self-View video is captured by the iOS device’s front-facing camera.

The Number of Rings indicator appears when you call another Sorenson videophone user. You will not see this indicator when you are making an SVRS call to a hearing person. In that case, you would see an image showing a “Hold Server” message until your call is answered by an SVRS interpreter.

Step 5. When the call is answered, the screen will look like the image shown below.

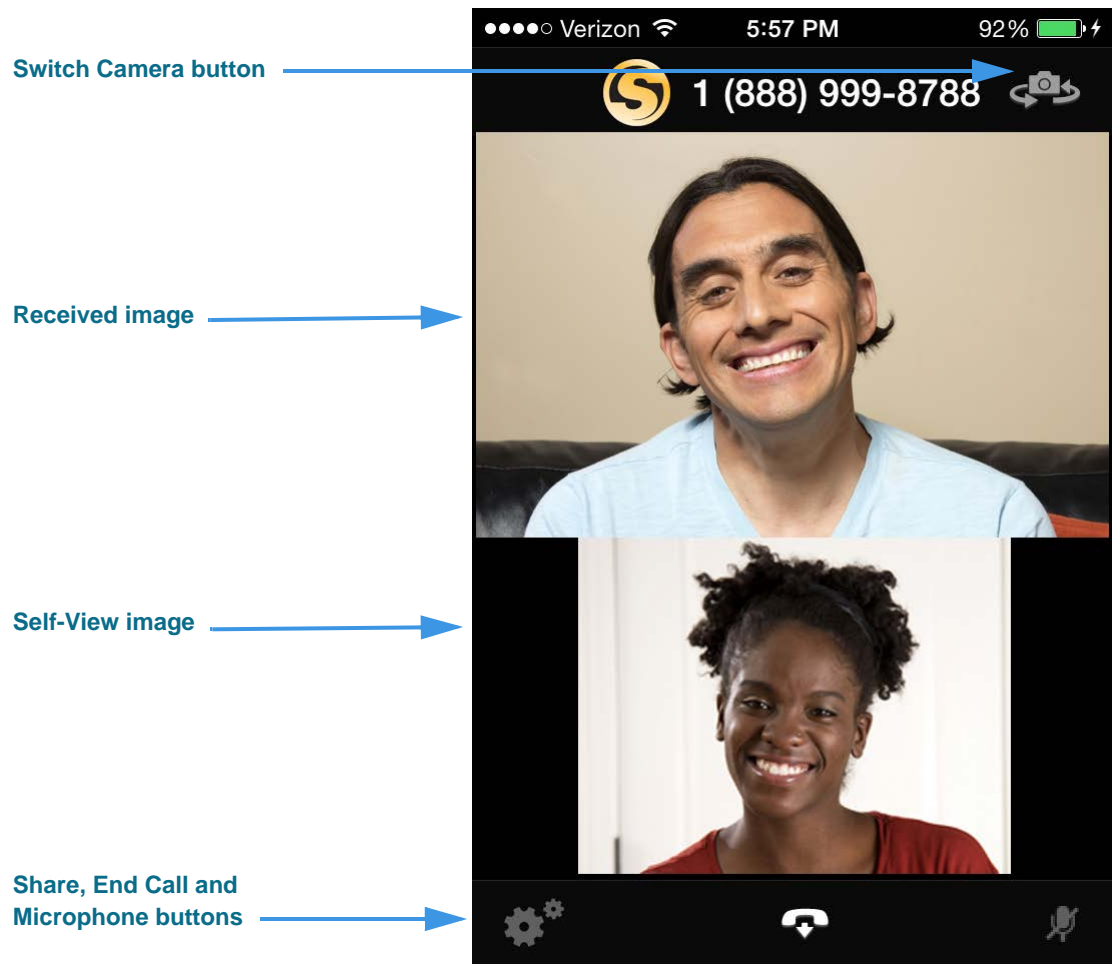


Figure 12 — In-Call screen

This In-Call screen shows the video image being *received* by the phone along with the smaller Self-View image. You may need to carefully position the device so that the other person can clearly see your video image.

The **End Call** button hangs up a call. If Audio is enabled at the *Settings* screen, you can use the **Microphone** button to turn on and off the audio signal sent with the video image. This feature is useful for 1-Line Voice Carry Over (VCO) calls. The **Switch Camera** button switches between the front and rear camera for the Self-View image.

The **Share** button lets you choose to share your location, a contact's name and number, or text as part of the Self-View video image. See **Page 21** for more information.

Step 6. When ready to hang up, tap the **End Call** button to end the call.

Make and Receive Calls

To Receive an Incoming Call

You can receive incoming videophone calls when the ntouch Mobile app is running in the foreground *or* in the background. If you force-quit the ntouch Mobile app, you cannot receive videophone calls until you launch the app again.

- Step 1. When you receive an incoming call while the ntouch Mobile app is running in the foreground, the screen will look like the image shown below.

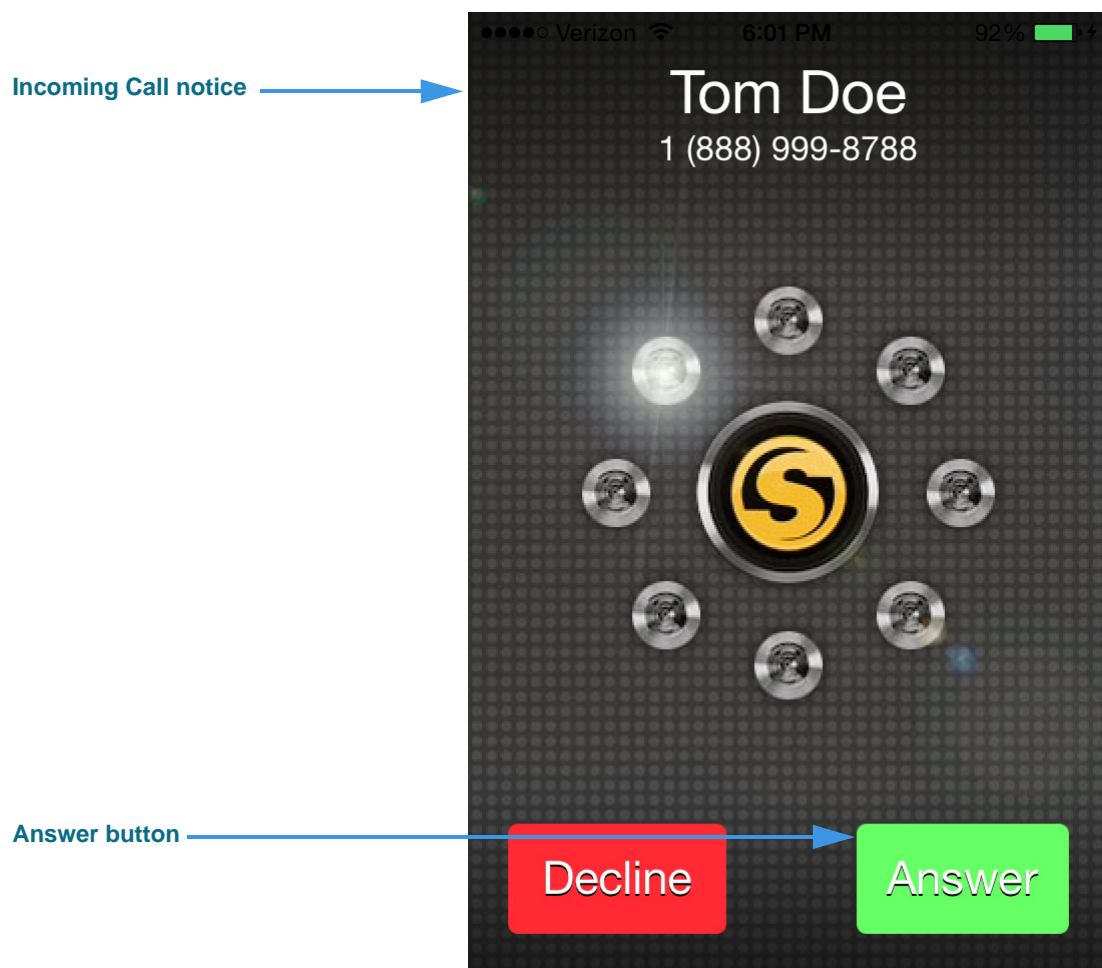


Figure 13 — Incoming Call screen

- Step 2. Tap the **Answer** button to answer the call.

Note: If you tap the **Decline** button, you will dismiss the Incoming Call screen. If the caller is another Sorenson user, he/she can leave you a SignMail video message.

- Step 3. If the incoming call was received while the ntouch Mobile app is running in the background, an Incoming Call message will appear as shown in the image below.

Incoming Call notification

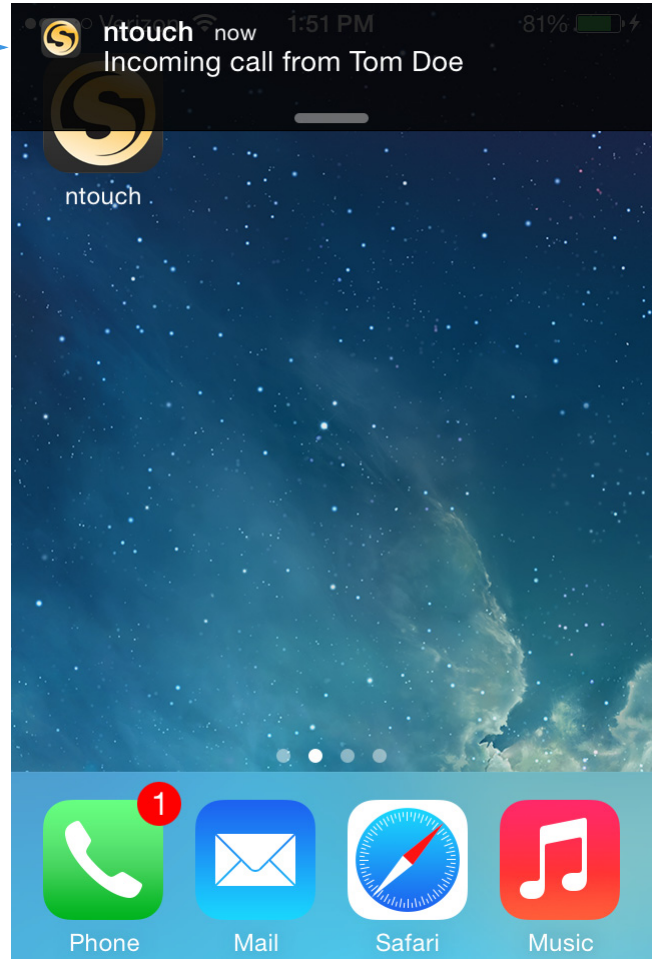


Figure 14 — Incoming Call message when app is in background

- Step 4. Tap the **Incoming Call** message to answer the call.
- Note:** If the device is locked, the Incoming Call message will appear in the middle of the screen. Just unlock the device to answer the call.
- Note:** You can choose the Alert Style used for ntouch Mobile's notifications at the iPhone's Settings screen. See Apple's iOS documentation for more information.
- Step 5. As the call is being connected, you will briefly see a "Connecting" message.

To Transfer a Call

You can transfer an active call with one Sorenson endpoint to another Sorenson endpoint or to a hearing phone number. You can also transfer an active call to a member of your myPhone Group (if you have one), to a contact's phone number, to a phone number in your Call History list, or you can enter a phone number to dial.

The Call Transfer feature is subject to these **restrictions**:

- Calls must be between Sorenson endpoints (i.e., use the SIP protocol).
- The Call Transfer feature must be enabled for both users' endpoints.
- Active calls to a Sorenson Hold server cannot be transferred to another number.
- Active calls to Sorenson Technical Support, CIR, or the Field Help Desk cannot be transferred to another number.
- Active calls to Sorenson VRS (i.e., when an interpreter is connected to the call) cannot be transferred to another number.

Step 1. Tap the **Share** button in the In-Call window as shown below.

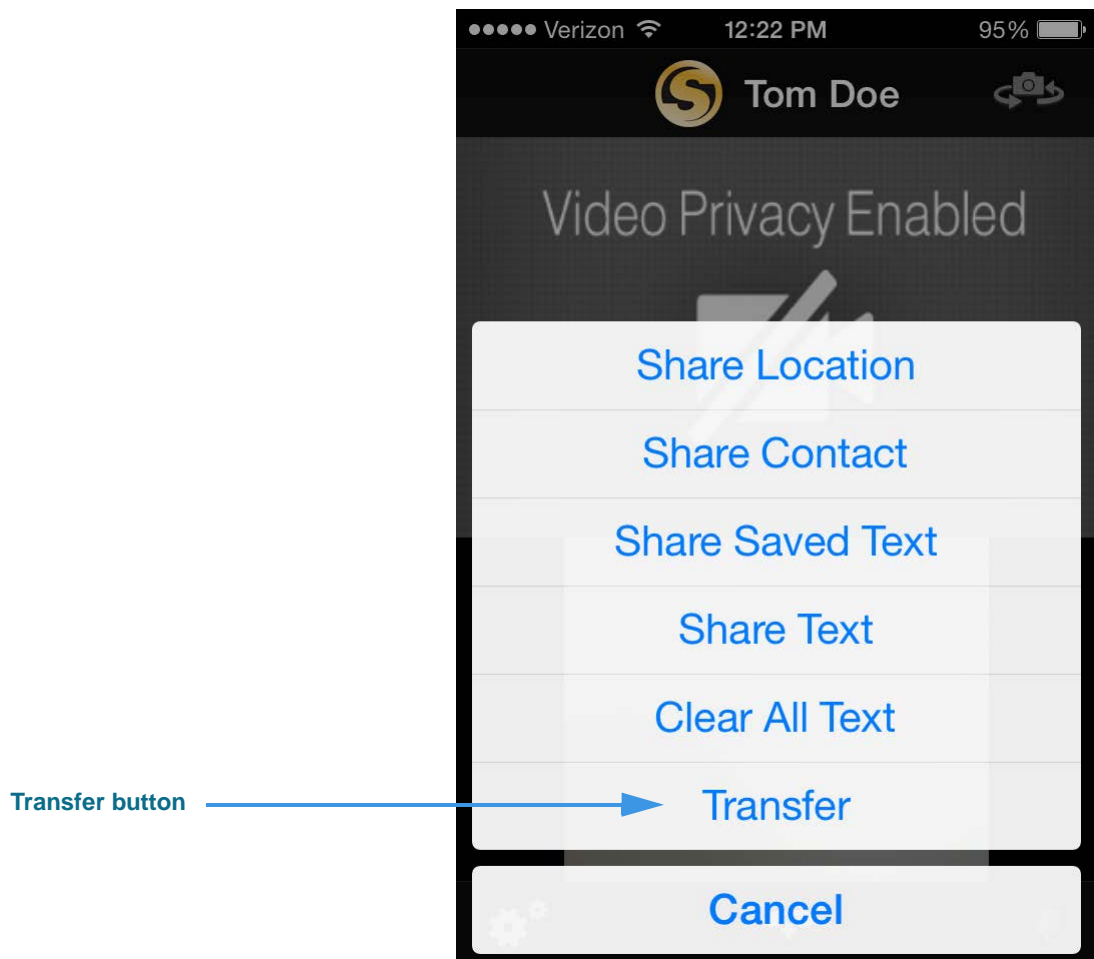


Figure 15 — Transfer button in window

Notice the **Transfer** button at the bottom of the Share pop-up menu.

Step 2. Tap the **Transfer** button to display the dialog shown below.

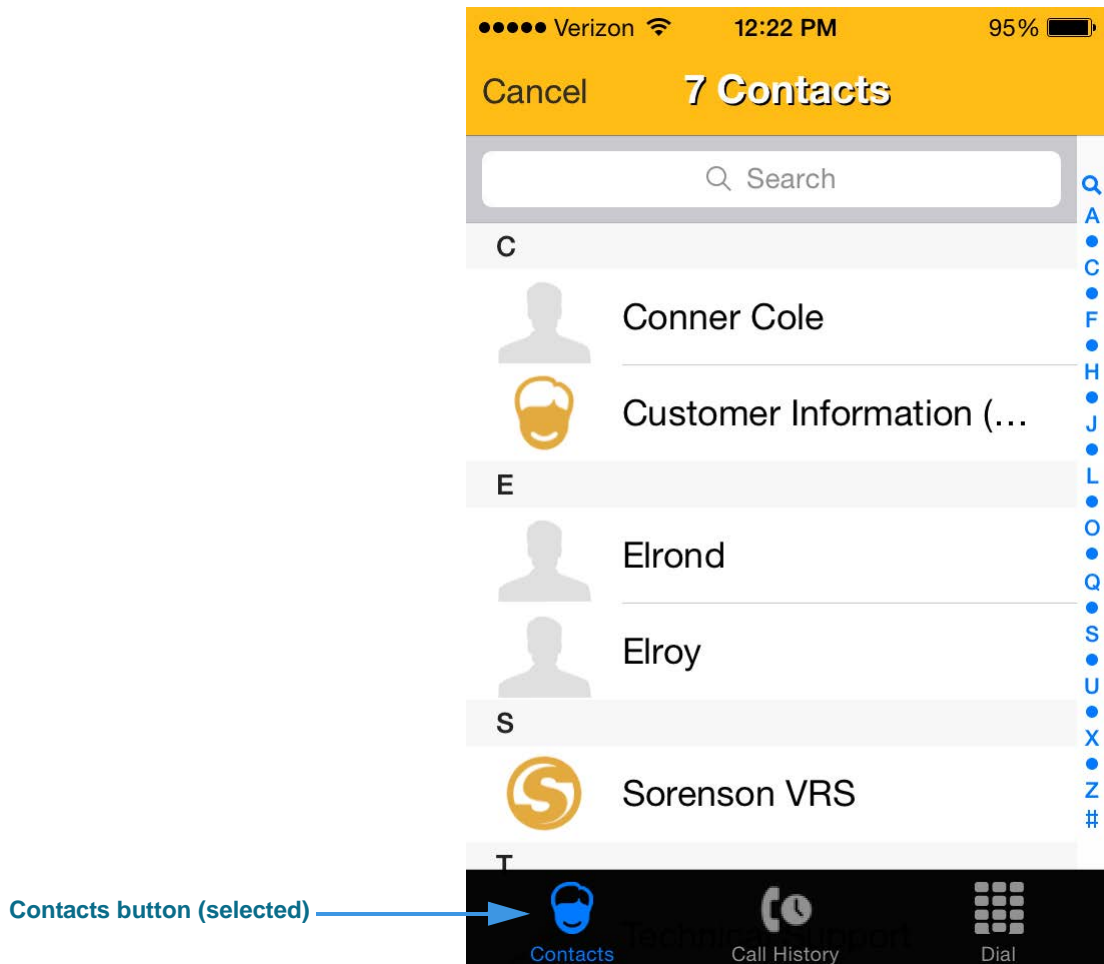


Figure 16 — *Transfer Call* dialog, Contacts option

Notice that this dialog contains three option buttons:

- Select **Contacts** to choose a contact to which you want to transfer the call. This option is selected by default when you first open the dialog.
- Select **Call History** to choose a recent caller to which you want to transfer the call.
- Select **Dial** to enter a phone number to dial and transfer the call.

Step 3. To transfer the active call to a number in your Phonebook's Contact list, first select a contact from the list. If the contact has more than one number stored, you must then select the number you want to use. The call will then be transferred.

Make and Receive Calls

- Step 4. To transfer the active call to a number in your Call History lists, first tap the **Call History** button to display the dialog shown below.

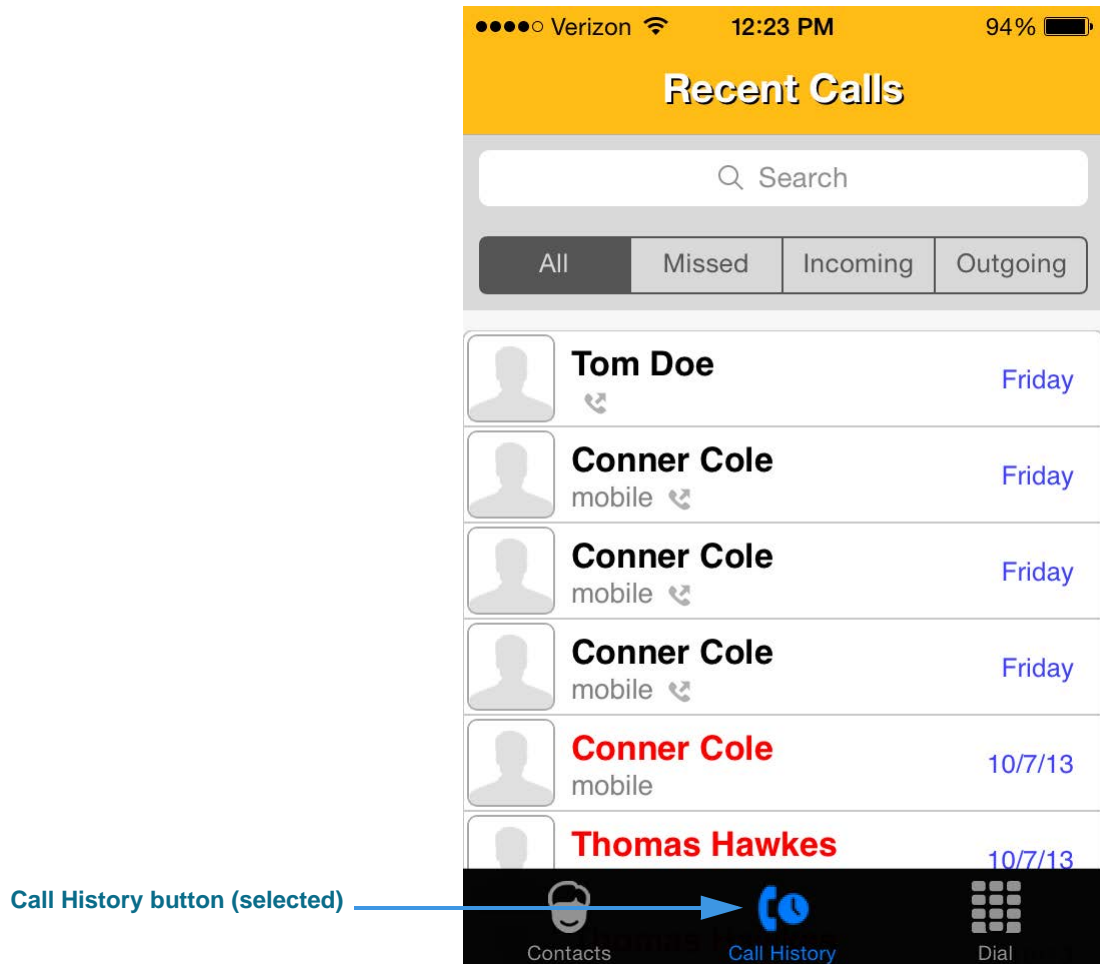


Figure 17 — *Transfer Call* dialog, Call History option

- Step 5. To transfer the active call to a number in your Call History, first select a list (All, Missed, Received, Dialed). Then select a contact from the list. The call will then be transferred.

- Step 6. To transfer the active call to a phone number you enter, first tap the **Dial Number** button to display the dialog shown below.

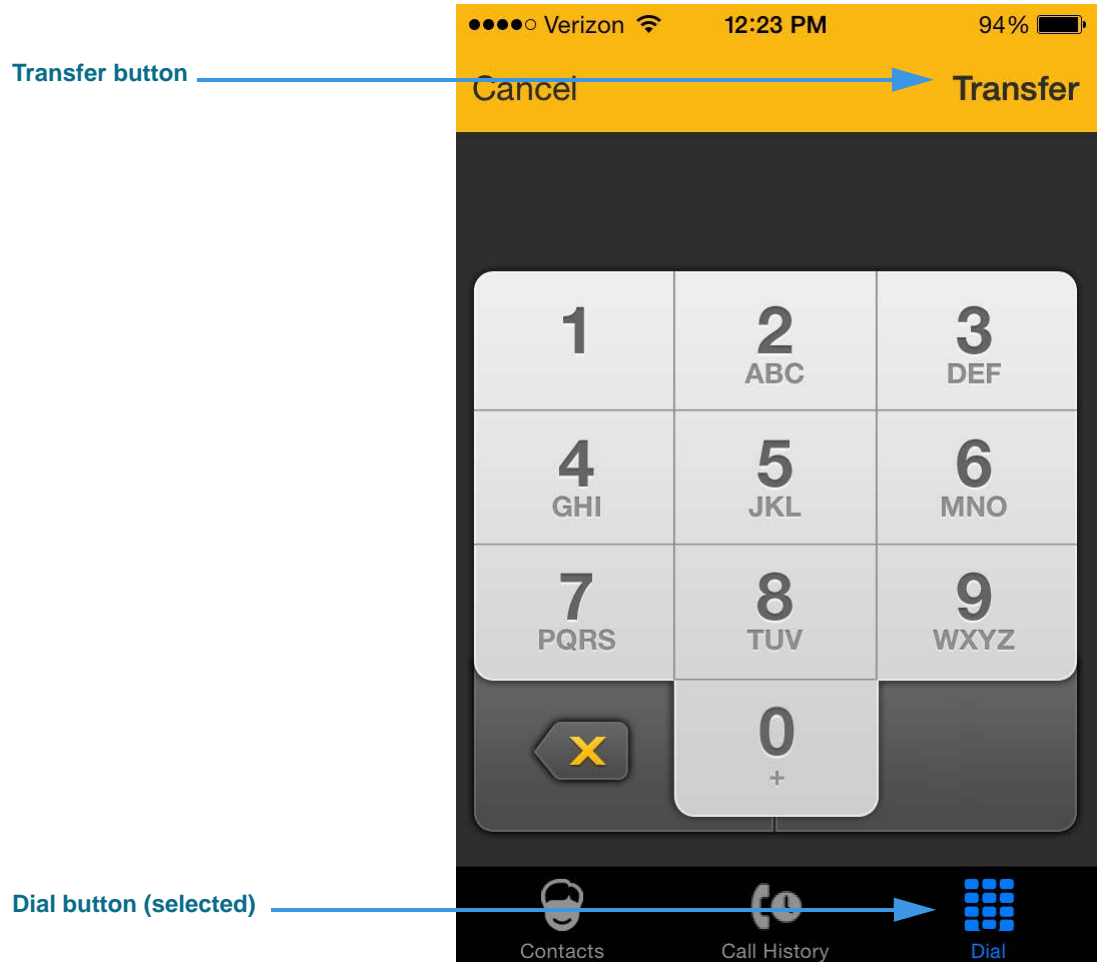


Figure 18 — *Transfer Call* dialog, Dial number option

- Step 7. Use the dial pad buttons to enter the number you want to dial.
- Step 8. Select the **Transfer** button to transfer the call to the specified number.

Share Text, Contacts and Location

ntouch Mobile's Share feature lets you share your location, the phone numbers of your contacts and any text with another Sorenson videophone user. You can use the Share options during a call, when recording a Deaf SignMail video, or when calling hearing numbers because the Sorenson interpreter can see the text or contacts that you share.

You can also share text messages during a call which you have saved before the call begins. The Saved Text function lets you save up to 5 short text messages to use during calls.

ntouch Mobile also includes the popular Share Location feature which lets you find and share your approximate current address location during calls.

To Add Saved Text Messages

Step 1. Tap the **More** button to open the screen shown below.

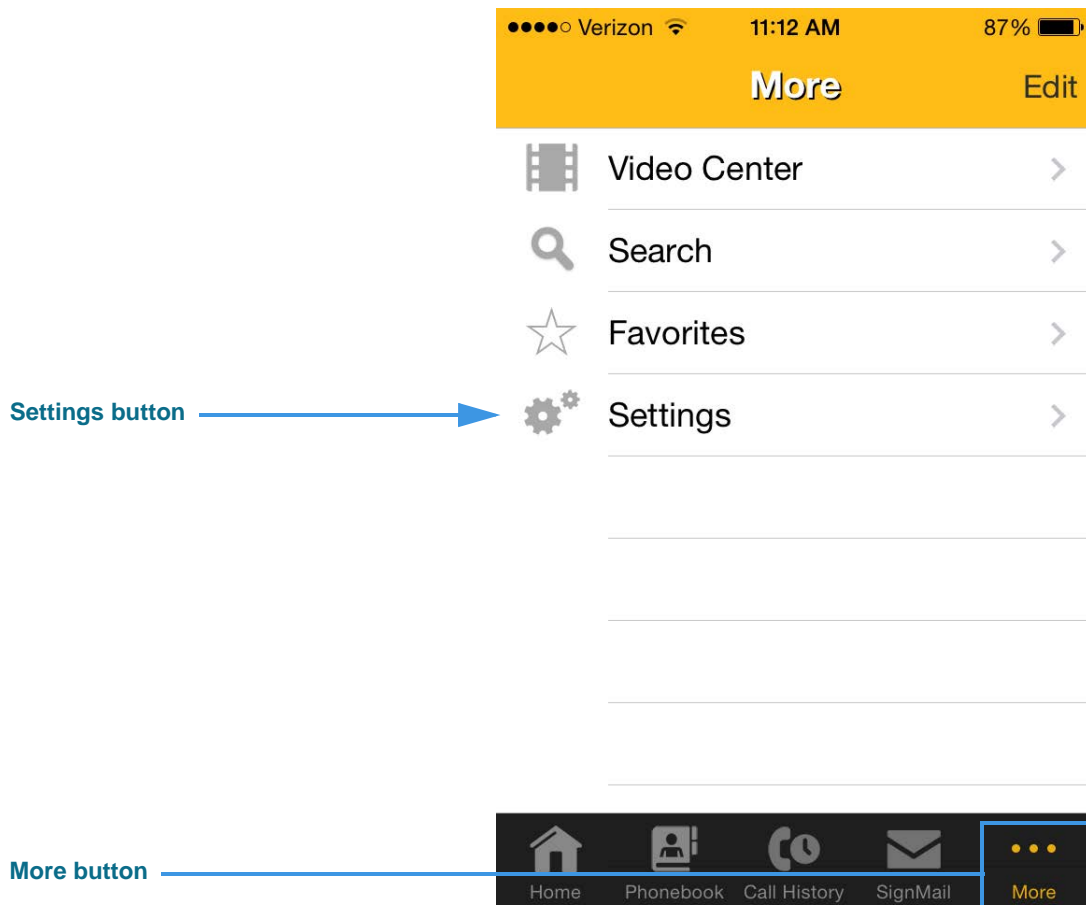


Figure 19 — Settings button on *More* screen

Step 2. Tap the **Settings** button to display the screen shown below.

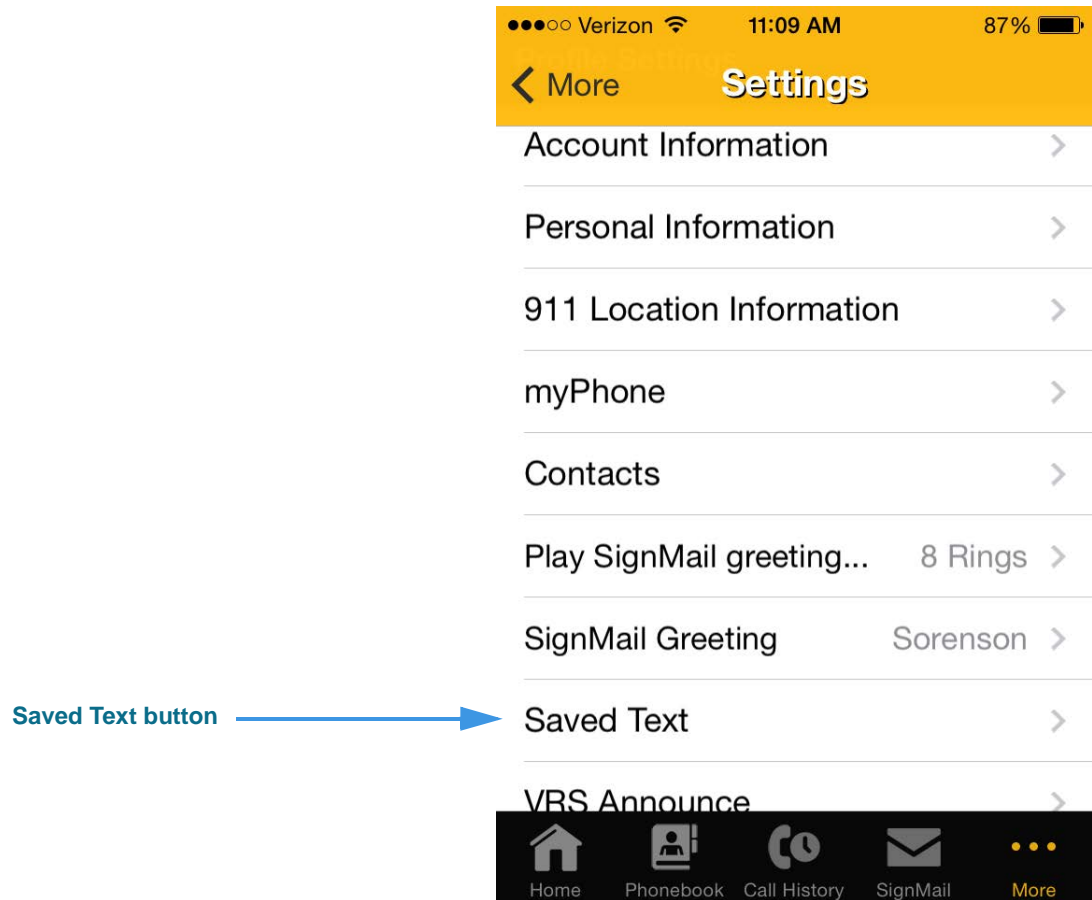


Figure 20 — Saved Text button on *Settings* screen

Share Text, Contacts and Location

Step 3. Tap the **Saved Text** button to display the screen shown below.

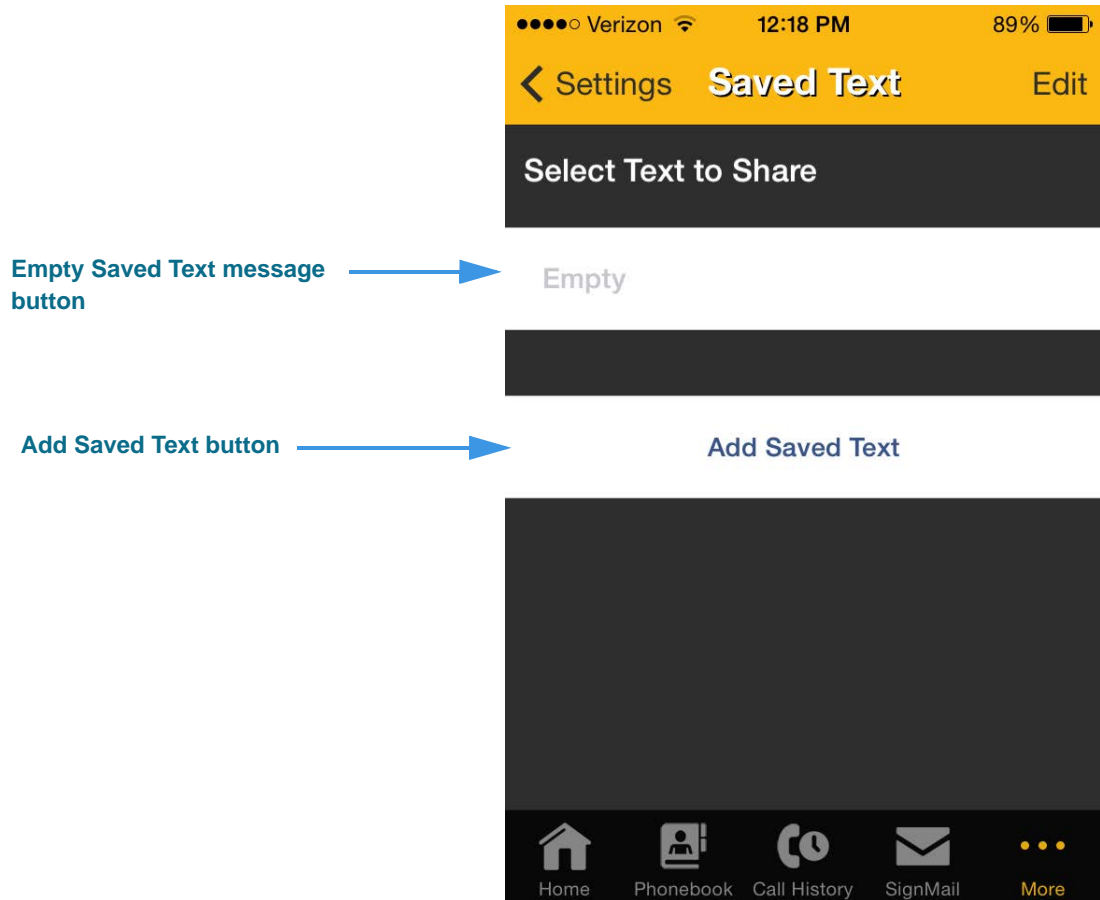


Figure 21 — *Saved Text* screen

There should already be at least one “Empty” Saved Text message on this screen. If not, select the **Add Saved Text** button to add an empty message button.

Step 4. Tap the **Empty** button at the top of the Select Text to Share list as shown below.

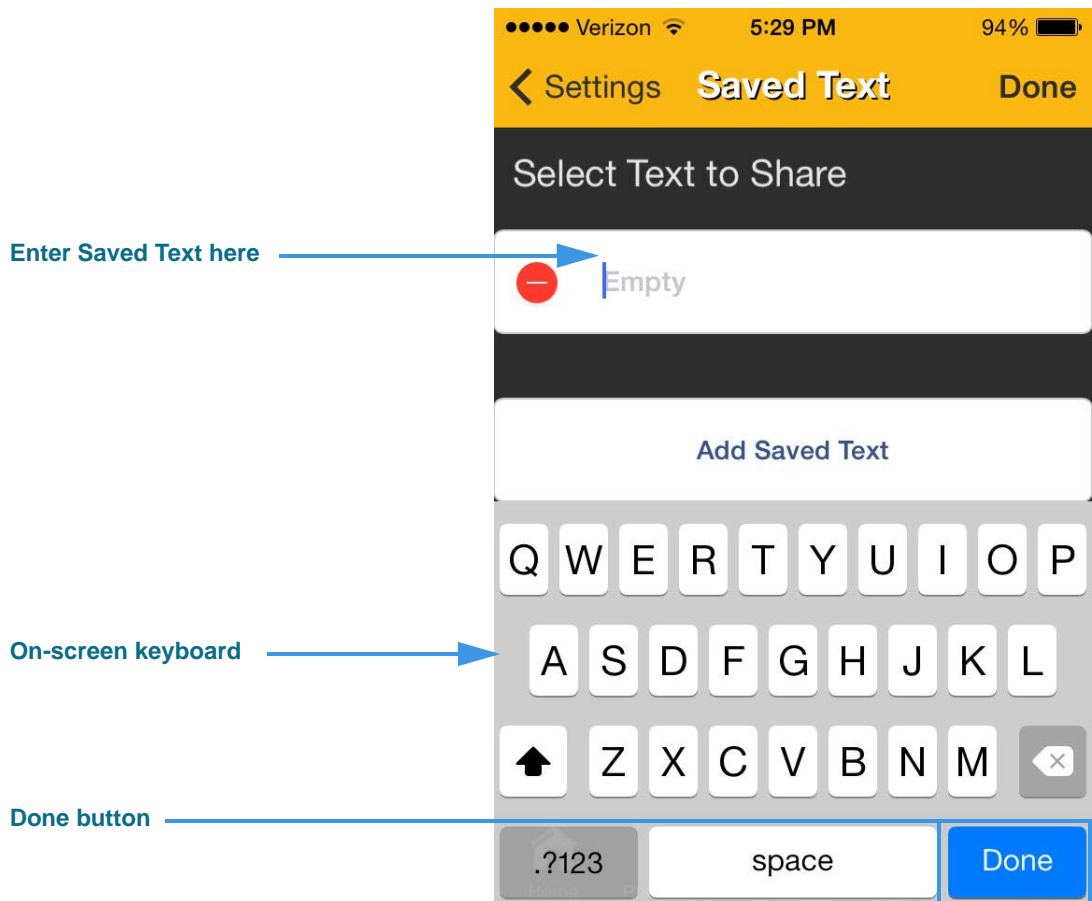


Figure 22 — On-screen keyboard on *Saved Text* screen

Notice that an on-screen keyboard has appeared over the screen. Also notice the **Done** button on the keyboard which is used to close the keyboard.

Step 5. You can now use the device's on-screen keyboard to enter the text to want to save in the text entry field. For example, if you want to save your address as a saved text message, you could start by entering some text such as, "My new address is..."

Share Text, Contacts and Location

- Step 6. Tap the keyboard's **Done** button when finished entering text to display the screen shown below.

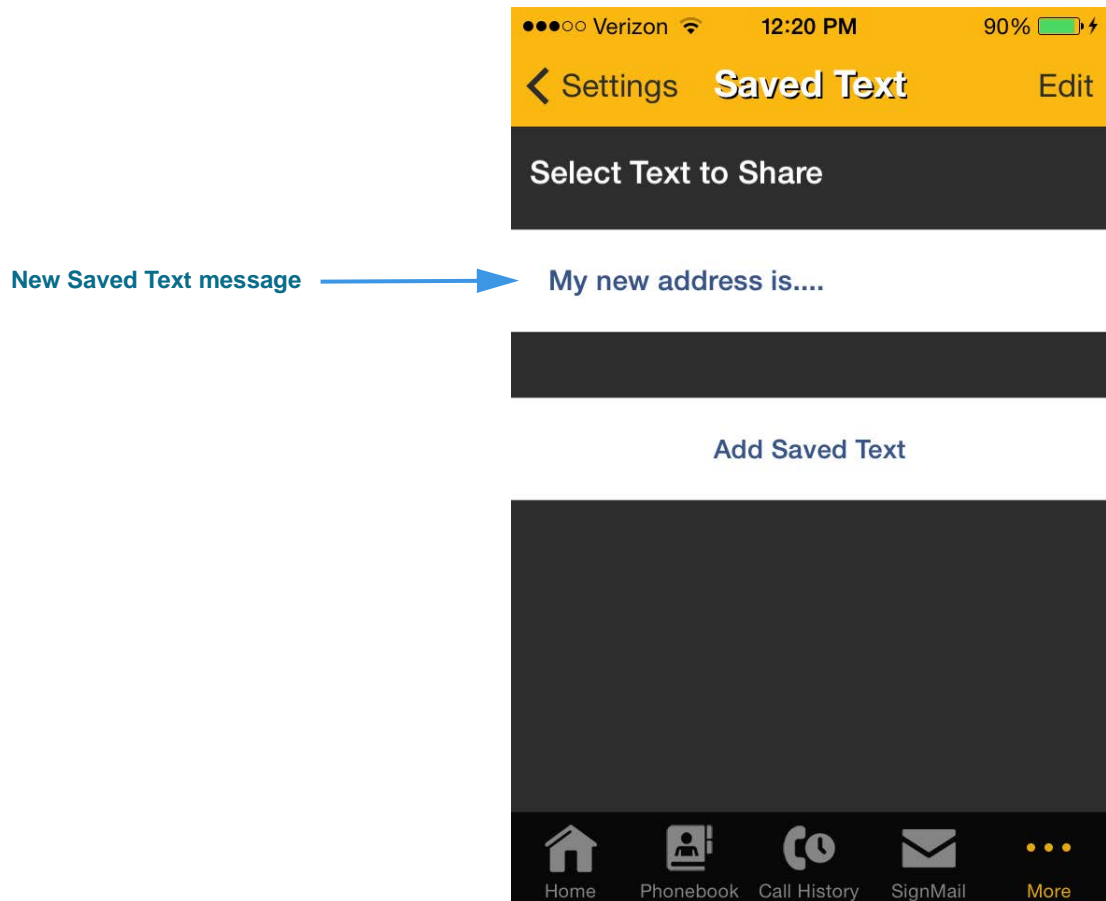


Figure 23 — New Saved Text message on *Saved Text* screen

Notice that the text you entered has been added as a new Saved Text message at the top of the screen.

- Step 7. You can repeat the above steps to enter up to ten (10) Saved Text messages.
- Step 8. Tap the **Settings** button to save the messages and return to the Settings screen.

To Use Saved Text During Calls

After you have created one or more Saved Text messages, you can use this feature during any active videophone call with another Sorenson user or SVRS interpreter.

Step 1. Dial a call so that the Call screen is open as shown below.

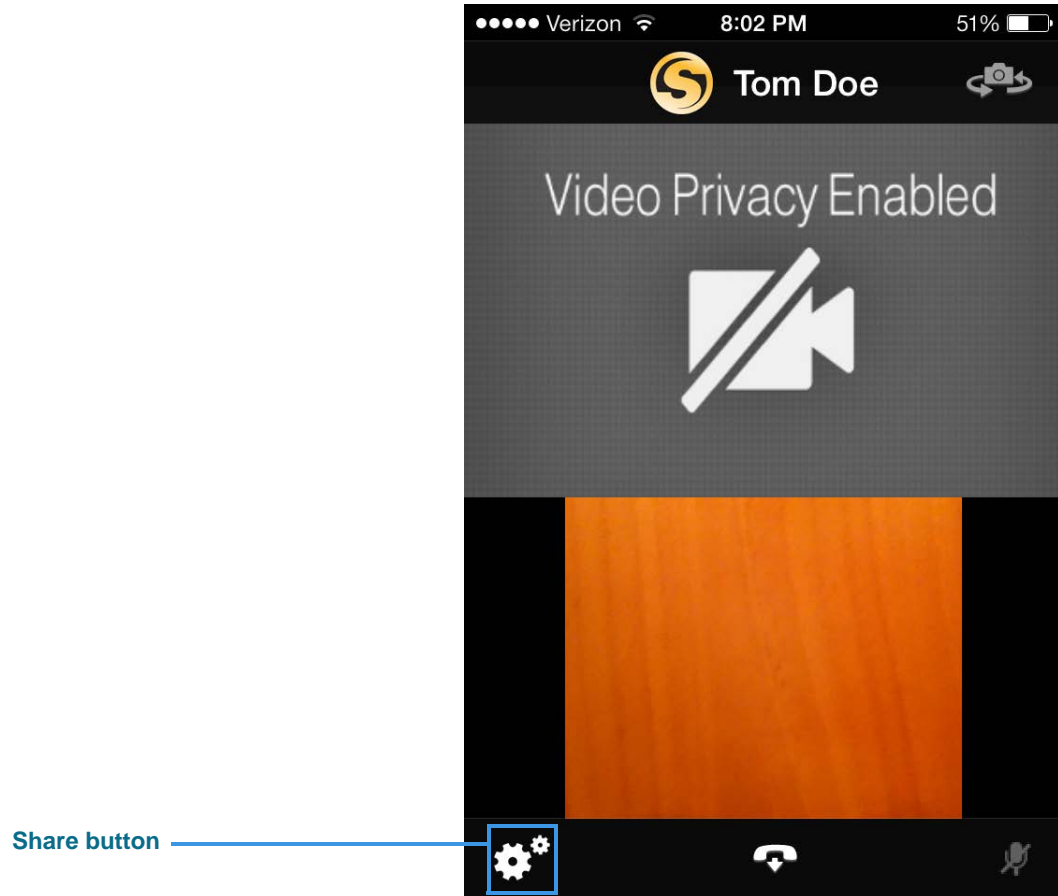


Figure 24 — Share button on Call screen

Notice the **Share** button at the bottom-left of the screen. By selecting the Share button during a call, you can choose to share text with the person you called (or with the Sorenson interpreter).

Share Text, Contacts and Location

Step 2. Tap the **Share** button to open the pop-up menu shown below.

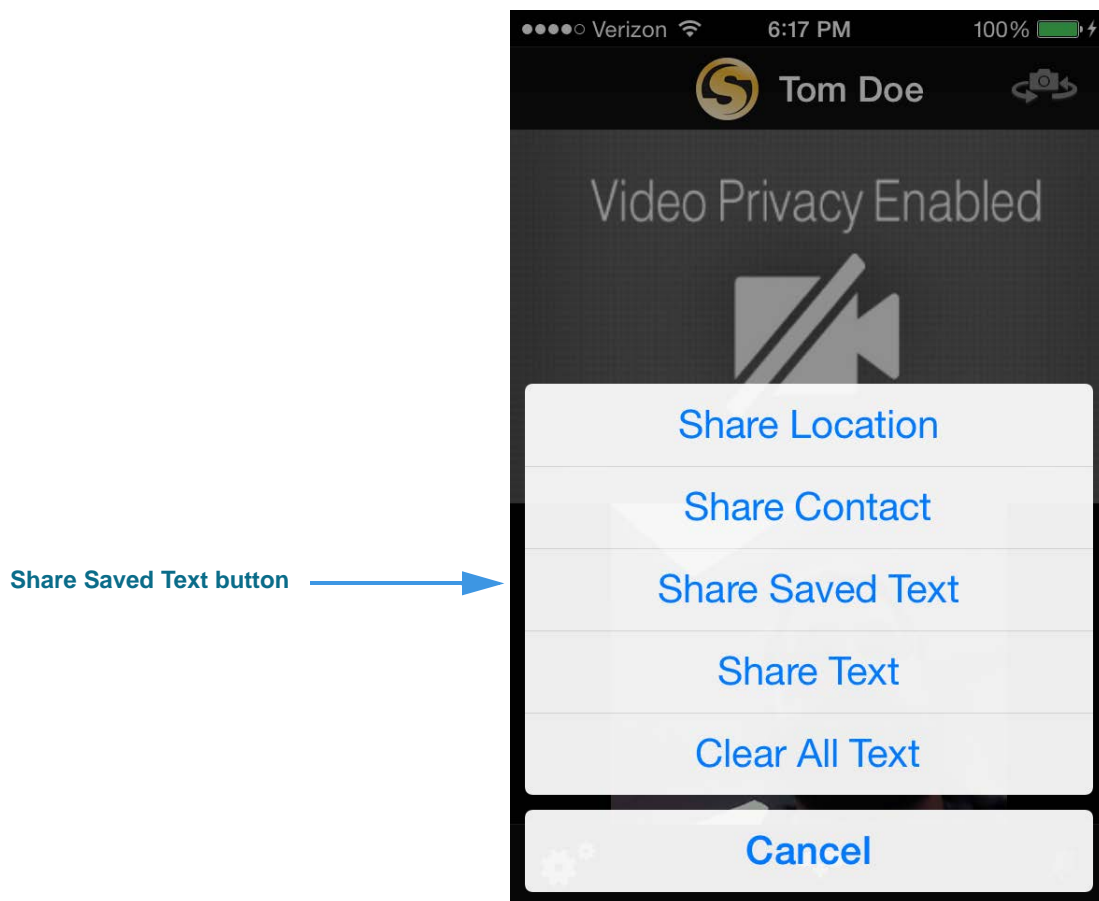


Figure 25 — Share Saved Text button in Share pop-up menu

Selecting the **Share** button has opened a pop-up menu containing these options:

- Select the **Share Location** button to share your current location with the caller.
- Select the **Share Contact** button to select to share information about one of your contacts with the caller.
- Select the **Share Saved Text** button to enter text to select one of your Saved Text messages, if you have entered any, with the caller.
- Select the **Share Text** button to enter some text to share with the caller.

Note: If you select the **Share Text** button, you will go directly to the screen shown in **Figure 27** where you can enter the text you want to share with the caller.

- Select the **Clear All Text** button to clear (erase) the text that you have already shared with a caller.
- Select **Cancel** to exit the menu without selecting a function.

Step 3. Tap the **Share Saved Text** button to open the screen shown below.

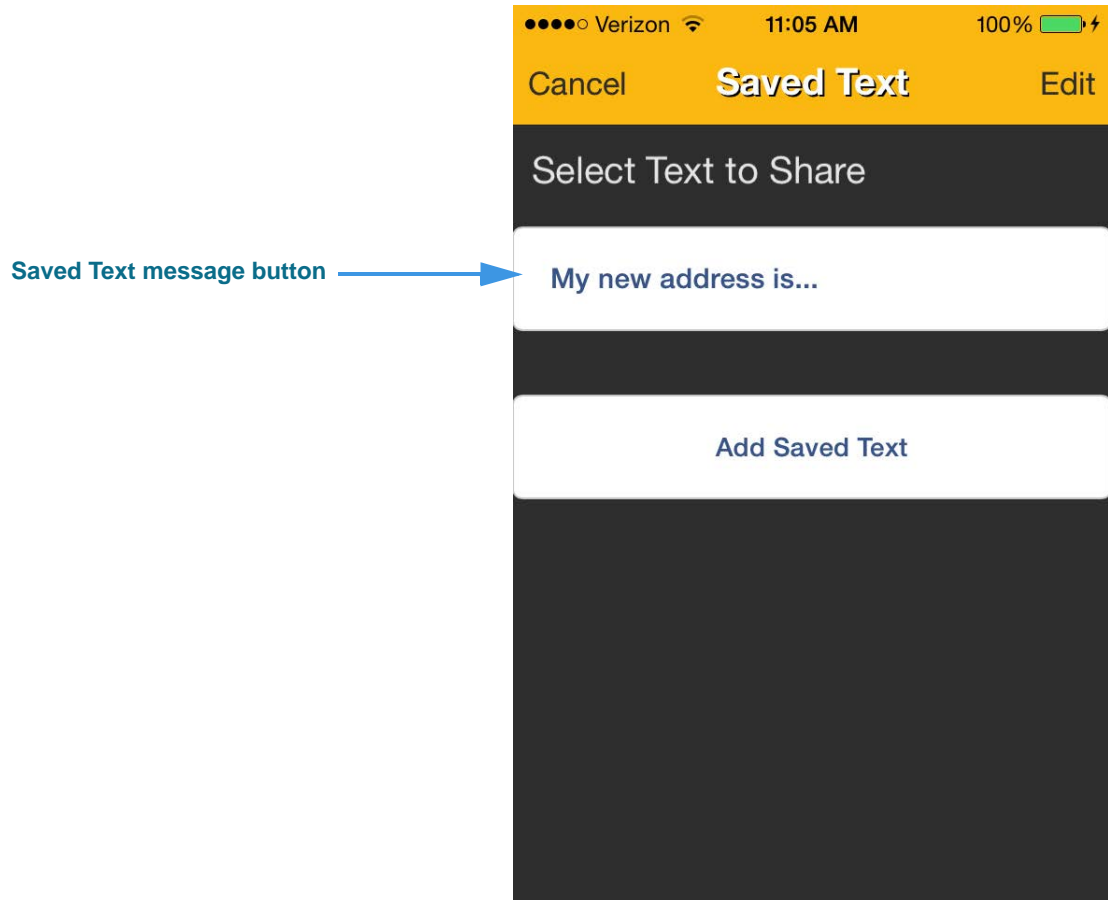


Figure 26 — Saved Text screen during active call

Notice that the Saved Text screen has appeared. You can now select any one of the Saved Text messages show on the screen (in this example, there is just one saved message). You can also use the **Edit** button to add more saved messages during the active call.

Share Text, Contacts and Location

Step 4. Tap one of the **Saved Text messages** to open the screen shown below.

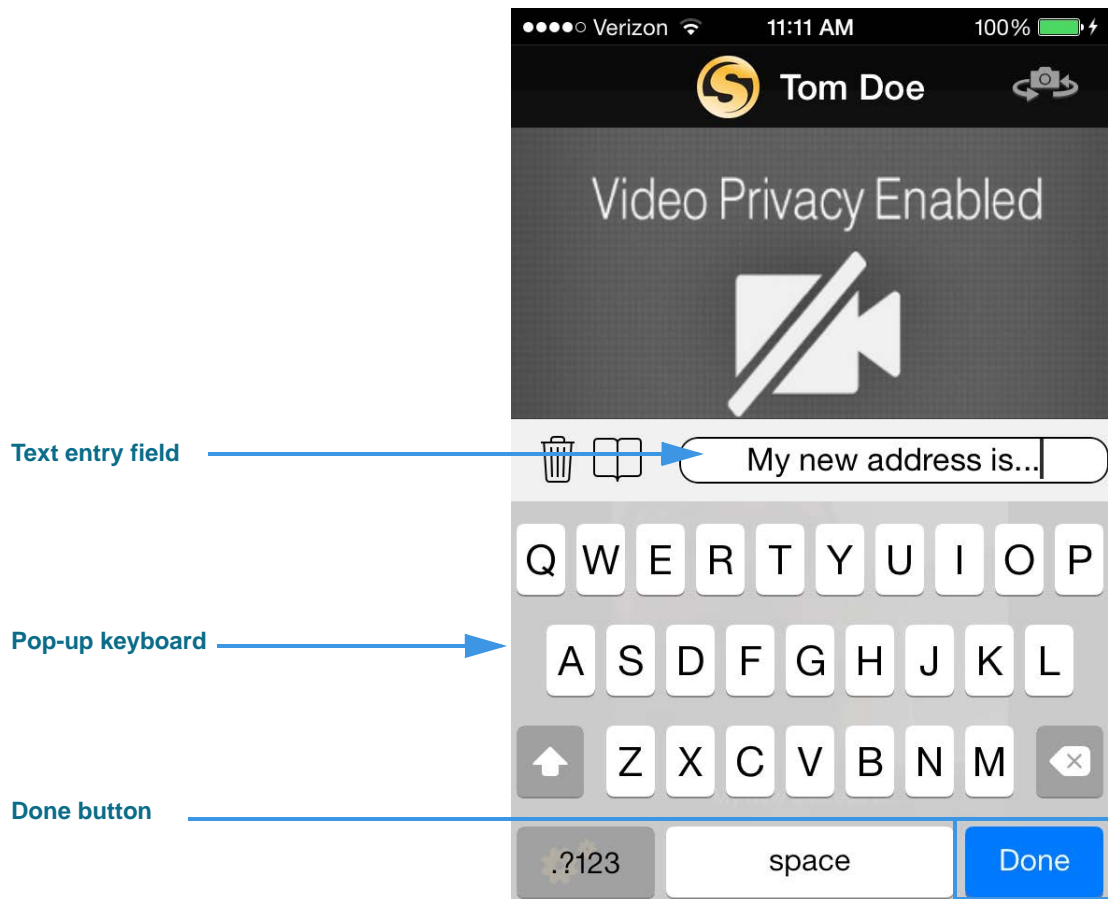


Figure 27 — Pop-up keyboard for text messages during a call

Notice that the selected Saved Text message has appeared in the text entry field of the pop-up keyboard panel. You can now edit the text if you like, or simply select the **Done** button to share the text that is in the text entry field with the caller.

Note: If you had selected the **Share Text** button on the screen in **Figure 25**, you would have come directly to this keyboard screen. From here, the process of entering text is the same described below.

Step 5. If desired, use the keyboard to edit (or enter) **the text** to you want to share.

- Step 6. Tap the **Done** button to share the entered text with the caller as shown in the example screen below.

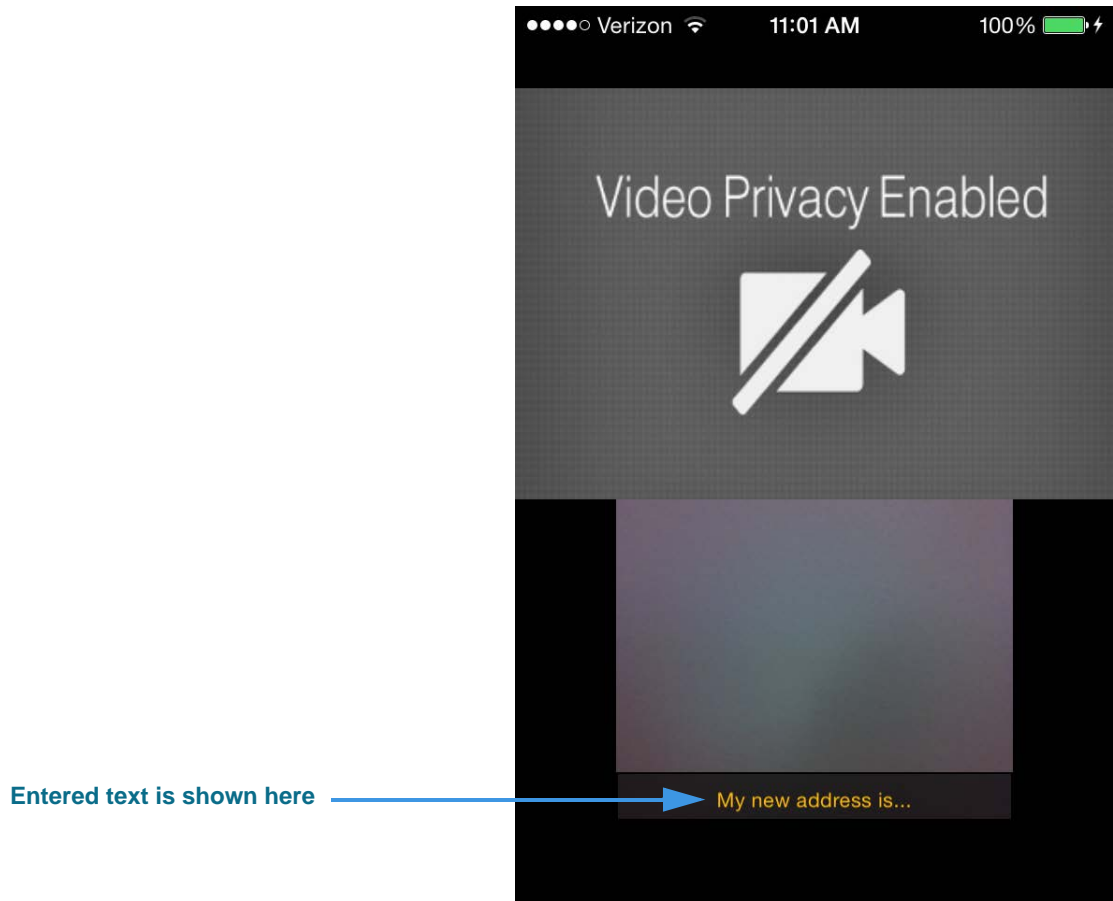


Figure 28 — Text shown on Self-View image area

Notice that the text you entered is displayed in the Self-View image area near the bottom of the screen to show you what the other Sorenson user will see.

To Share a Contact During Calls

- Step 1. Start with the Share pop-up menu open at any active call screen or at the SignMail recording screen as shown below.

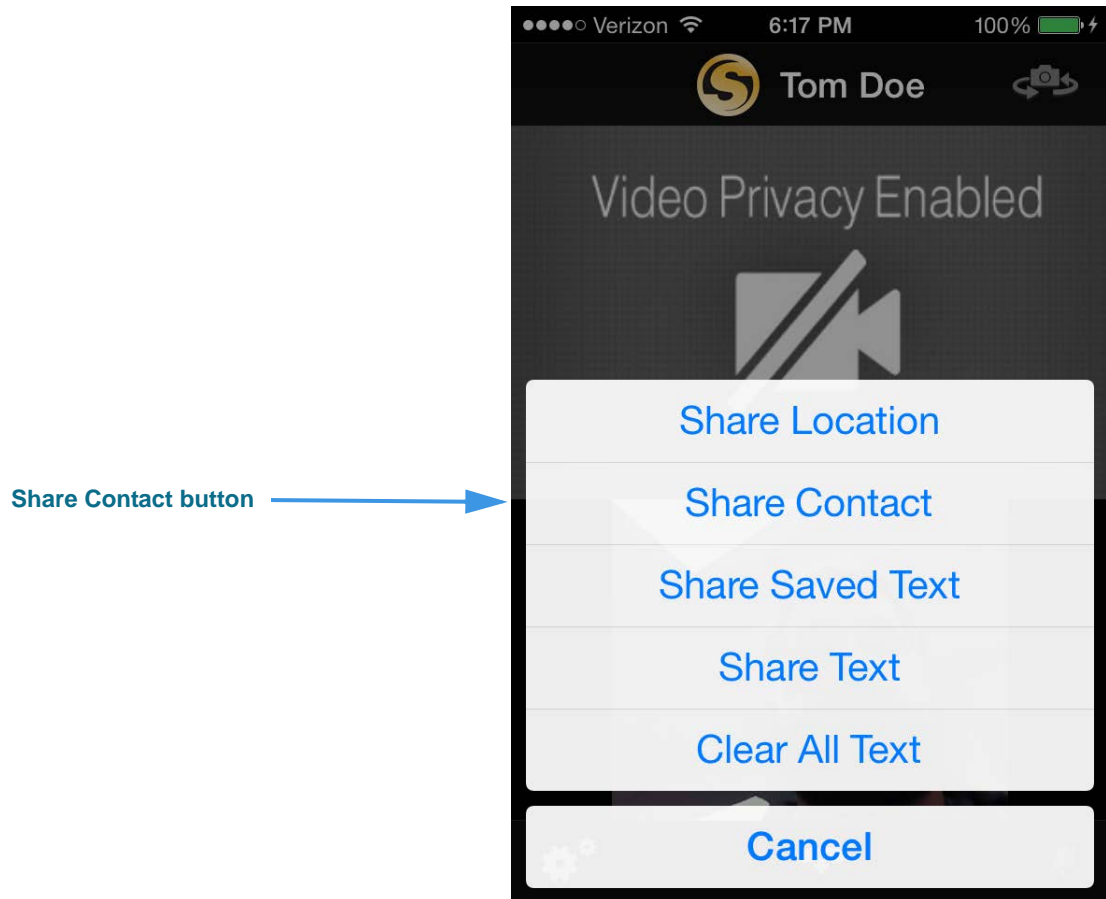


Figure 29 — Share Contact button in Share pop-up menu

Step 2. Tap the **Share Contact** button to display the screen shown below.


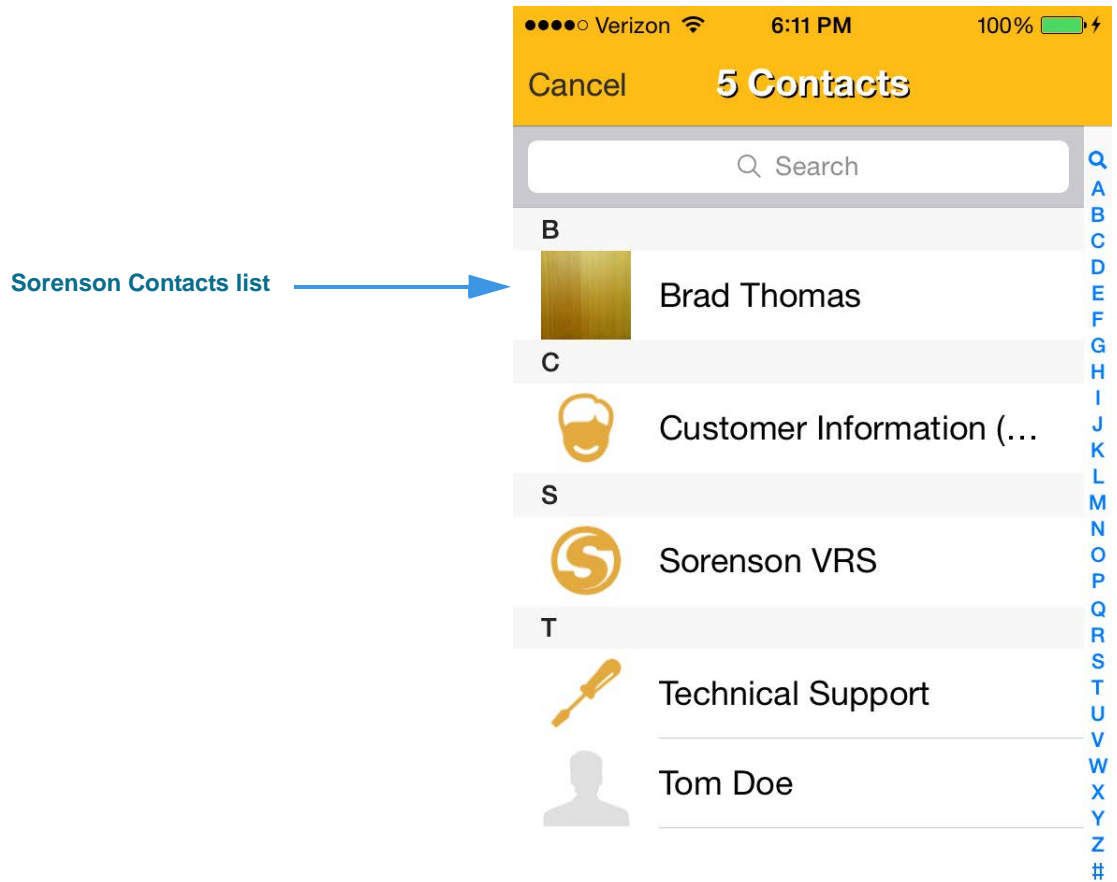


Figure 30 — Sorenson Contacts list screen

Notice that the Sorenson Contacts list has appeared over the call screen. You can use this list to find the contact that you want to share with the other Sorenson user.

Share Text, Contacts and Location

- Step 3. Tap **the contact** that you want to share to display a screen similar to the example shown below.

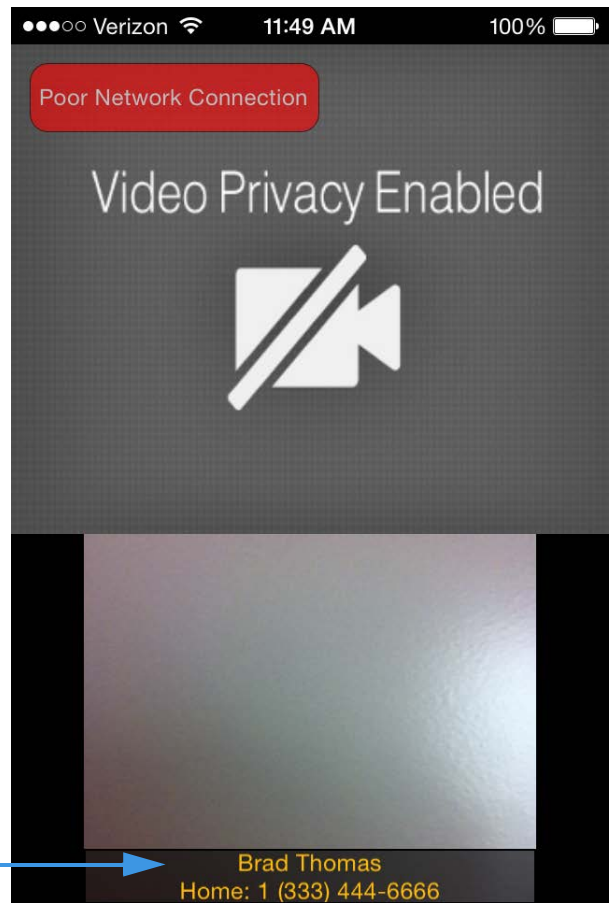

Contact's info is shown here

Figure 31 — Contact information shown on screen

Notice that the name and phone number(s) of the contact you selected are displayed in the Self-View image area near the bottom of the screen to show you what the other Sorenson user will see. All phone numbers stored for the contact will be shown.

To Share Your Location During a Call

Step 1. Start with the Share pop-up menu open at any active call screen or at the SignMail recording screen as shown below.

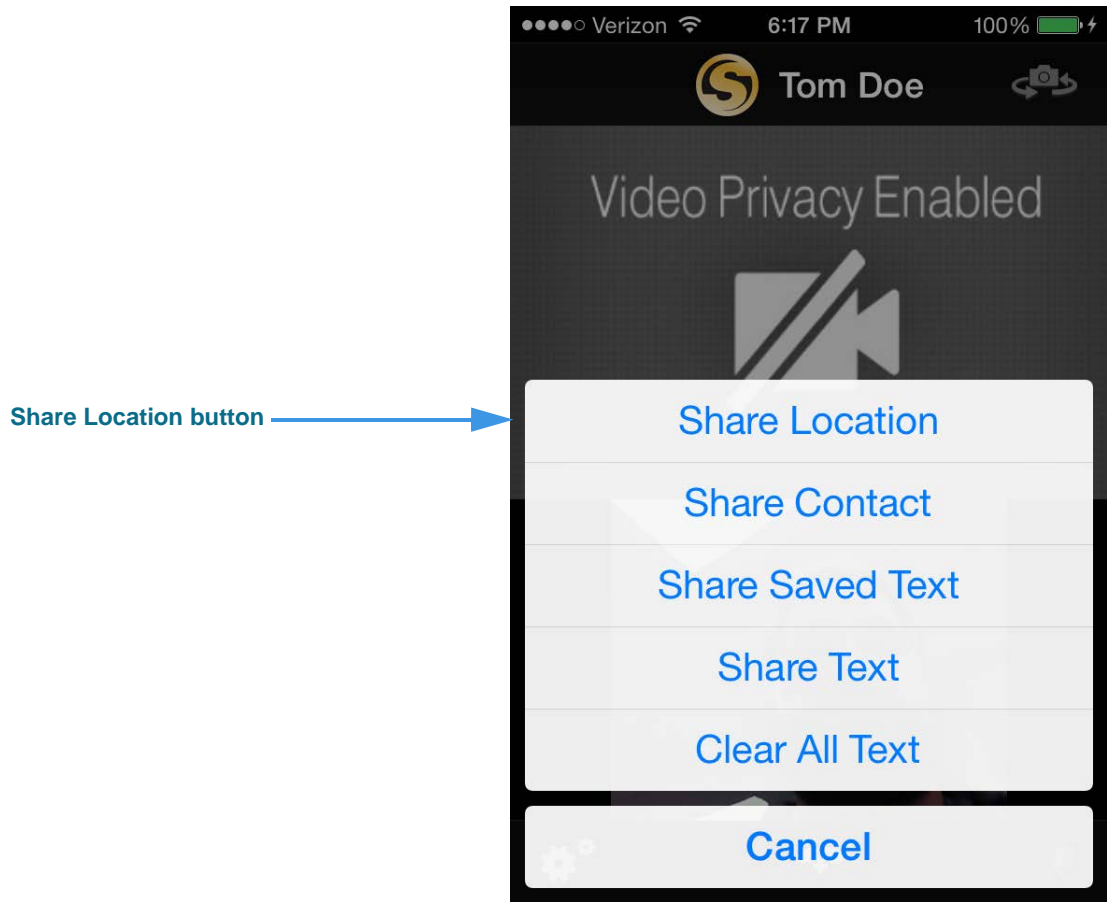


Figure 32 — Share Location button in Share pop-up menu

Share Text, Contacts and Location

Step 2. Tap the [Share Location](#) button to display the screen shown below.

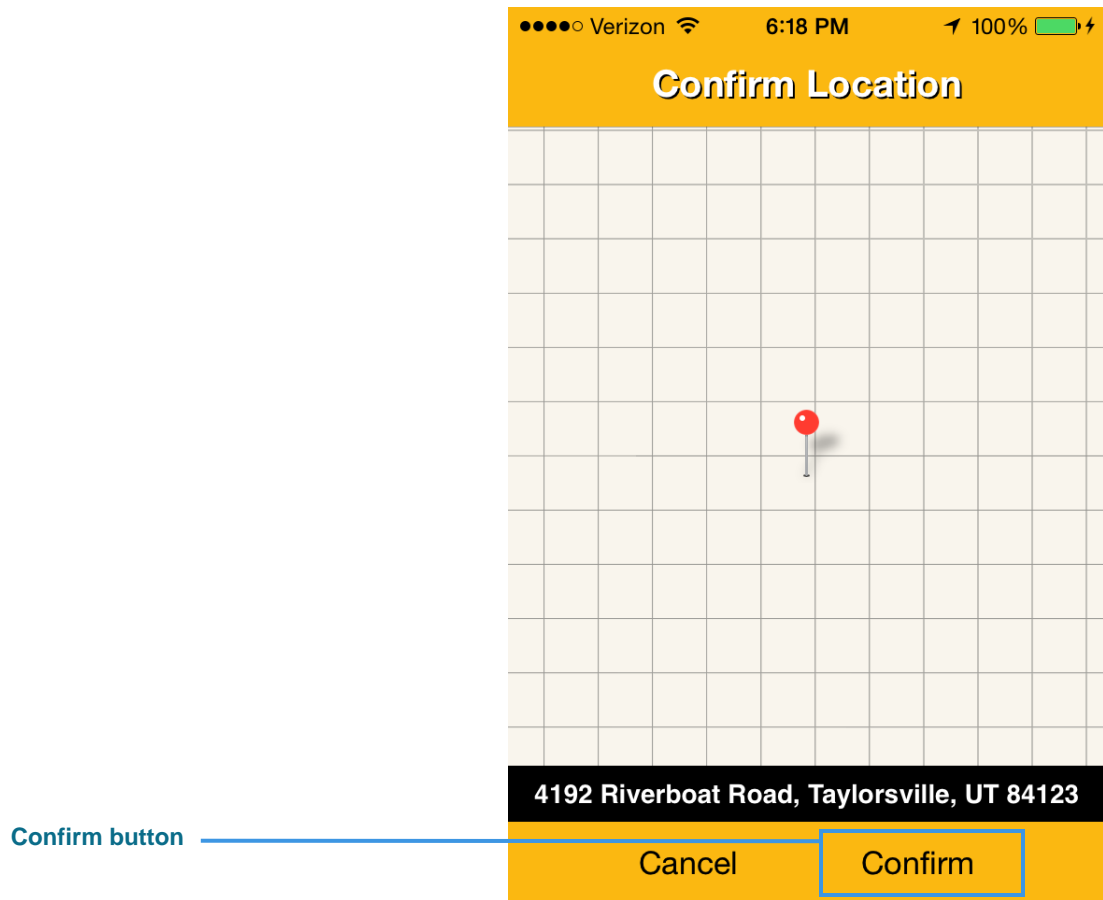


Figure 33 — Confirm detected location screen

Notice that this screen shows your approximate location on a map and the closest known address.

Note: *The first time you use the Share Location feature, you may see a dialog which asks if you want to allow the ntouch app to use your current location. You must allow this operation and you must have Location Services enabled on your device.*

- Step 3. Tap the **Confirm** button if the location shown on the map is correct. You will then see a screen similar to the example shown below.

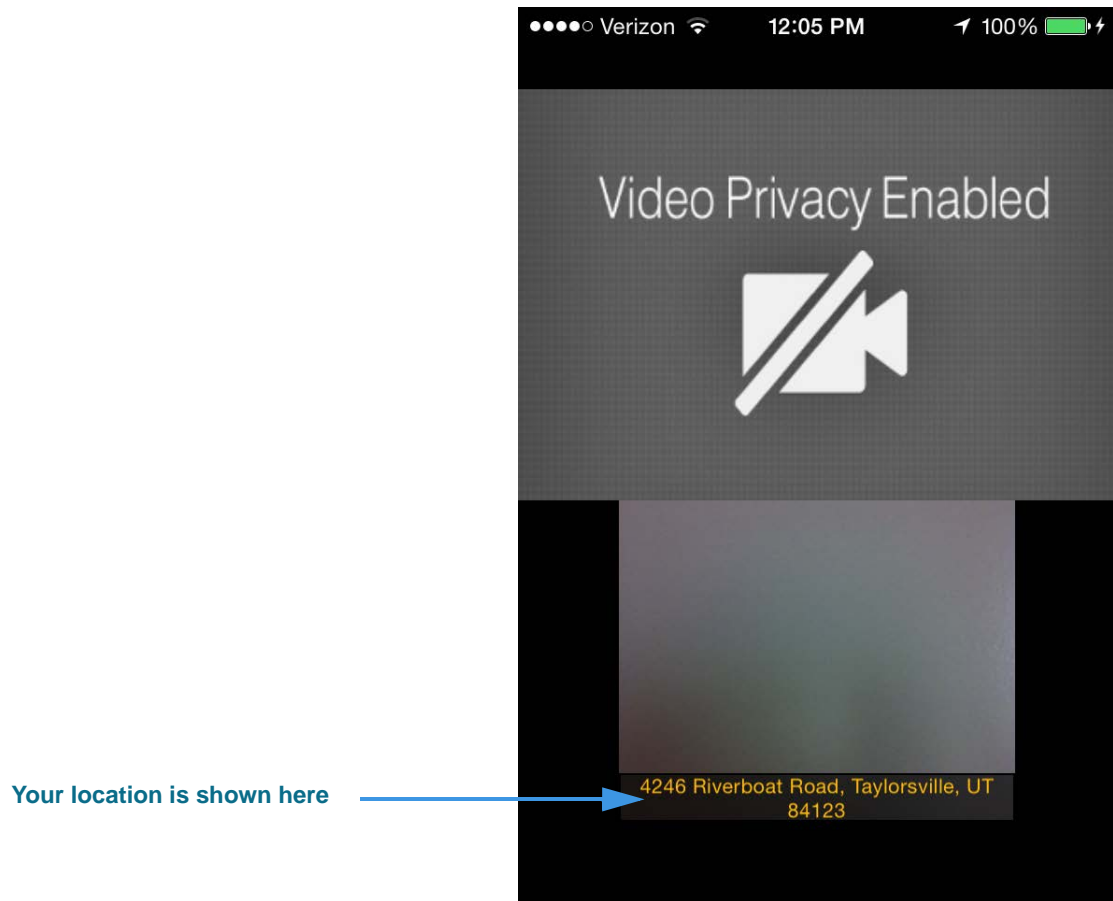


Figure 34 — Location information shown on screen

Notice that your location as reported by the device's Location Services is displayed in the Self-View image area near the bottom of the screen to show you what the other Sorenson user will see.

Use Voice Carry Over (VCO)

ntouch Mobile's 1-Line Voice Carry Over (VCO) calling feature lets you make SVRS VCO calls using just your iOS device. You do not need a separate voice telephone to make 1-Line VCO calls using ntouch Mobile for iOS.

To set up the 1-Line VCO feature, you will have to know how to open the *Settings* screen from the *More* screen. See **Page 110** for instructions.

To Set Up 1-Line VCO

- Step 1. Tap the **More** button.
- Step 2. Tap the **Settings** button to open the Settings screen shown below. You will have to scroll down the screen to see the 1-Line VCO control.

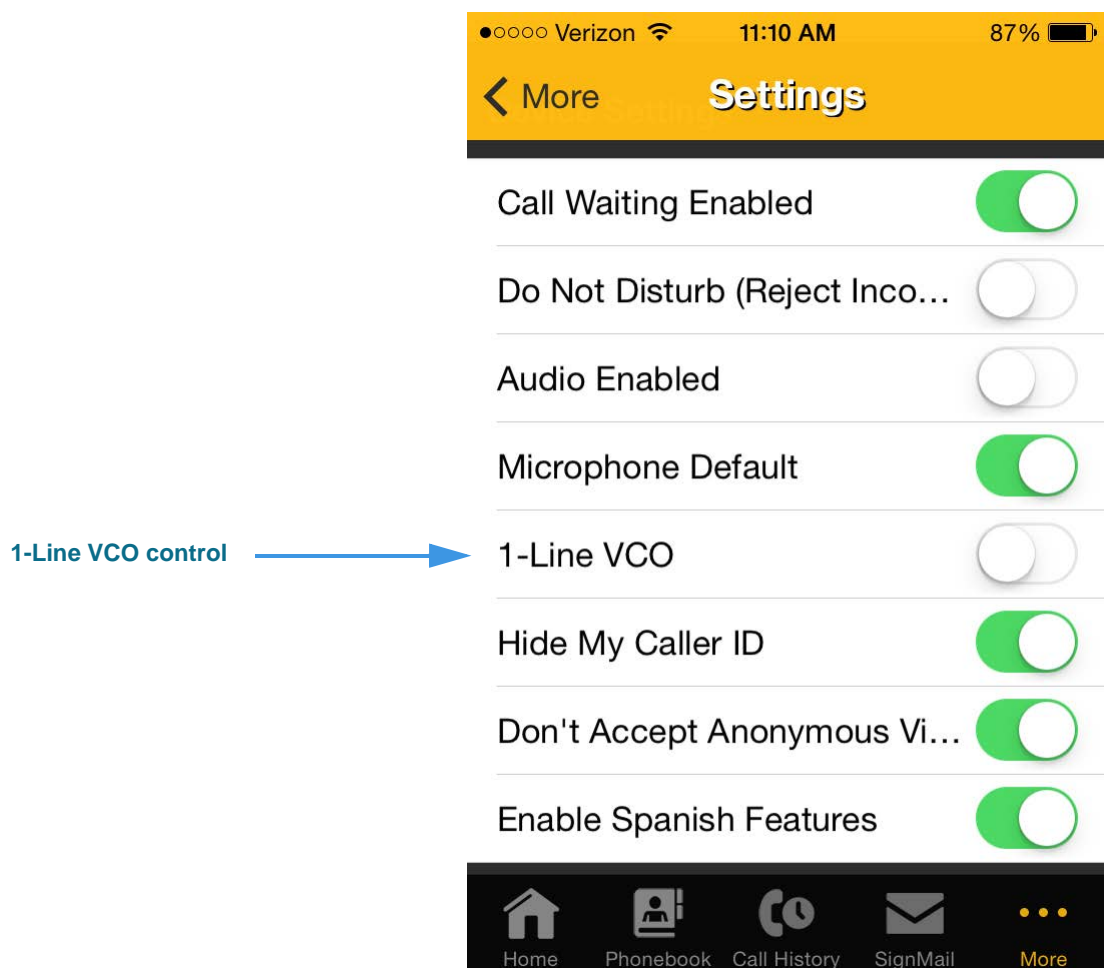


Figure 35 — VCO controls on *Settings* screen

You can use the three controls near the center of the screen to enable (turn on) the device's built-in audio, to select the default On/Off setting for the microphone, and to enable (turn on) the 1-Line VCO feature.

Step 3. Tap the **1-Line VCO** button to turn on the VCO feature as shown below.

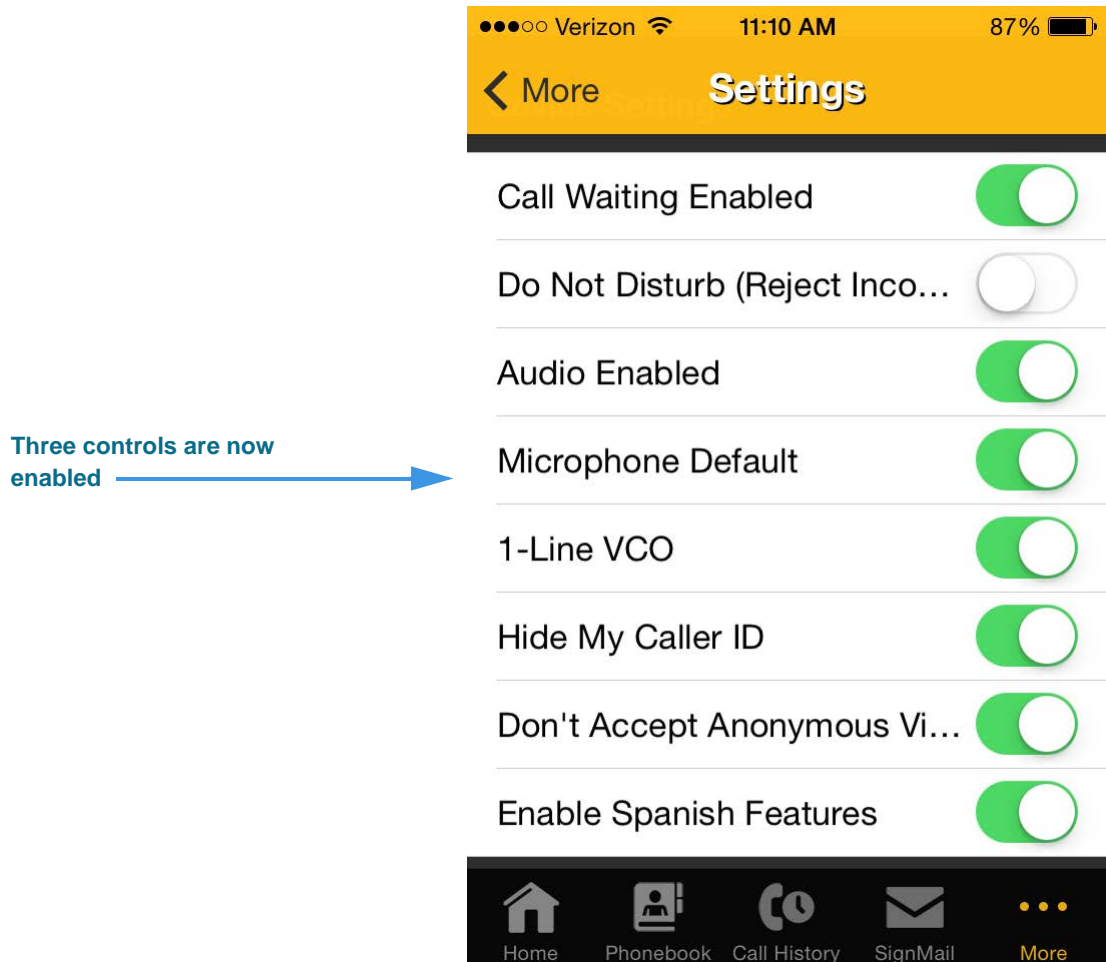


Figure 36 — Settings screen, 1-Line VCO Enabled

When you enabled 1-Line VCO, the **Audio Enabled** and **Microphone Default** controls were also turned on. The **Microphone Default** control sets whether the iOS device's microphone is on or off by default. You can also turn the microphone on and off during your calls.

Note: In addition to the built-in microphone, ntouch Mobile can also use any Bluetooth device connected to an iPhone or iPod touch. This feature lets you make 1-Line VCO calls with a compatible Bluetooth headset (e.g., for telecoil use).

Step 4. Tap the **Home** button to return to the Home screen where you can make calls.

Use Voice Carry Over (VCO)

To Make a 1-Line VCO Call

- Step 1. Dial your SVRS call at the Home screen.
- Step 2. When the call is answered, the interpreter will know you are making a VCO call. The In-Call screen will look like the image shown below.

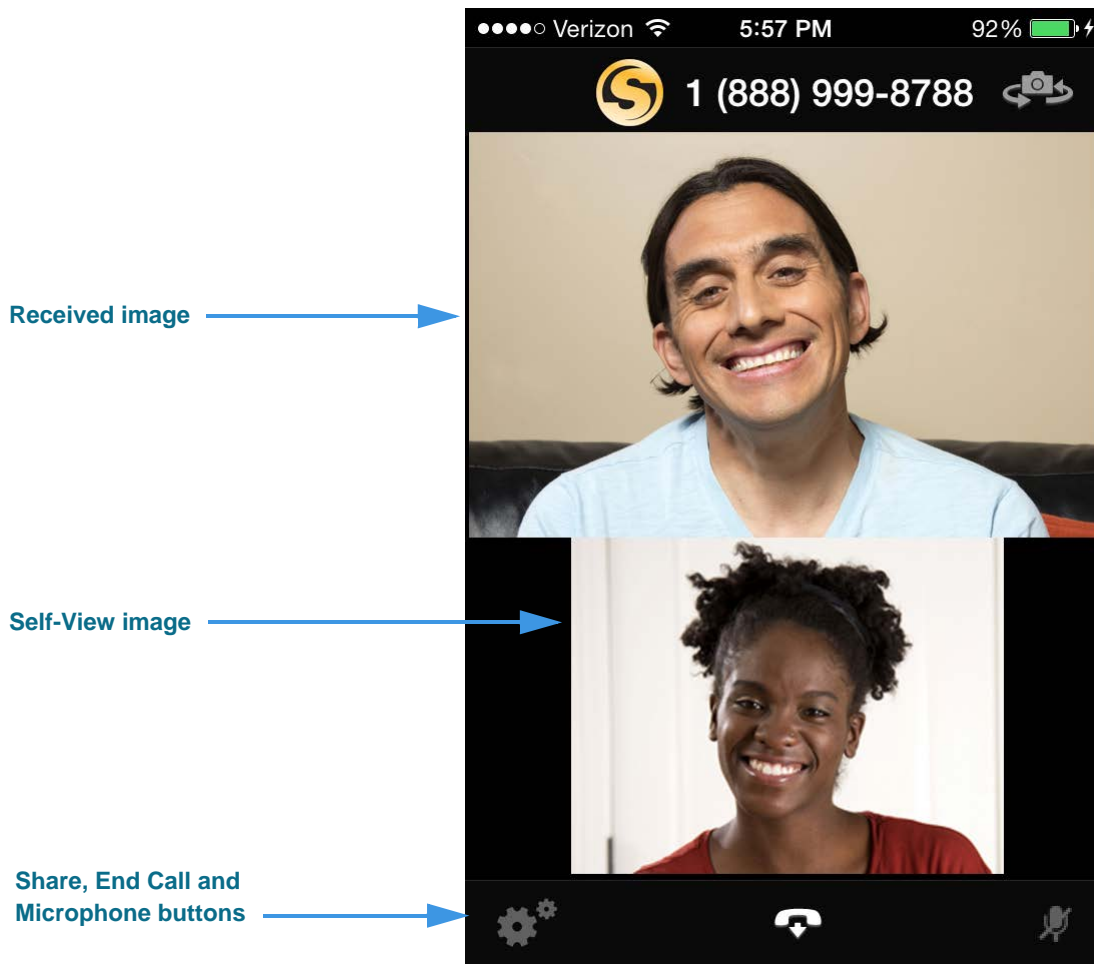


Figure 37 — In-Call screen

- Step 3. When connected, you can speak to the person you called using your own voice. The audio picked up by the iOS device's microphone will be sent with the video signal.
- Step 4. To briefly mute the microphone (or a connected Bluetooth device), tap the **Microphone On/Off** button at the bottom-right of the call screen.
- Step 5. When you are ready to hang up, tap the **End Call** button.

Use Personal SignMail Greeting

ntouch Mobile includes a Personal SignMail Greeting feature that lets you record your own SignMail greeting video. You can customize your greeting with text messages, or create a text-only greeting (i.e., no video image). You can change your personal greeting as often as you like, switch back to use the default Sorenson greeting, or use no greeting.

To Record a Personal Greeting

- Step 1. Tap the **More** button.
- Step 2. Tap the **Settings** button to display the screen shown below.

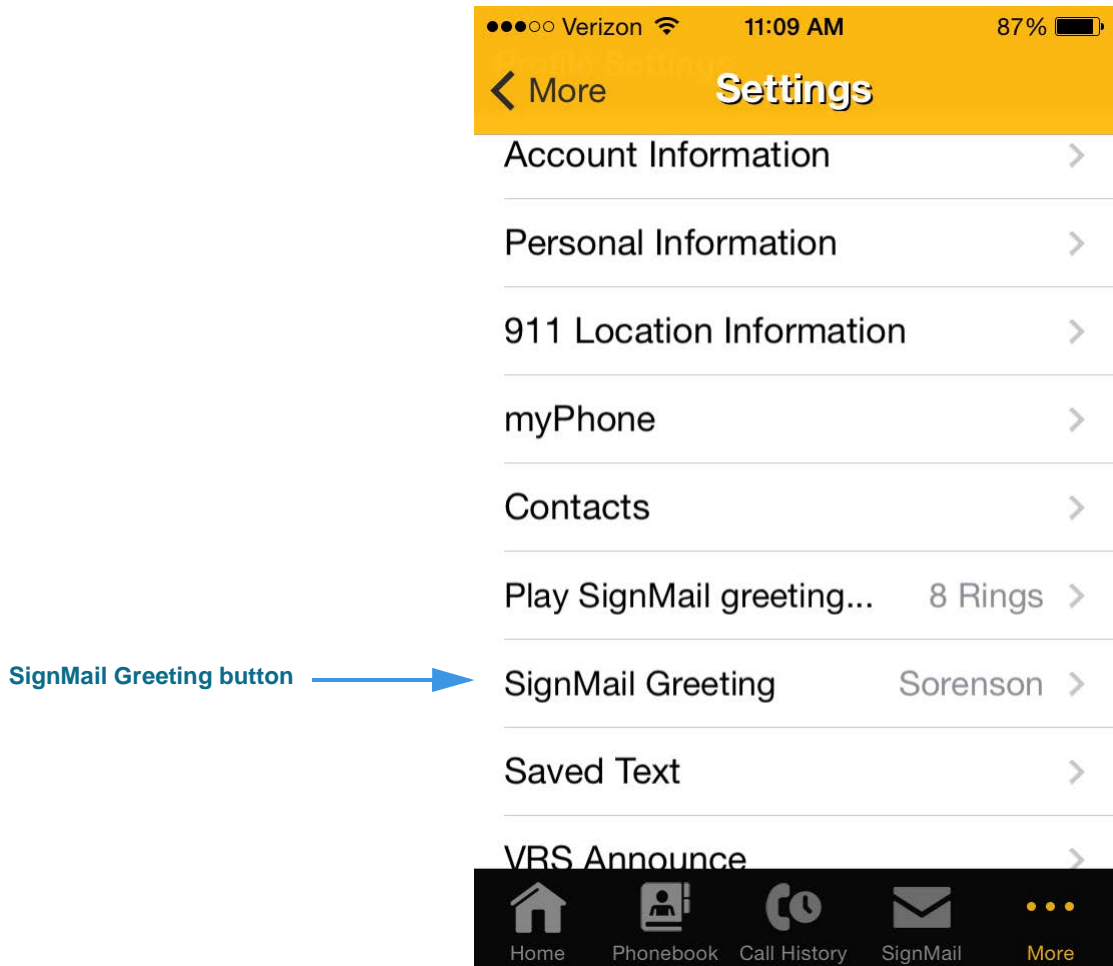


Figure 38 — SignMail Greeting button on *Settings* screen

Use Personal SignMail Greeting

Step 3. Tap the **SignMail Greeting** button to display the screen shown below.

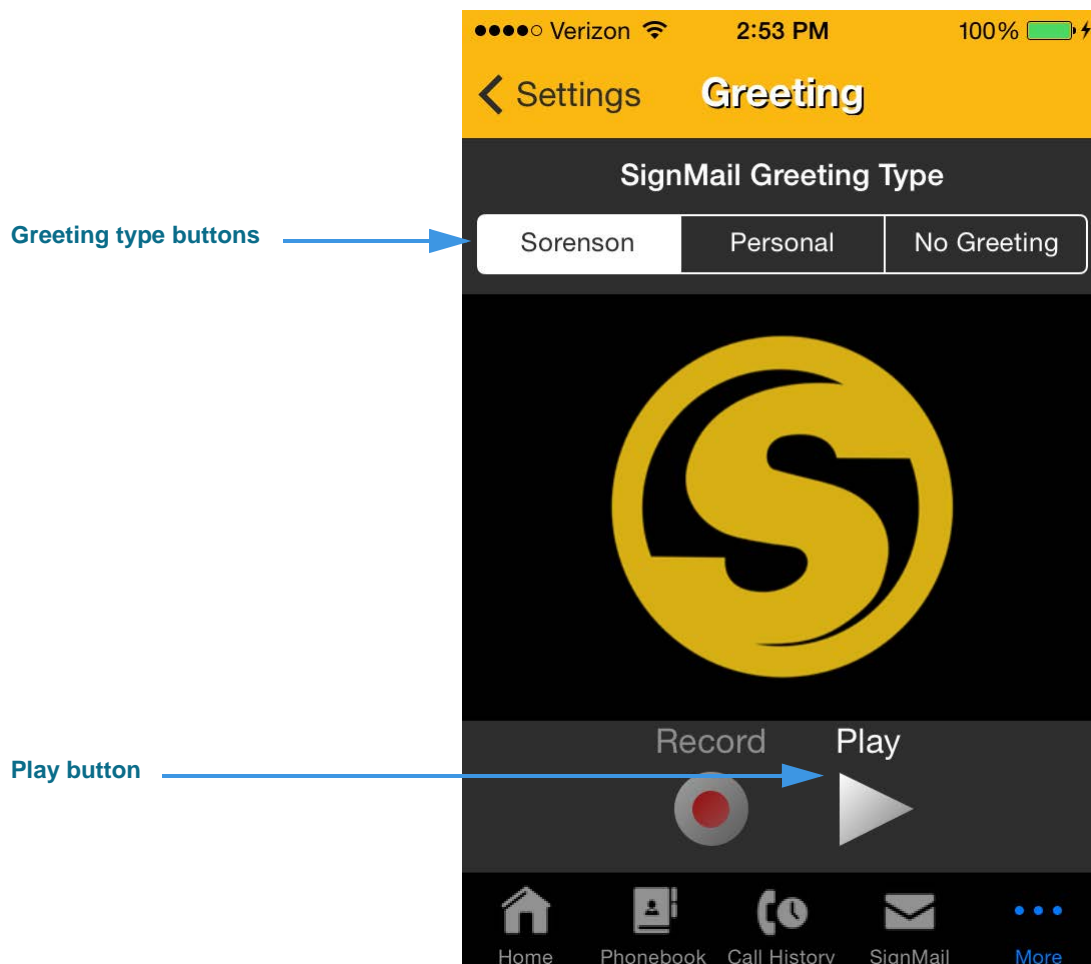


Figure 39 — Greeting screen

Notice the three greeting type buttons located in the center of the screen. You can choose to use the **Sorenson Greeting**, record a **Personal Greeting**, or use **No Greeting**.

You can select the **Play** button to play either the Sorenson Greeting or a Personal Greeting after you have recorded a greeting video.

Step 4. Tap the **Personal** button to display the screen shown below.

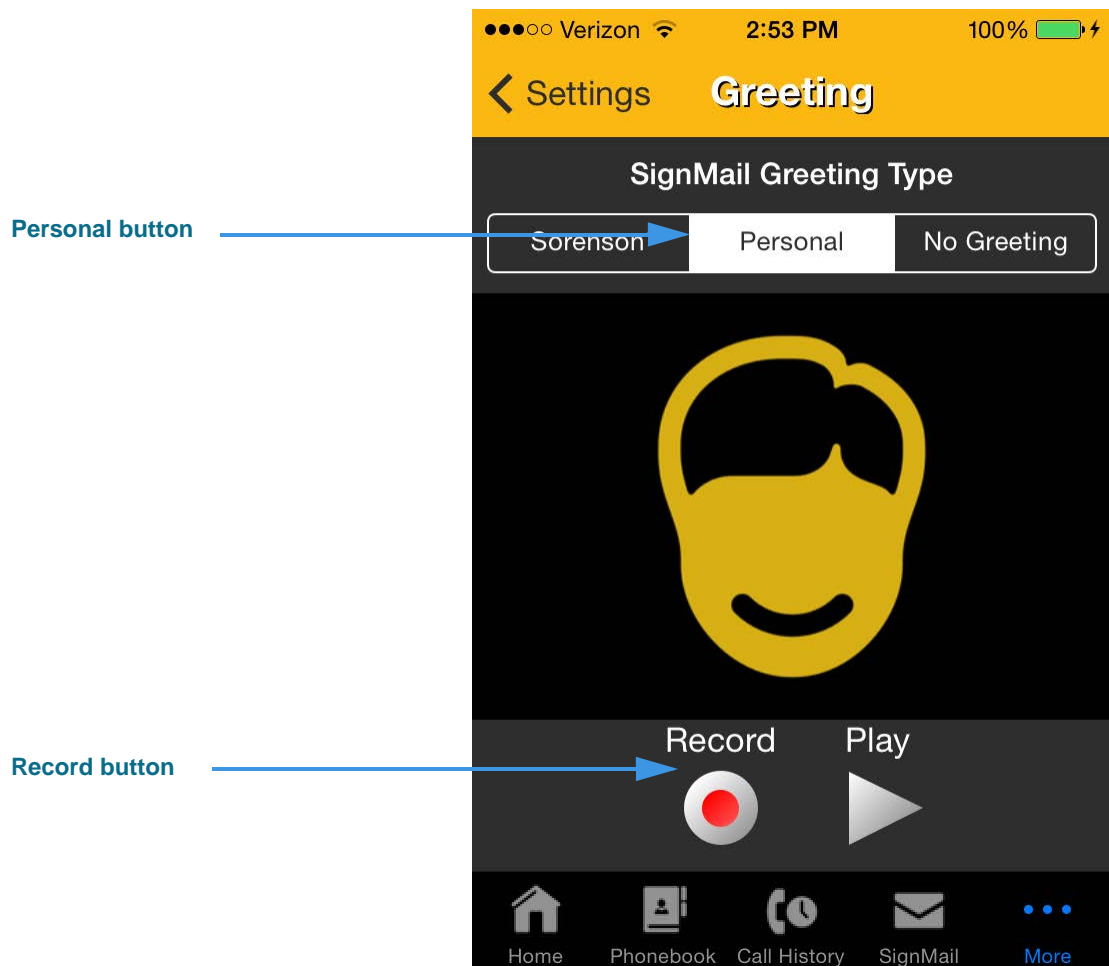


Figure 40 — Greeting screen, Personal button selected

Notice that the **Record** and **Play** buttons are active after you selected the Personal type button.

Use Personal SignMail Greeting

Step 5. Tap the **Record** button to display the screen shown below.

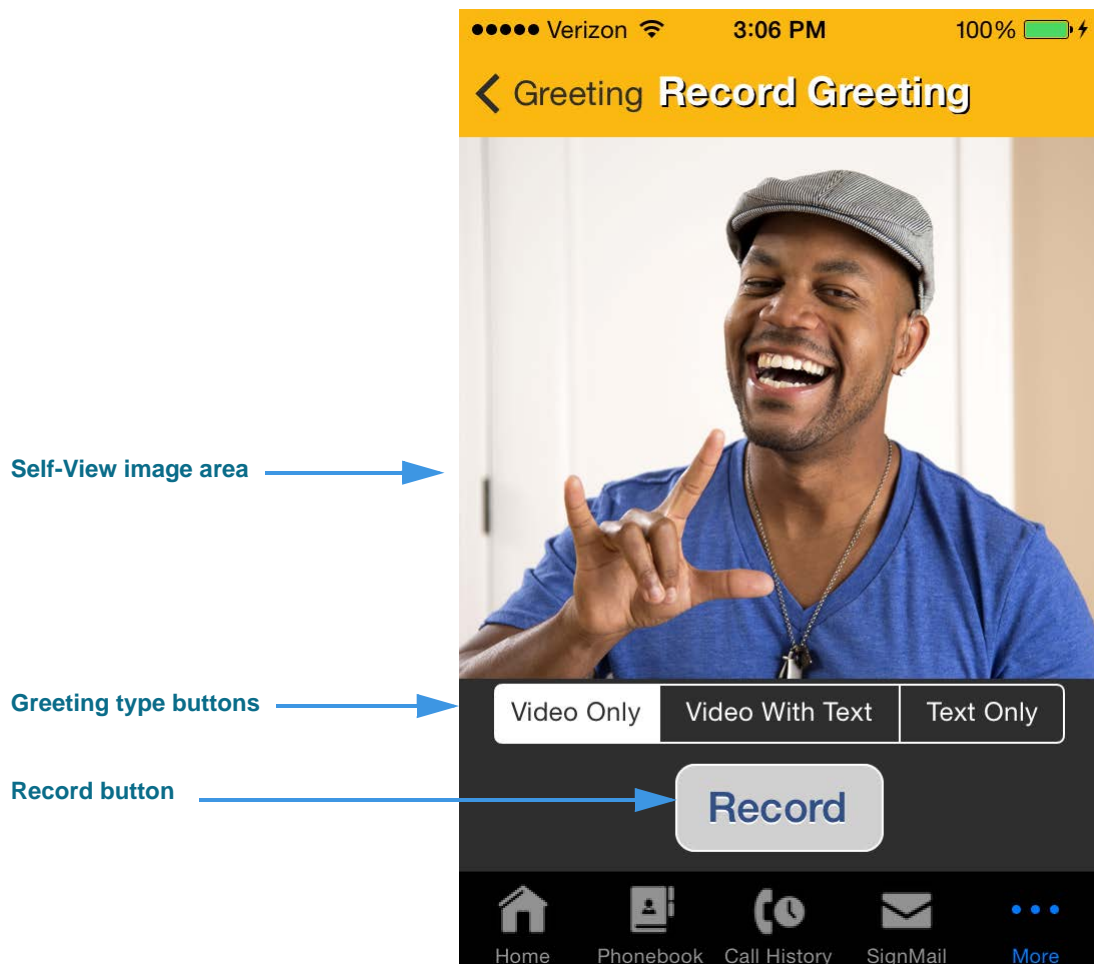


Figure 41 — *Record Greeting* screen, Video Only button selected

Notice the three greeting type buttons near the bottom-middle corner of the screen. You can choose one of three greeting options:

- Select the **Video Only** option to record up to a 30-second video of yourself.
- Select the **Video With Text** option to add a text field at the bottom of the Self-View area in which you can type a short text message using your computer's keyboard. The text message appears over the video image that you record.
- Select the **Text Only** option to remove the video image from the recording. Only the text you enter in the field will be shown as your 30-second greeting video.

The **Record** button is used to start a recording. The Self-View image area shows the image being captured by the device's camera.

Step 6. To record, first tap the **Video Only** button and then tap the **Record** button to display the screen shown below.

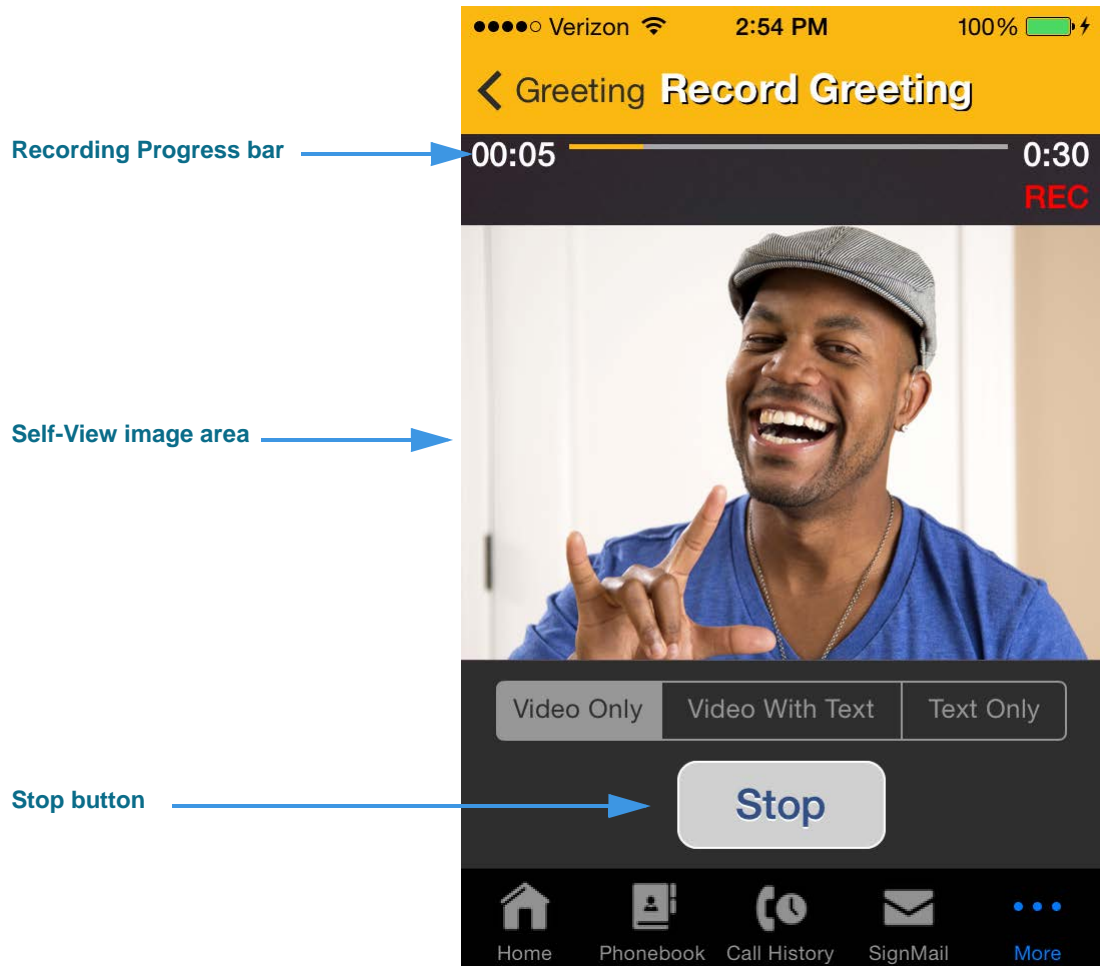


Figure 42 — Record Greeting screen, recording in progress

Notice that once recording has started, the **Recording Progress** bar appears and begins to move from the left to the right of the screen. The bar shows the elapsed time of the recording compared to the 30-second limit. The **Stop** button has replaced the Record button. You can stop the recording at any time by selecting the Stop button. The recording will stop automatically at the end of the 30-second limit.

Use Personal SignMail Greeting

Step 7. When finished recording, tap the **Stop** button to display the dialog shown below.

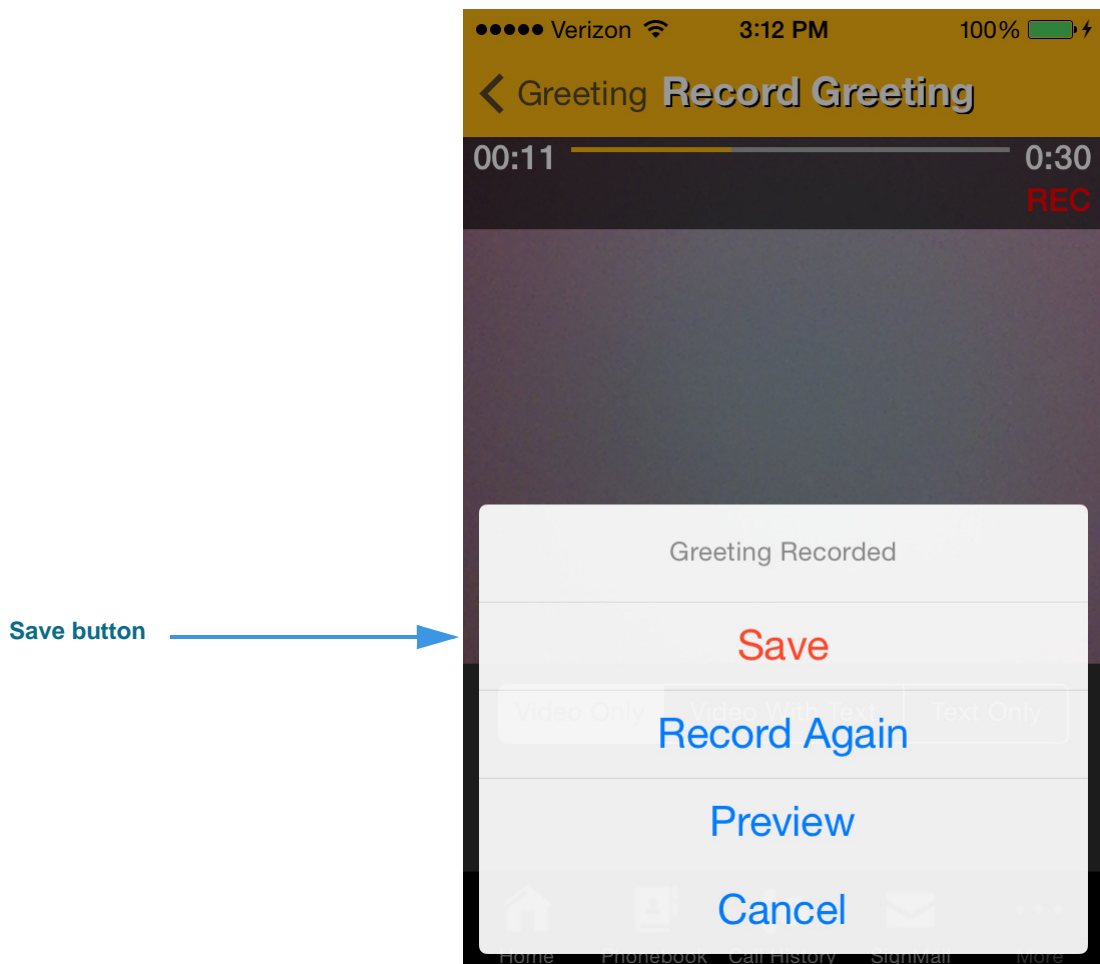


Figure 43 — *Record Greeting* screen, recording complete

Step 8. When finished recording, select the **Save** button to save your greeting video.

You can use the **Preview** button to view the video before saving. If you want to start over, select the **Record Again** button again to repeat the process. Use the **Cancel** button to exit and delete the recorded video.

If you want to record a video with text or a text only greeting, first select the correct greeting type button and then repeat the recording process. For example, you might find it useful to add a short text message to a video to provide a phone number you want to have callers use to reach you.

Send Deaf SignMail

ntouch Mobile's Deaf SignMail feature lets you record and send SignMail videos for other Sorenson videophone users who do not answer your calls.

To Record a Deaf SignMail

- Step 1.** Dial the phone number for any Sorenson user. If the person you call does not answer, you will see a "SignMail Greeting" video as shown below.

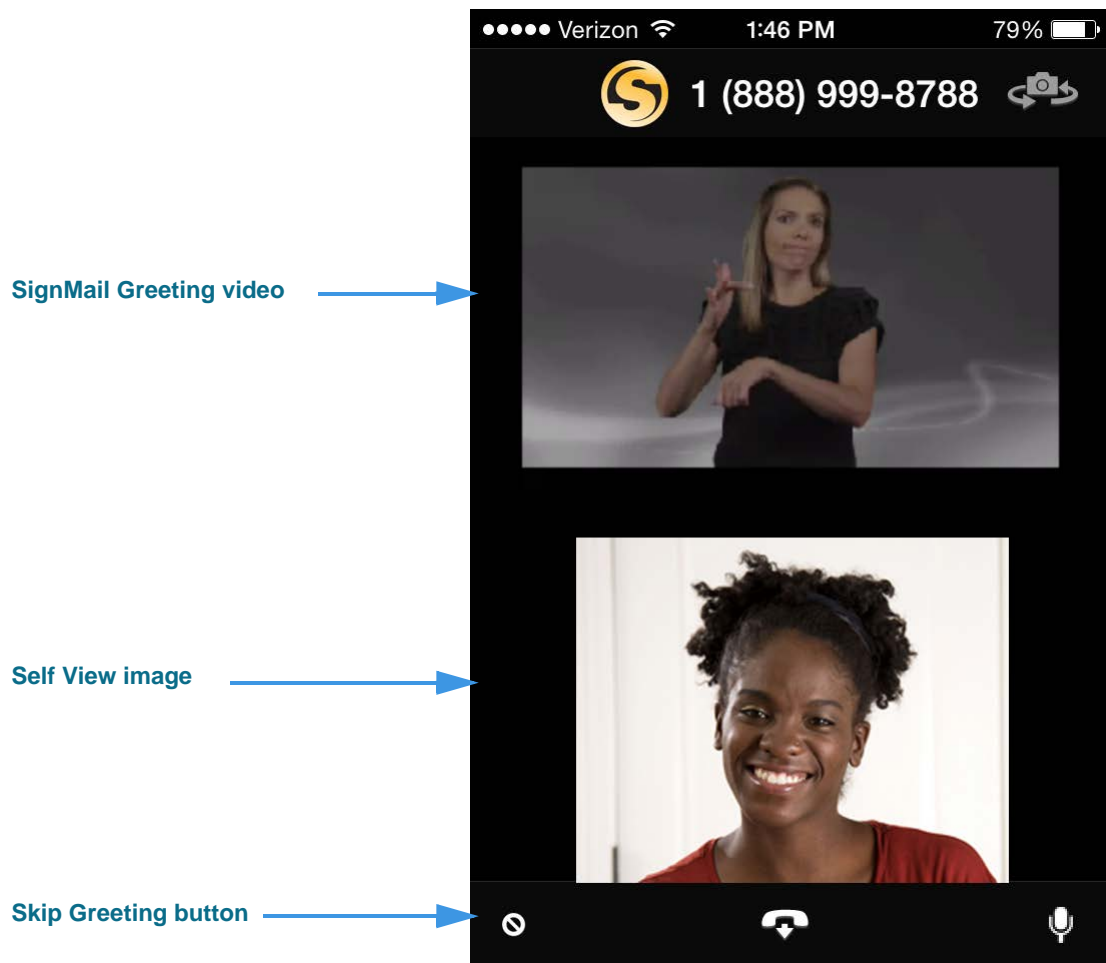


Figure 44 — Deaf SignMail Greeting video

You can tap the **Skip Greeting** button at the bottom-left of the screen to stop playback of the greeting video and go directly to the recording screen. If this button is not visible, touch the screen anywhere to display the menu bar.

Send Deaf SignMail

Step 2. The greeting video ends with a “Ready, Set, Go” signal shown below.

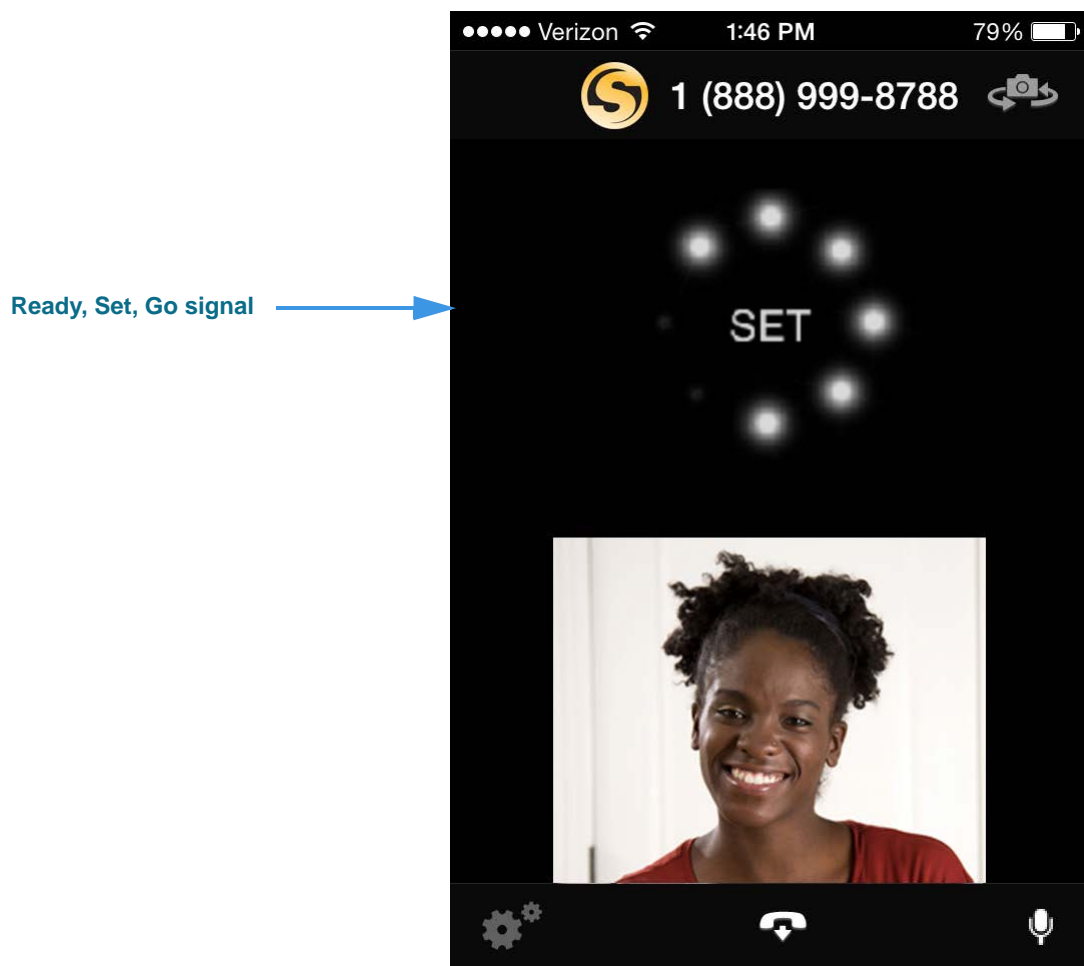


Figure 45 — Ready, Set, Go signal

The Ready, Set, Go signal shows you that recording is about to begin. When you see this signal, put the iPhone/iPod in a good position for recording your SignMail video.

- Step 3. You can start recording when you see the red **REC** indicator and the Progress bar shown below. You can record a video message of up to 60 seconds.

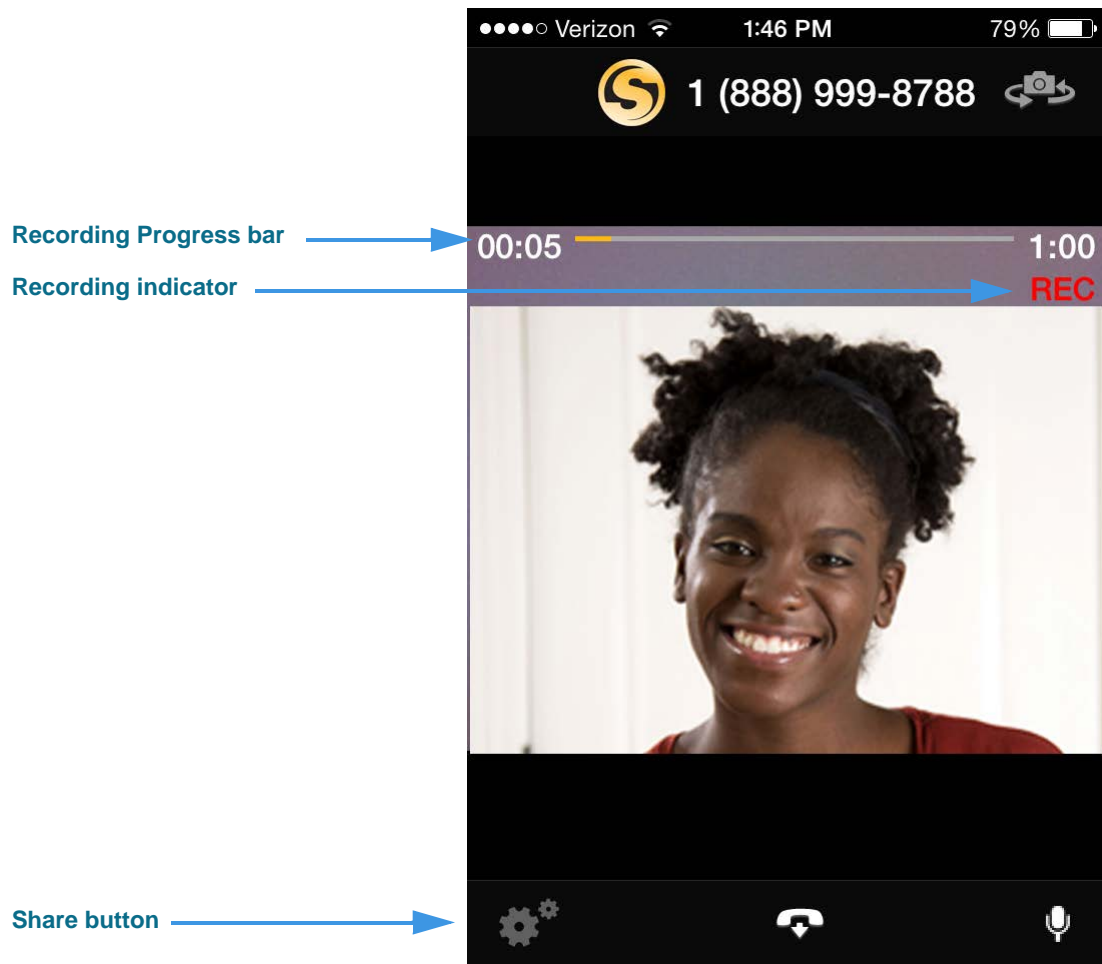


Figure 46 — Deaf SignMail recording screen

The Progress bar shows how much time has elapsed since recording was started. You can record for the full 60 seconds or you can choose to end the recording sooner. This sample image shows the menu bar at the bottom of the screen. The menu bar will disappear after a few seconds, but you can recall it by tapping the screen.

You can tap the **End Call** button in the middle of the menu bar to stop the recording of the SignMail video before 60 seconds.

Notice the **Share** button at the bottom-left corner of the screen. You use this button to choose what kind of information you want to share. Any information you share will be recorded as part of the SignMail video. See **Page 21** for details.

Send Deaf SignMail

- Step 4. When recording stops automatically or after you tap the [End Call](#) button, a pop-up dialog will appear as shown below.

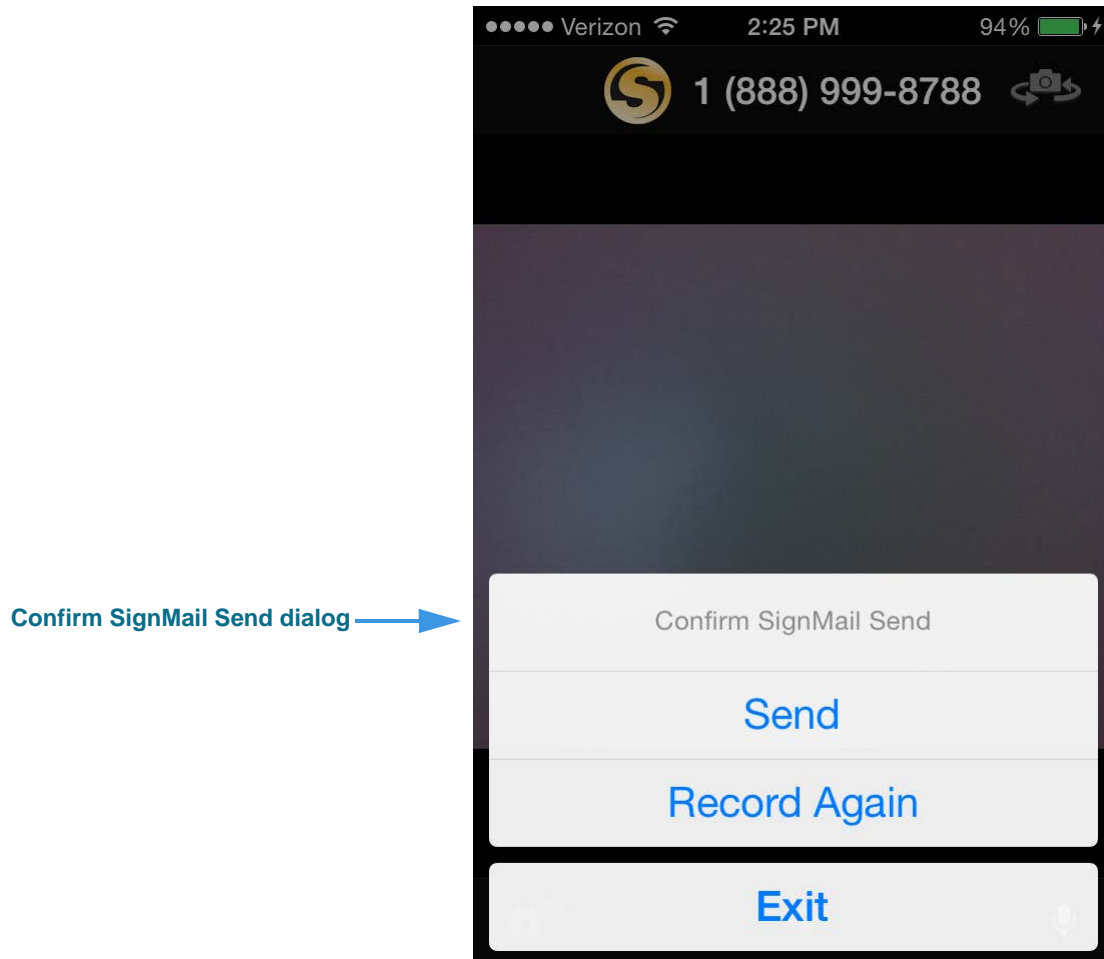


Figure 47 — SignMail recording, Confirm SignMail Send menu

The pop-up dialog shows three options. You can choose to **Send** the video you recorded, to **Record Again**, or to **Exit**. If you exit, you will also discard the video.

- Step 5. Tap the [Send](#) button to send the SignMail video.
- Step 6. You will then be back at the Home screen.

View Your SignMails

ntouch Mobile's *SignMail* screen lets you view SignMails you have received from hearing callers through SVRS or from other deaf Sorenson users.

To View a SignMail

Step 1. Tap the **SignMail** button to open the screen shown below.

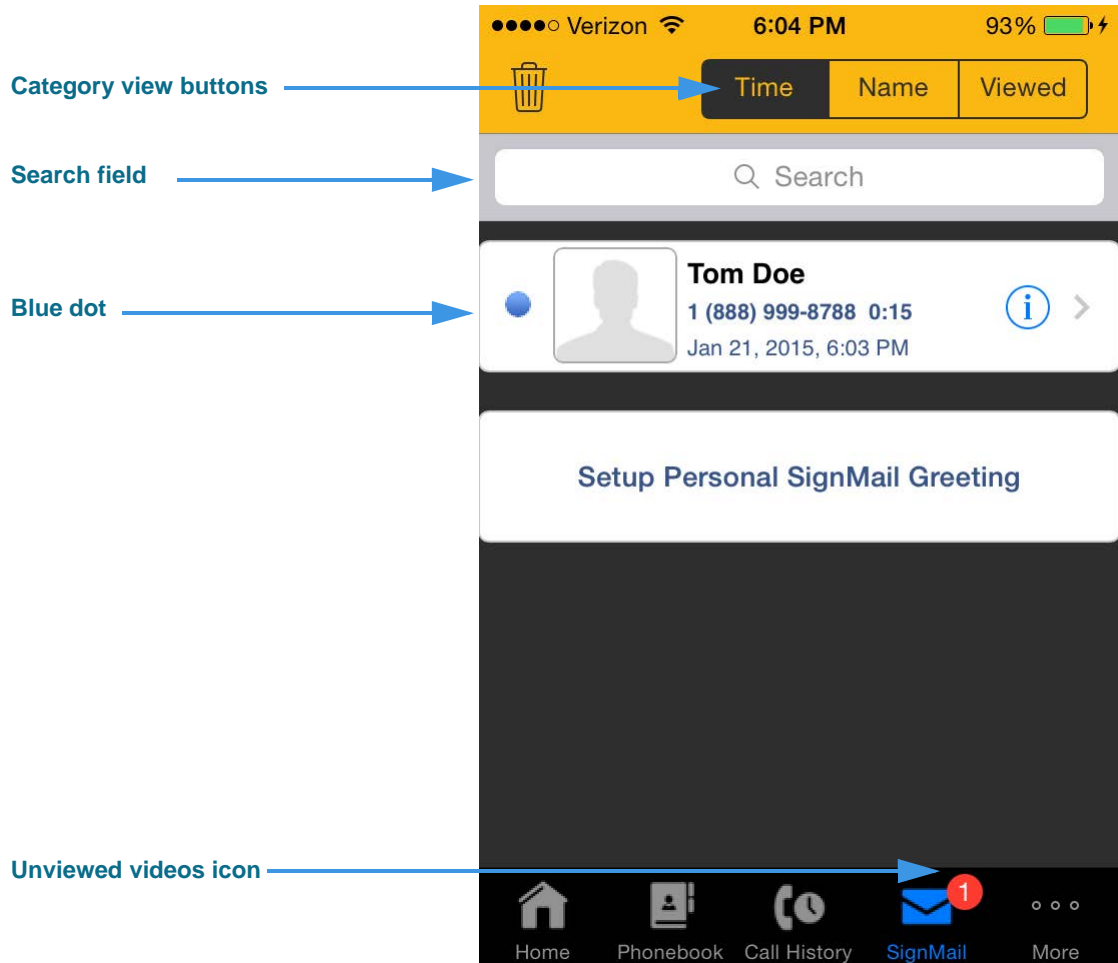


Figure 48 — SignMails list on *SignMail* screen

Notice the category view buttons at the top of the screen (Time, Name, and Viewed). The **Time** button is selected by default. Tap one of the other buttons to see the list arranged by name or viewed status. The **Search** field is used to search for a particular video by entering any part of the video's name.

This sample image shows a red and white icon on top of the SignMail button in the Button Bar. This icon shows the number of unviewed SignMails you have available.

The **blue dot** appears next to any video that you have not yet viewed.

View Your SignMails

Step 2. Tap the name of the video that you want to view. The video will begin to play in the View Video screen as shown below.

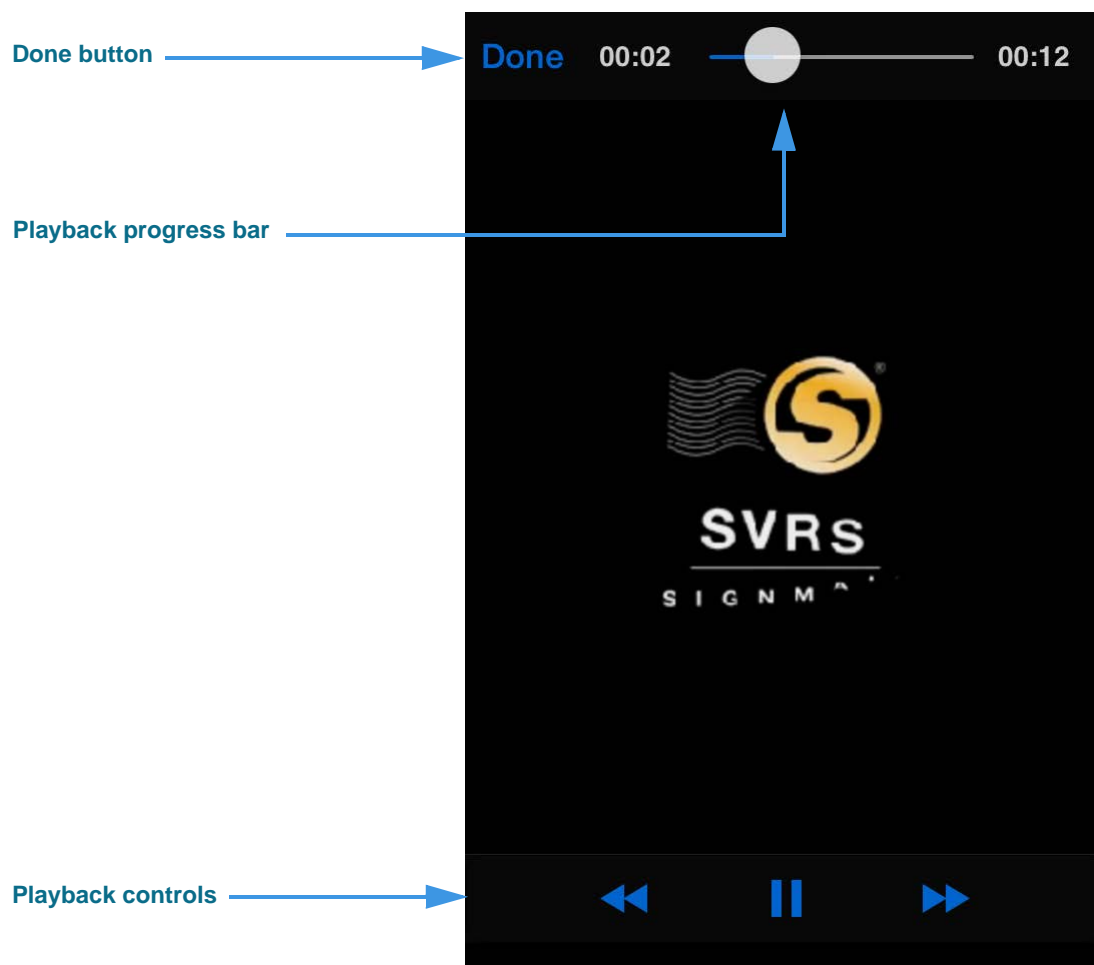


Figure 49 — Video playback screen

This is the *View Video* screen. The **Playback Progress** bar is located near the top of the screen. The **Playback Controls** are shown near the bottom of the screen. These controls let you Rewind, Pause/Play, and Fast Forward the video. The Progress bar and Playback controls will disappear from the screen after a few seconds. To show them again, just tap the screen.

After the video has finished playing, you must use the **Done** button at the top-left to return to the *SignMail* screen.

Step 3. Tap the **Done** button to return to the SignMail screen as shown below.

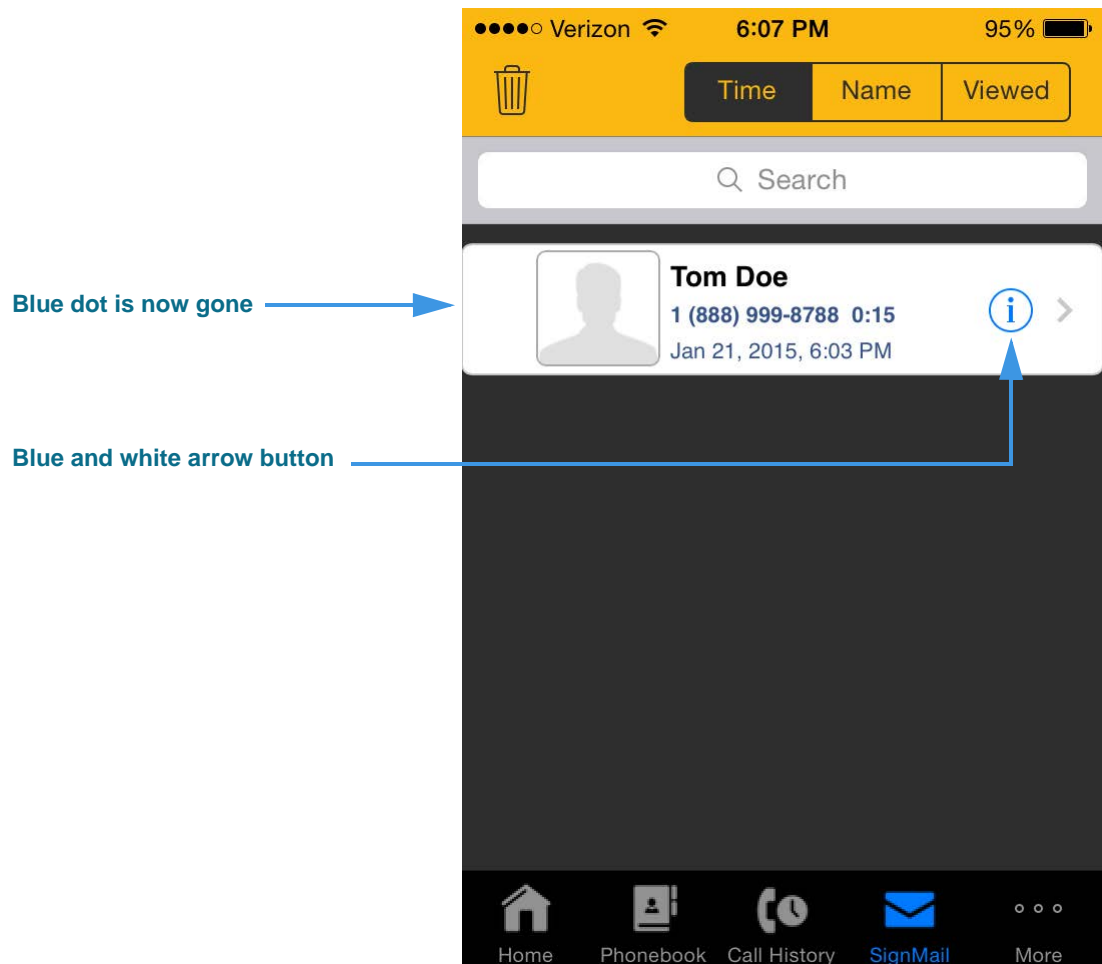


Figure 50 — Video playback ended, blue dot gone

The blue dot to the left of the video name is now gone because you played the video.

Notice the **blue and white arrow (>)** button located to the right side of the video name. Tap this button to show a list of optional functions that you can perform on this SignMail video.

The steps in the next subheading describe the use of these optional functions.

To Use Optional Functions

Step 1. Tap the **blue and white arrow (>)** button located at the right side of any video on the SignMail screen to open the screen shown below.

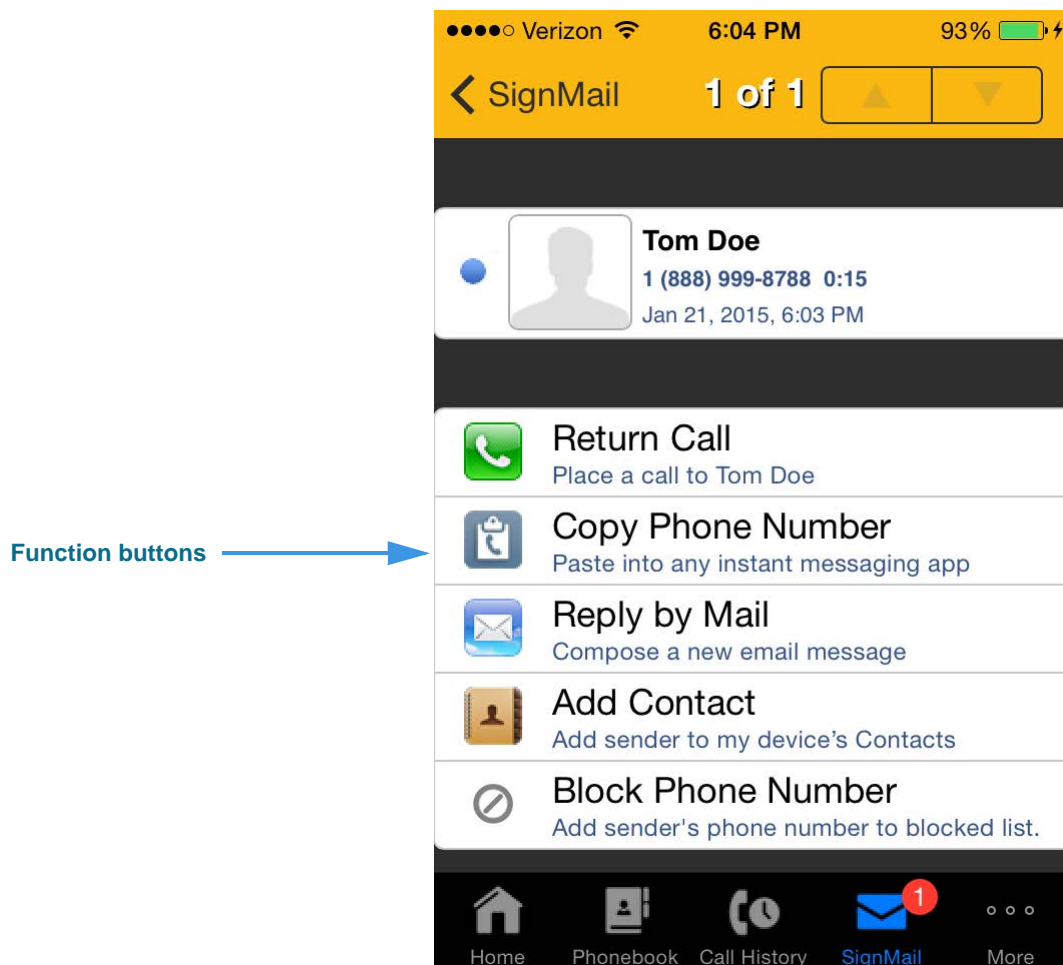


Figure 51 — Six functions for a SignMail video

This screen contains five (5) optional function buttons. You can choose to:

- Make a **return** call to the sender of this SignMail
- **Copy** this phone number to paste into another app
- **Reply** to this SignMail by writing and sending an email
- **Add** the sender of this SignMail to your Contacts list
- **Block** the sender of this SignMail from calling you again

Step 2. Select which function you want to use, then tap its button.

To Delete SignMails

- Step 1. Notice the **Delete All** button at the top-left of the screen (the button looks like a trash can) as shown below.

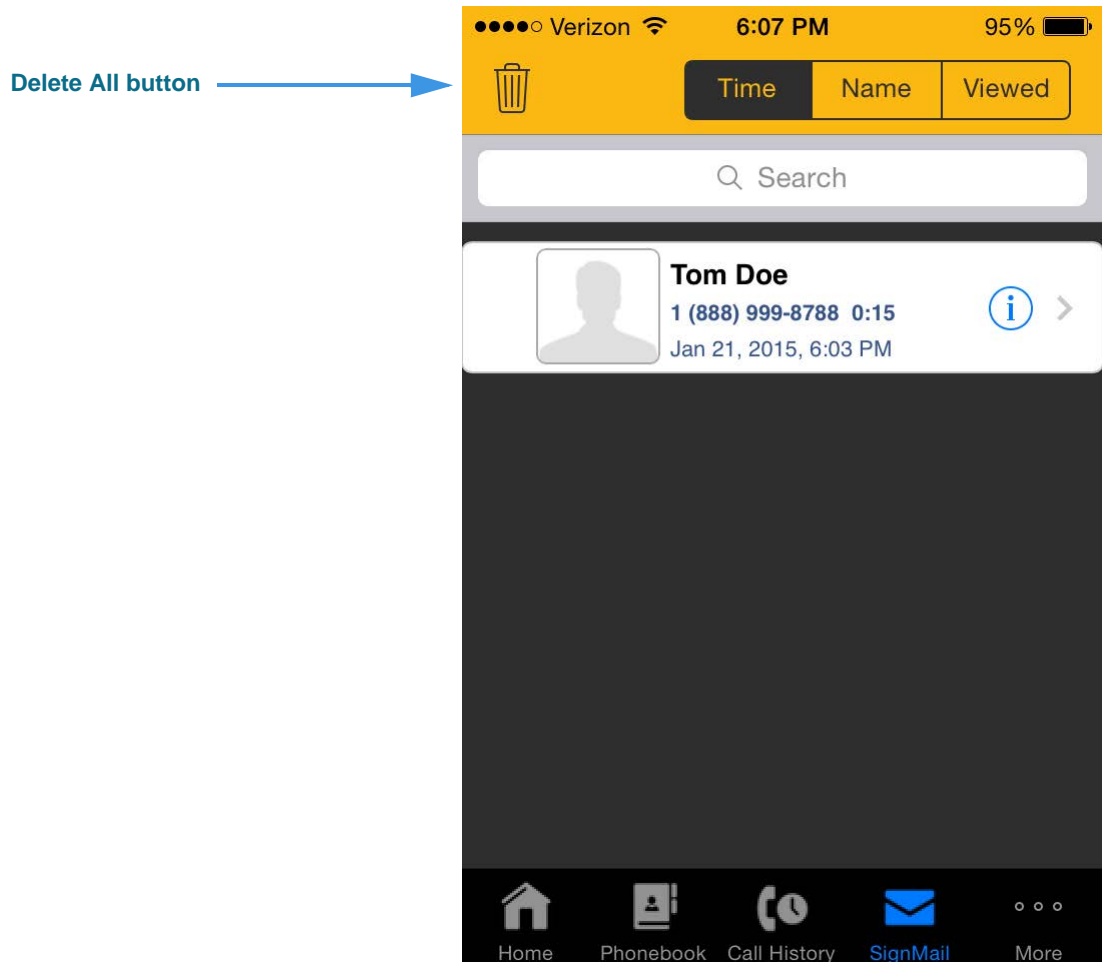


Figure 52 — Video Center screen, Delete All button

You can use the **Delete All** button to permanently delete *all* of the videos from the *SignMail* screen at once. Keep in mind you *cannot* recover deleted videos.

Note: *Most often, you will want to delete videos one at a time instead of the entire list all at once. See **Step 4 on Page 56** to see how to delete individual videos. Remember, you cannot recover any videos that you delete.*

View Your SignMails

Step 2. Tap the **Delete All** button. The screen will then look like the image below.

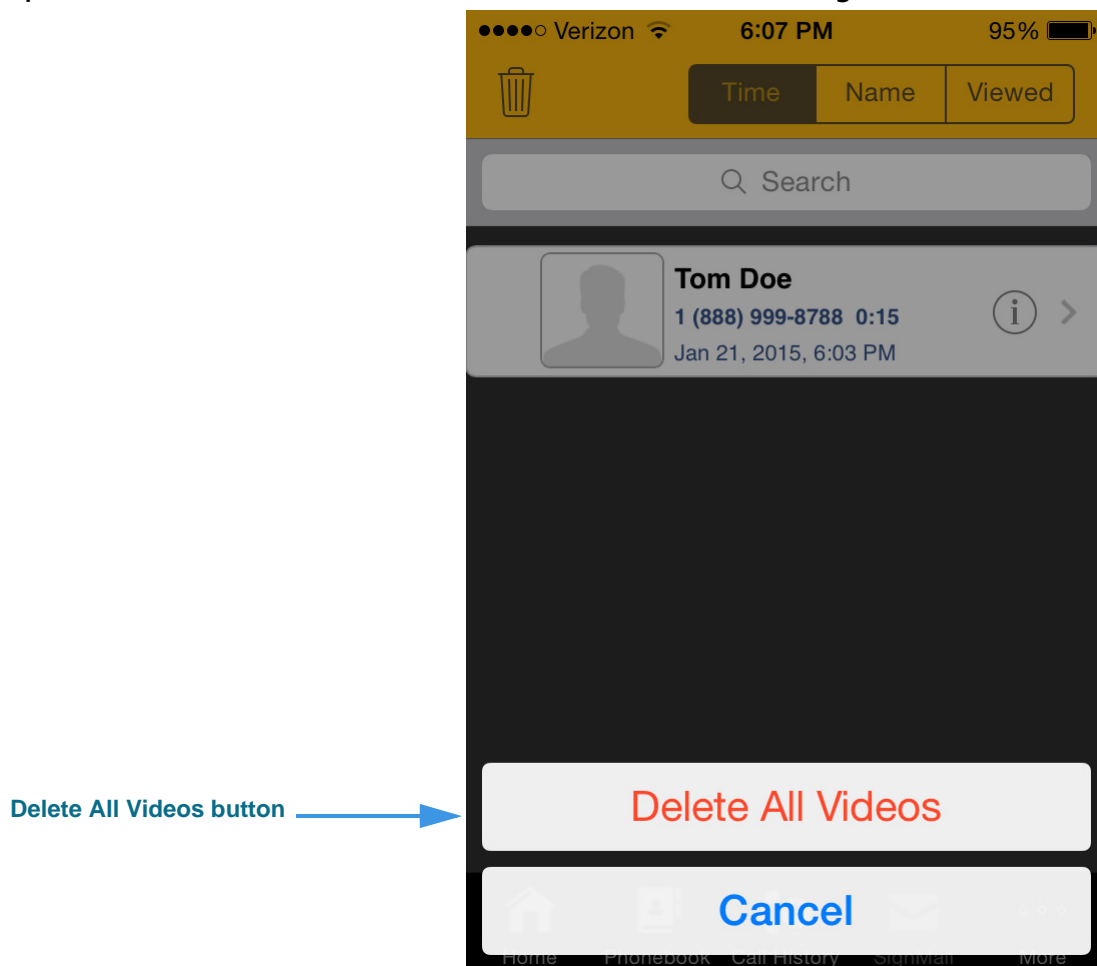


Figure 53 — Delete All Videos button

The **Delete All Videos** button has appeared on the screen. If you tap this button, all videos in all lists will be immediately and permanently removed. You *cannot* recover deleted videos.

Warning: Do NOT tap the button unless you are certain you want to delete all your videos. You will NOT be asked to confirm the deletion of all videos. You CANNOT recover videos that have been deleted from the Video Center lists.

Step 3. If you are certain that you want to delete all videos at once, tap the **Delete All Videos** button. Otherwise, tap Cancel to exit without deleting.

- Step 4. To delete just one individual video from any list, you must first reveal the **Delete** button for that video. To do so, swipe your finger across the name of the video you want to delete. The screen will then look like the image shown below.

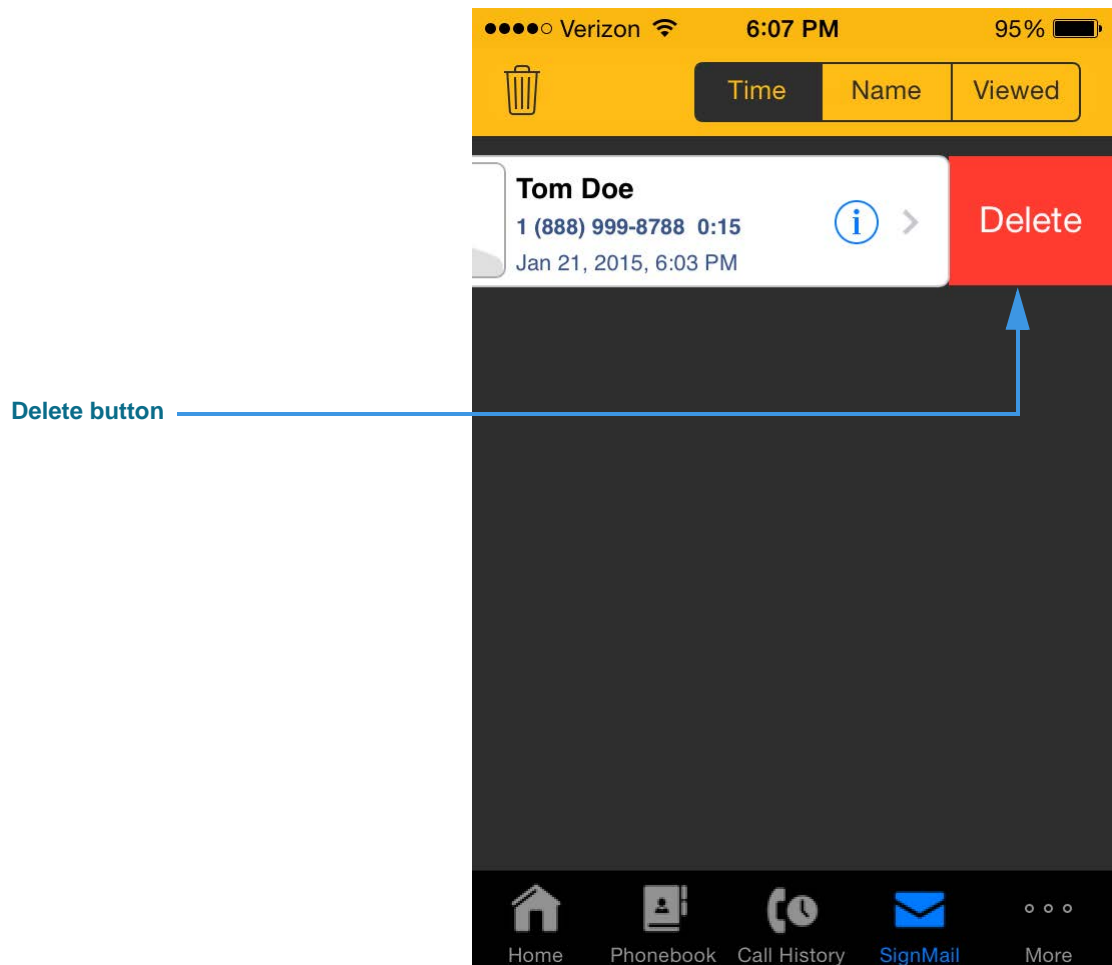


Figure 54 — Swipe across name to reveal Delete button

Swiping your finger across the name of a video has revealed the **Delete** button as shown above. You can use this button to permanently remove just this one video from the list. *There is no confirmation dialog for deleting one video at a time.* When you tap the **Delete** button, the video will be immediately and permanently removed. You *cannot* recover deleted videos.

- Step 5. If you are certain that you want to delete this one video, tap the **Delete** button. Otherwise, tap anywhere on the screen to hide the button without deleting.

See Call History

ntouch Mobile's *Call History* screen lets you see lists of your recent calls. You can choose to see a list of all calls, or just your missed calls, incoming calls, or outgoing calls.

To Use a Call History List

Step 1. Tap the **Call History** button to open the screen shown below.

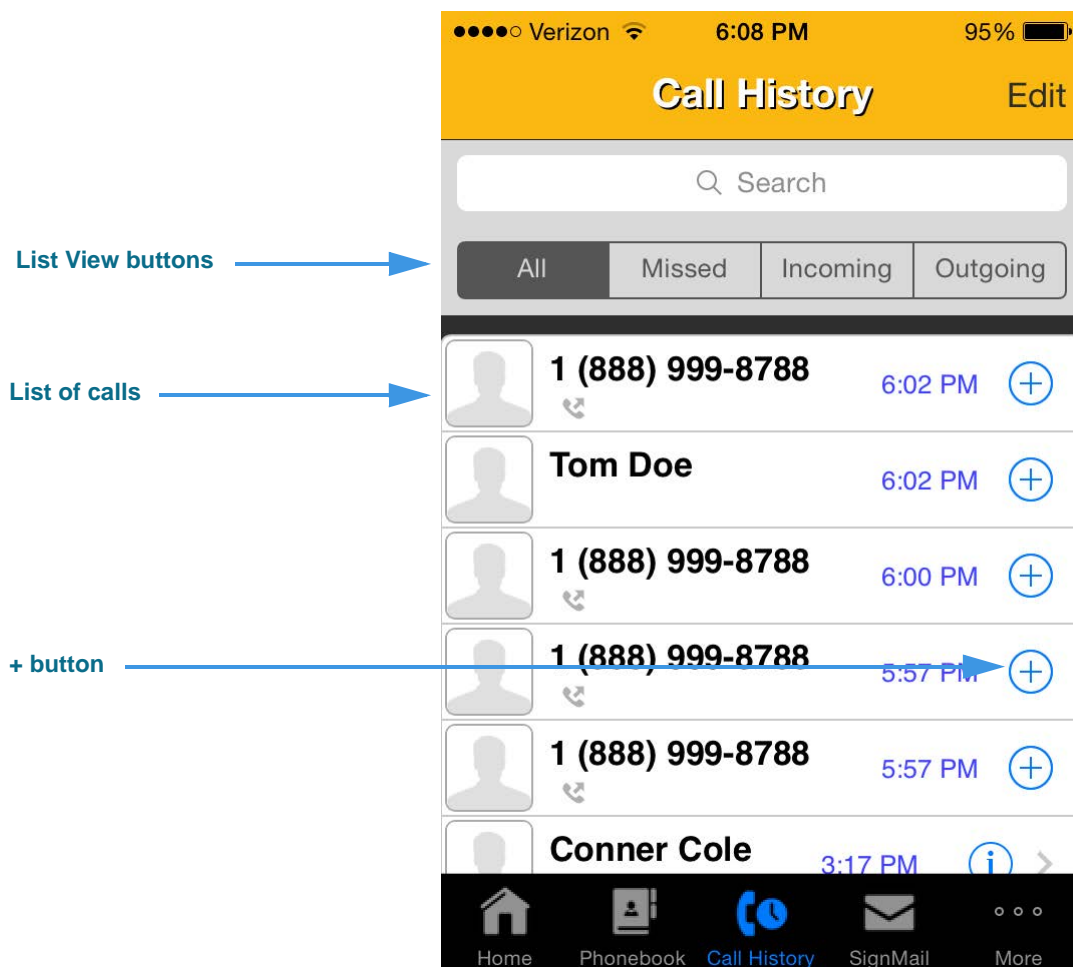


Figure 55 — *Call History* screen

There are four **List View** buttons on the *Call History* screen. You can use these buttons to see lists of All, Missed, Incoming, or Outgoing calls. Missed calls are always shown in **red** type. Tap any number or name in the call list to place a call to that number.

The **blue and white plus sign (+)** button located to the right side of each call is used to display a pop-up menu at which you can create a new contact record for this caller, add the number to an existing contact, or add the number to the Block List. If the icon is a **blue and white arrow** instead of a plus (+) sign, you will see the existing contact record for this caller.

- Step 2. Carefully tap the **blue and white plus sign (+)** icon next to one of the numbers. If you tap anywhere other than directly on the button, you will make an outgoing call to the number. The screen will then look like the image shown below.

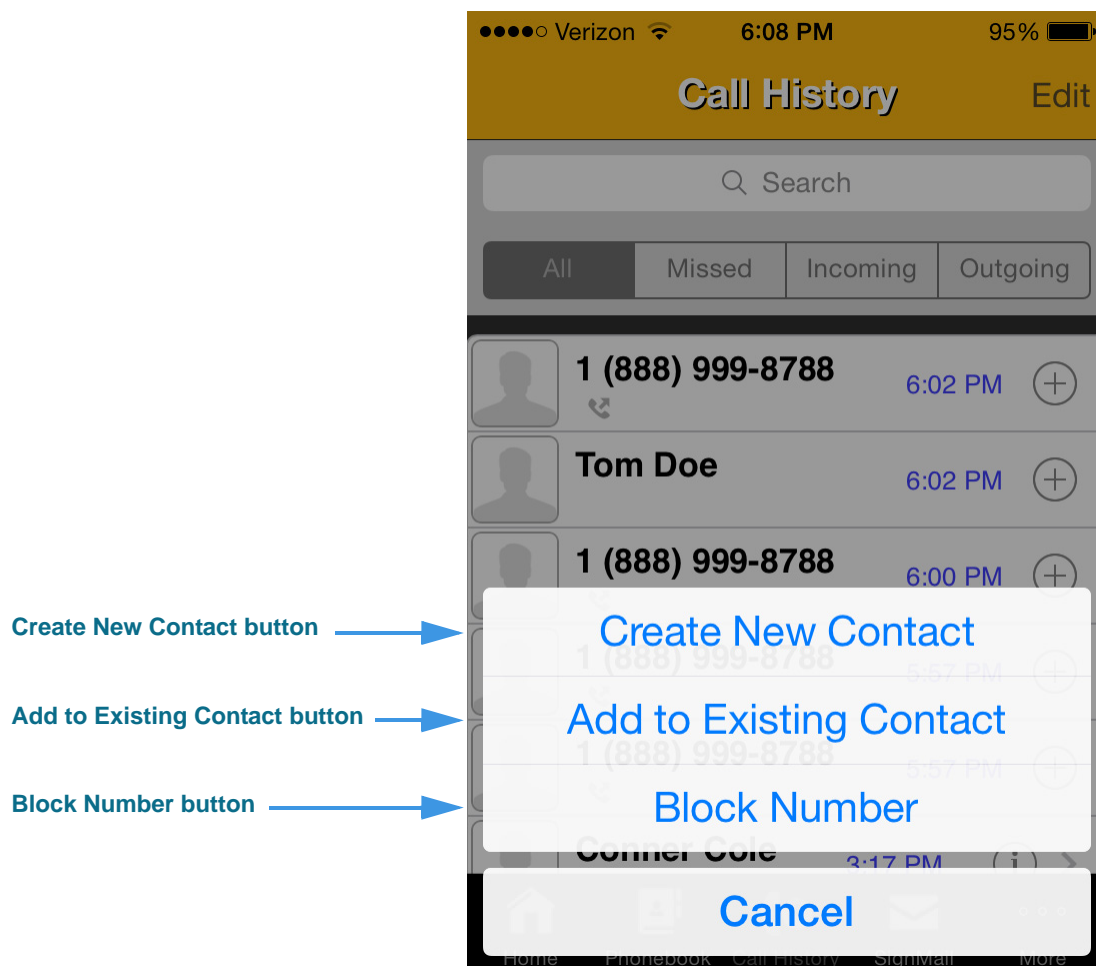


Figure 56 — Pop-up menu on *Call History* screen

You can use the three buttons that have appeared in the pop-up menu in the center of the screen to create a new contact record for this caller, add this phone number to an existing record, or block calls from this number.

- Step 3. For this example, tap the **Add to Existing Contact** button.

See Call History

Step 4. You will then see the Sorenson Contacts screen shown below.

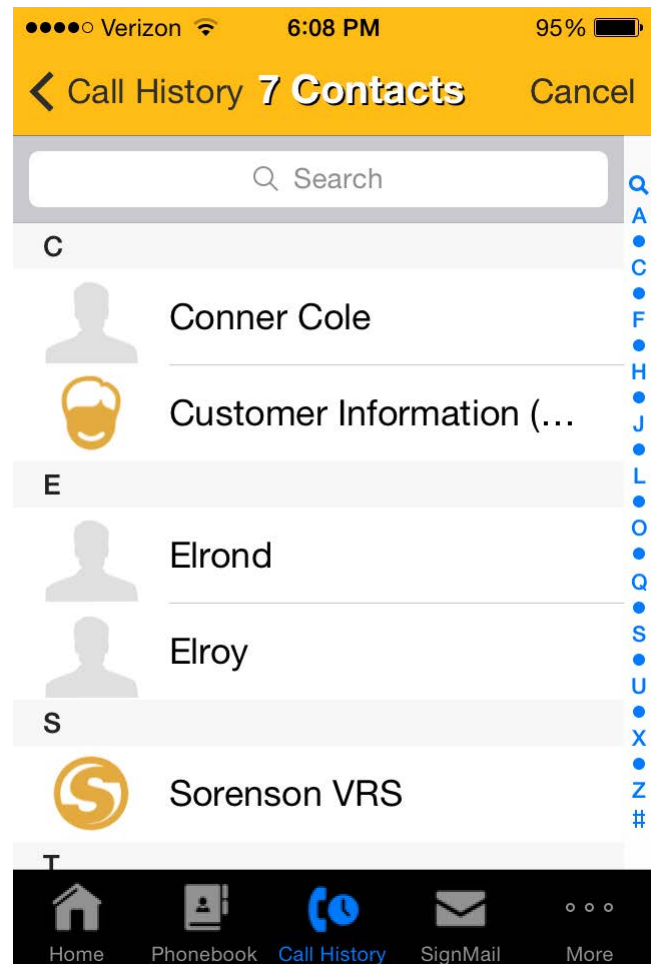


Figure 57 — Sorenson Contacts screen

This is the *Sorenson Contacts* screen. The contacts you have stored with your ntouch account are listed alphabetically on this screen.

Step 5. Select the **contact in the list** that you want to associate with the selected phone number.

Step 6. You will then see a dialog like the example shown below.

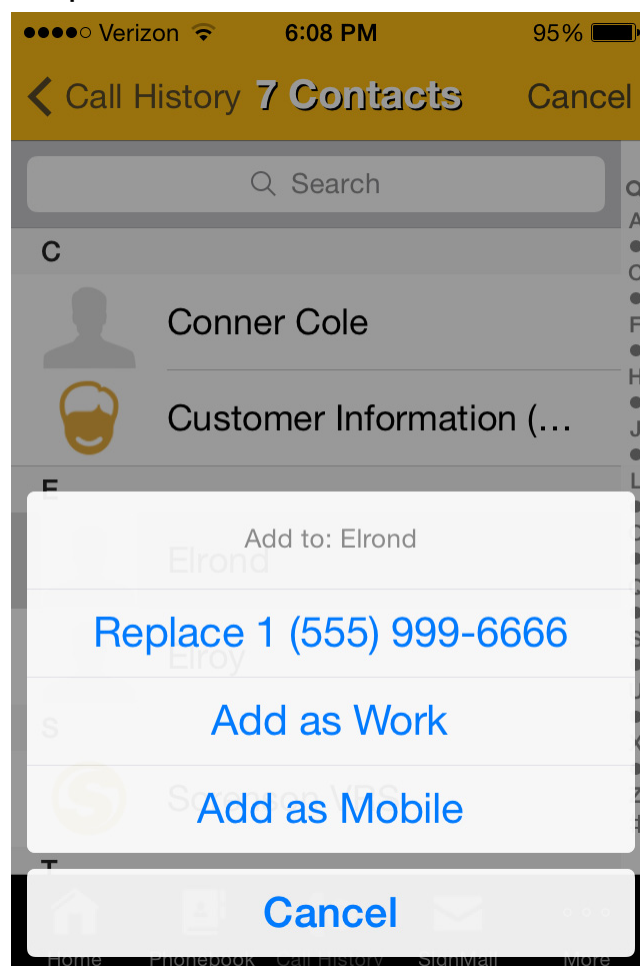


Figure 58 — Add to Contact dialog

This dialog lets you choose which of the three number types that can be stored for a Sorenson contact is to be used for the selected phone number. Notice that in this example, there are two numbers stored already (Home and Mobile) and one available (Work). You can choose to replace any of the existing stored numbers or save the number as one of the available types (in this case, as a Work number).

Step 7. For this example, tap the **Add as Work** button.

Step 8. Tap the **Done** button to save the changes to the contact record.

See Call History

To Delete Call Records

Step 1. Start at any Call History screen call list (e.g., All, Missed, Incoming, Outgoing).

Step 2. Tap the **Edit** button to open a screen like the example shown below.

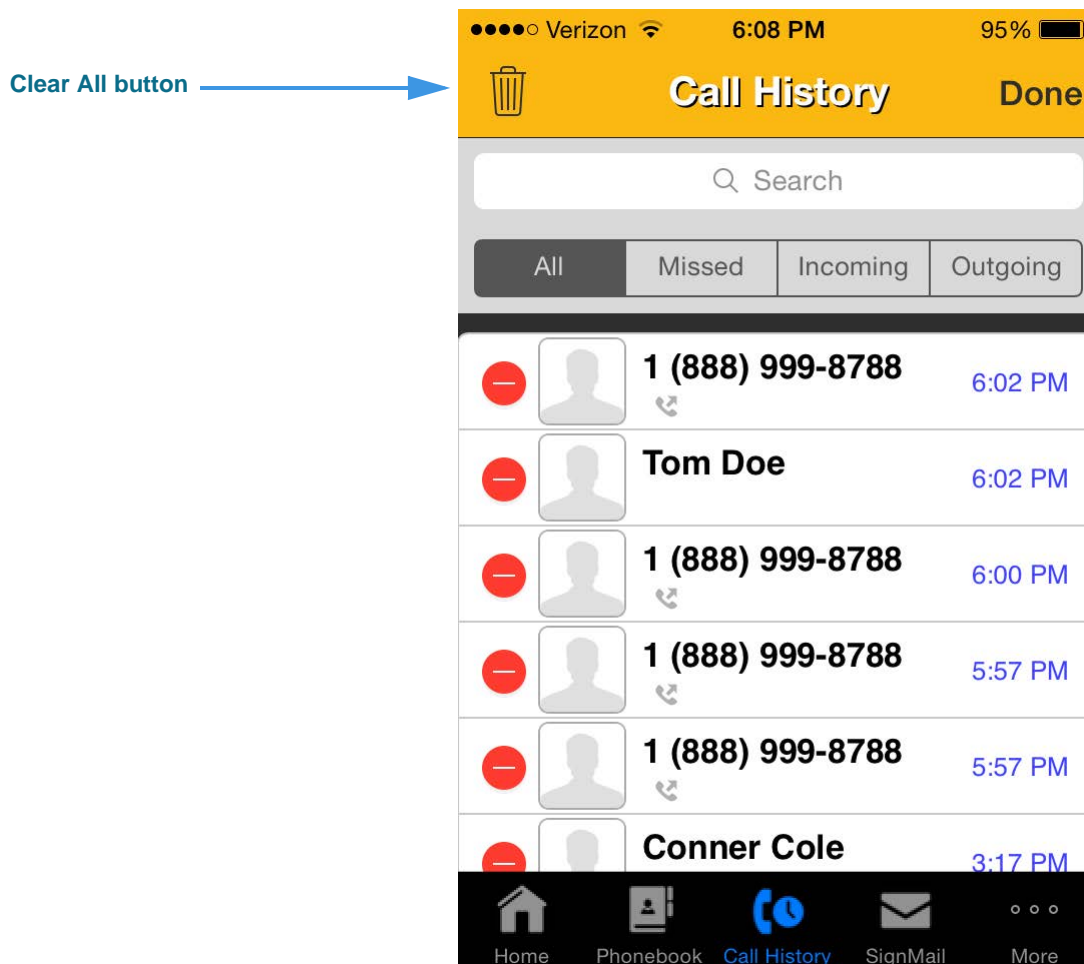


Figure 59 — Call History Edit screen

The **Clear All** button (looks like a trash can icon) will then appear on the screen. You can use this button to permanently delete *all* calls from the list at once. Keep in mind that you *cannot* recover deleted call records.

Note: Most often, you will want to delete calls one at a time instead of the entire list all at once. See **Step 6 on Page 63** to see how to delete individual calls. Remember, you cannot recover any call records that you delete.

Step 3. Tap the **Clear All** button to open the dialog shown below.

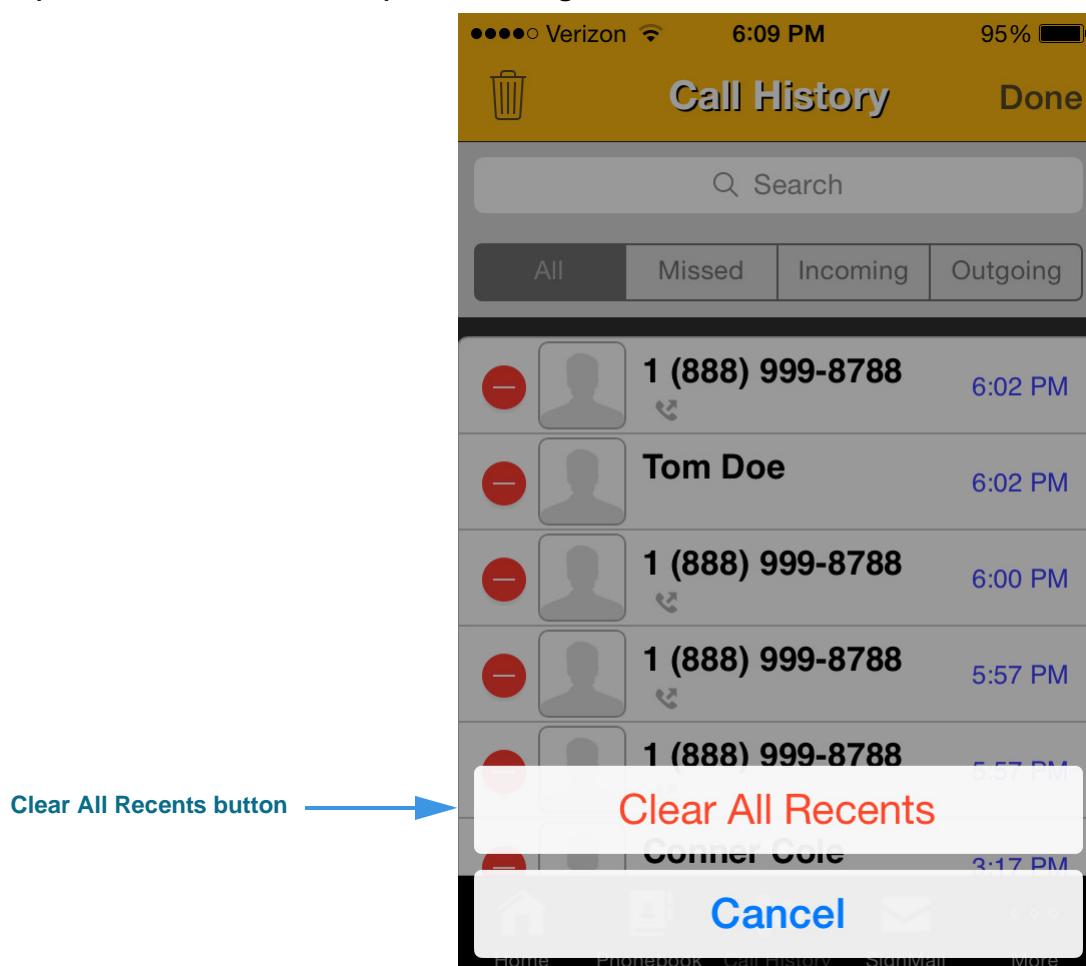


Figure 60 — Clear All Recents button

Step 4. If you are certain that you want to delete all calls at once, tap the **Clear All Recents** button. Otherwise, tap **Cancel** to dismiss the button without deleting.

Note: Do NOT tap the button unless you are certain you want to delete all your recent calls. You will NOT be asked to confirm the deletion of all calls. You CANNOT recover deleted calls.

Step 5. To delete an individual call from a Call History screen call list, you must first reveal the **Delete Item** button for that call. The **red minus sign (-)** icon to the left of each number/name in the list is the **Delete Item** button.

See Call History

Step 6. Tap the **Delete Item (-)** button to reveal the **Delete** button shown below.

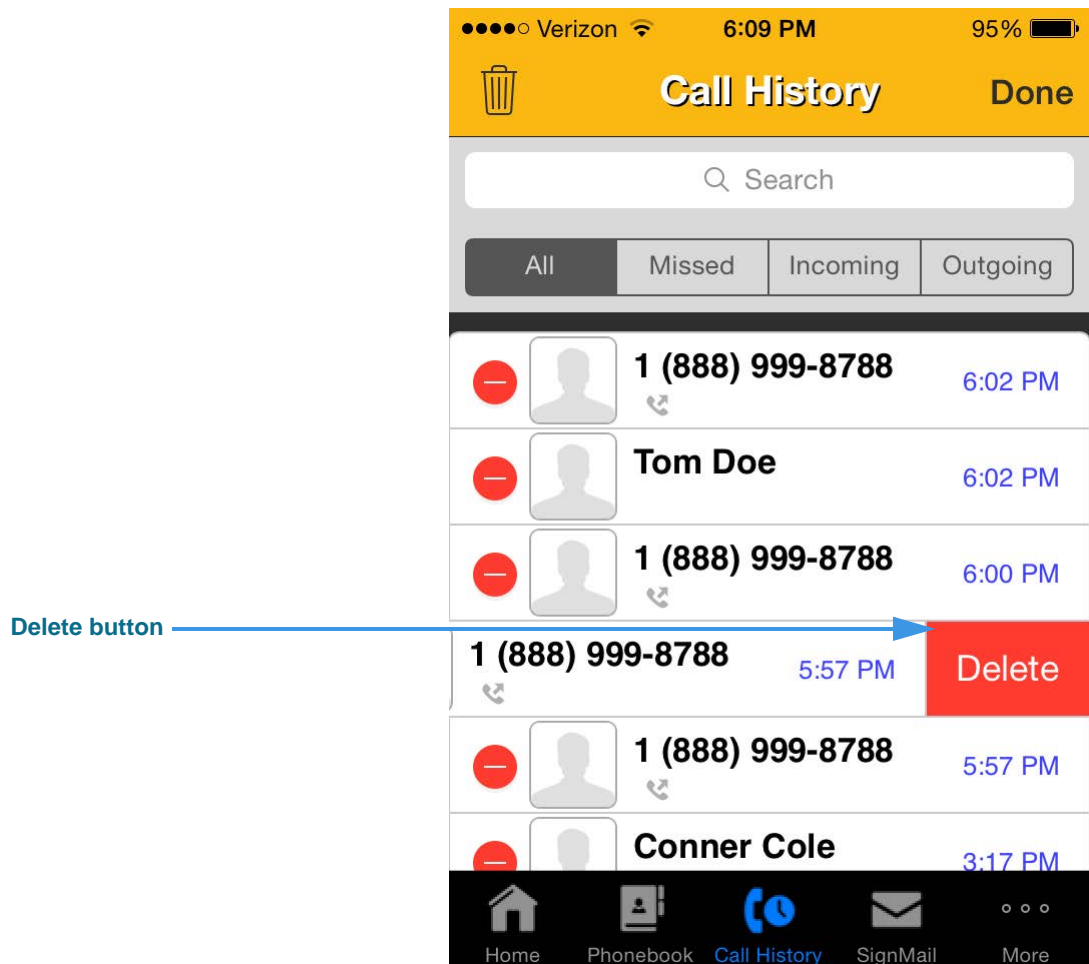


Figure 61 — Delete button

Notice that a **Delete** button has been revealed for the selected call. You can use this button to permanently remove this call from the list. *There is no confirmation dialog for deleting one call at a time.* When you tap the **Delete** button, the call will be immediately and permanently removed. You *cannot* recover deleted calls.

Step 7. If you are certain that you want to delete this call, tap the **Delete** button. Otherwise, tap anywhere on the screen to hide the button without deleting.

Add a Profile Photo

ntouch Mobile's Profile Photo feature lets you take a snapshot photo of yourself using your device's camera. Profile photos are stored with your Sorenson profile record.

When you make outgoing calls to other Sorenson endpoint users, your profile photo will be displayed in the incoming call dialog and will also appear in the Call History, SignMail and Phonebook lists if a contact record for your phone number is saved on the endpoint.

You have the option to choose how widely you will share your profile photo. You can choose to share your profile photo with *everyone* or you can choose to limit the sharing to *only those contacts* which are stored in your Phonebook. Do not add a profile photo if you never want anyone to see your photo.

To Add a Profile Photo

Step 1. Tap the **More** button to open the screen shown below.

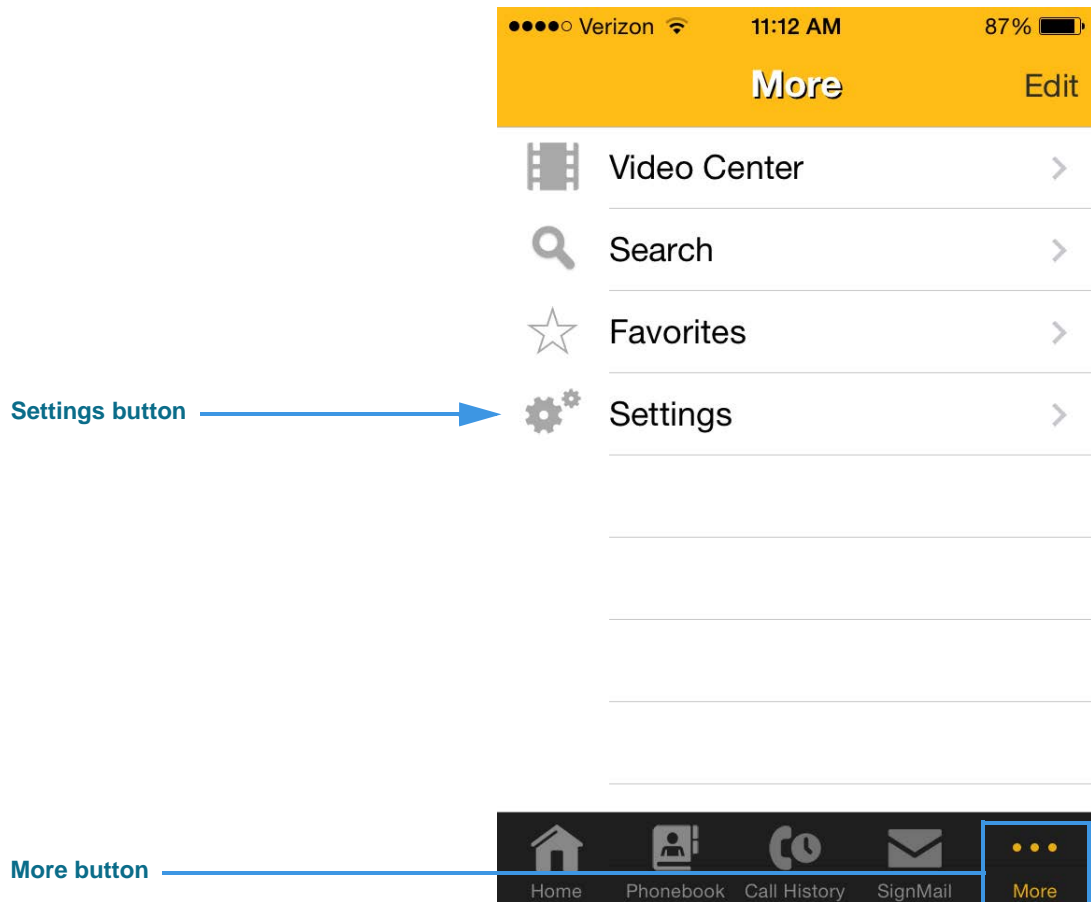


Figure 62 — Settings button on *More* screen

Add a Profile Photo

Step 2. Tap the **Settings** button to display the screen shown below.

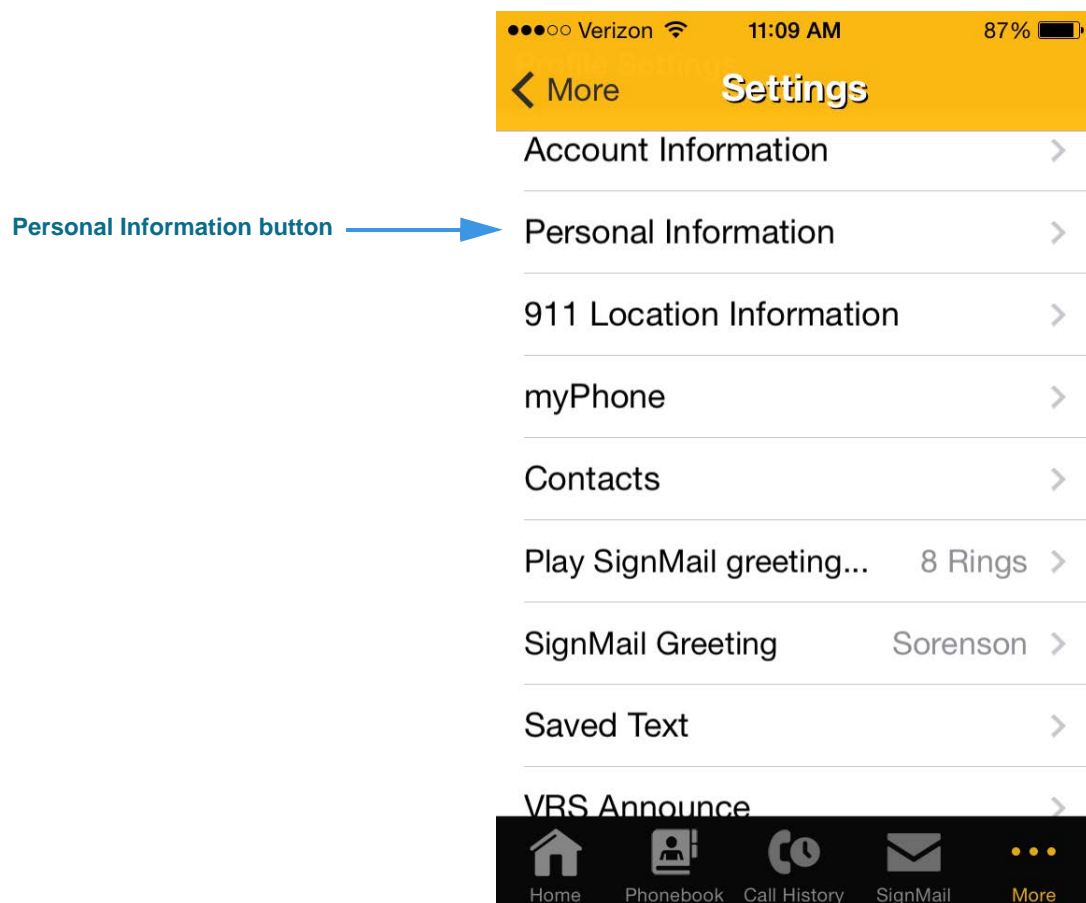


Figure 63 — Personal Information button on *Settings* screen

Step 3. Tap the **Personal Information** button to display the screen shown below.

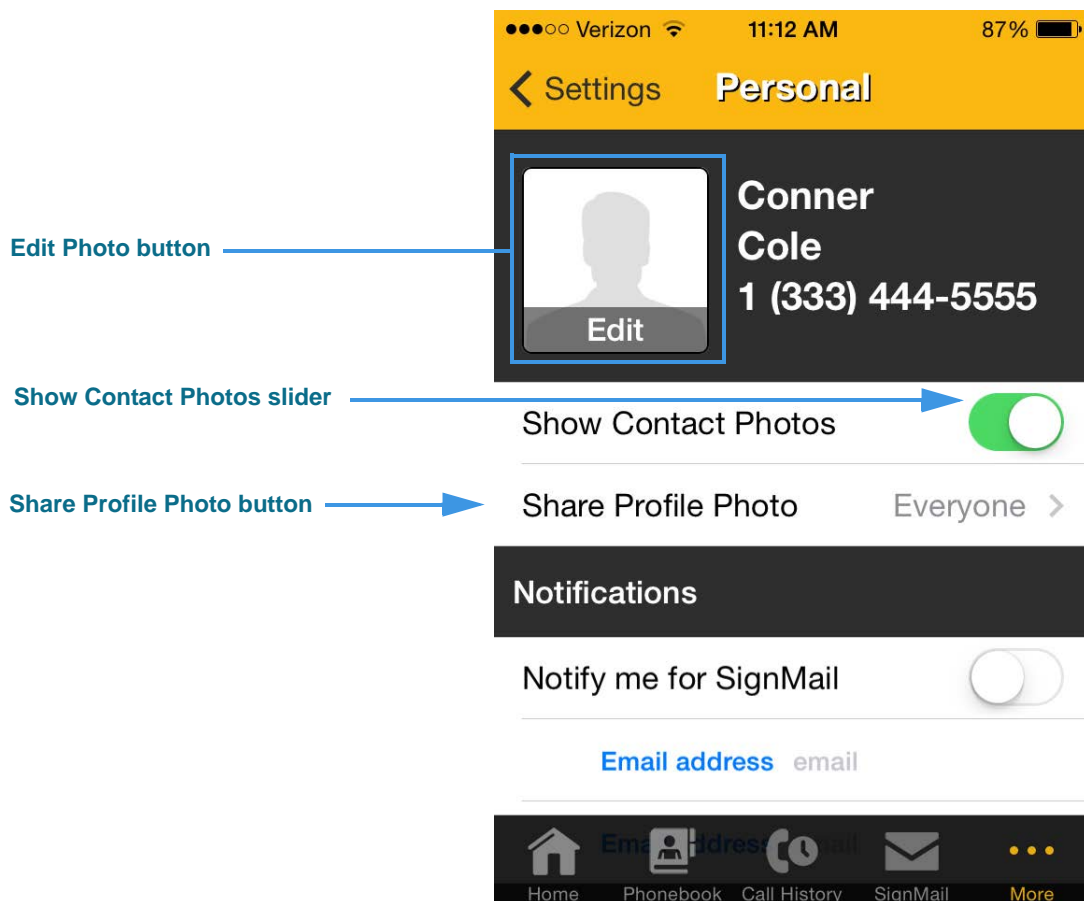


Figure 64 — Profile Photo buttons on *Personal* screen

Notice the **Share Profile Photo** button. You can choose to share your profile photo with *everyone* or *only with contacts* in your Phonebook. The button will read “Everyone” or “Contacts” respectively for these two choices. If you do not want anyone to see a profile photo of you, then do not add one.

The **Show Contact Photos** slider is used to enable or disable the Contact Photos feature. Disabling Contact Photos does not hide your profile photo, if you have added one.

The **Edit Photo** button is used to add, change or remove a profile photo.

Add a Profile Photo

Step 4. Tap the **Edit Photo** button to display the pop-up menu shown below.

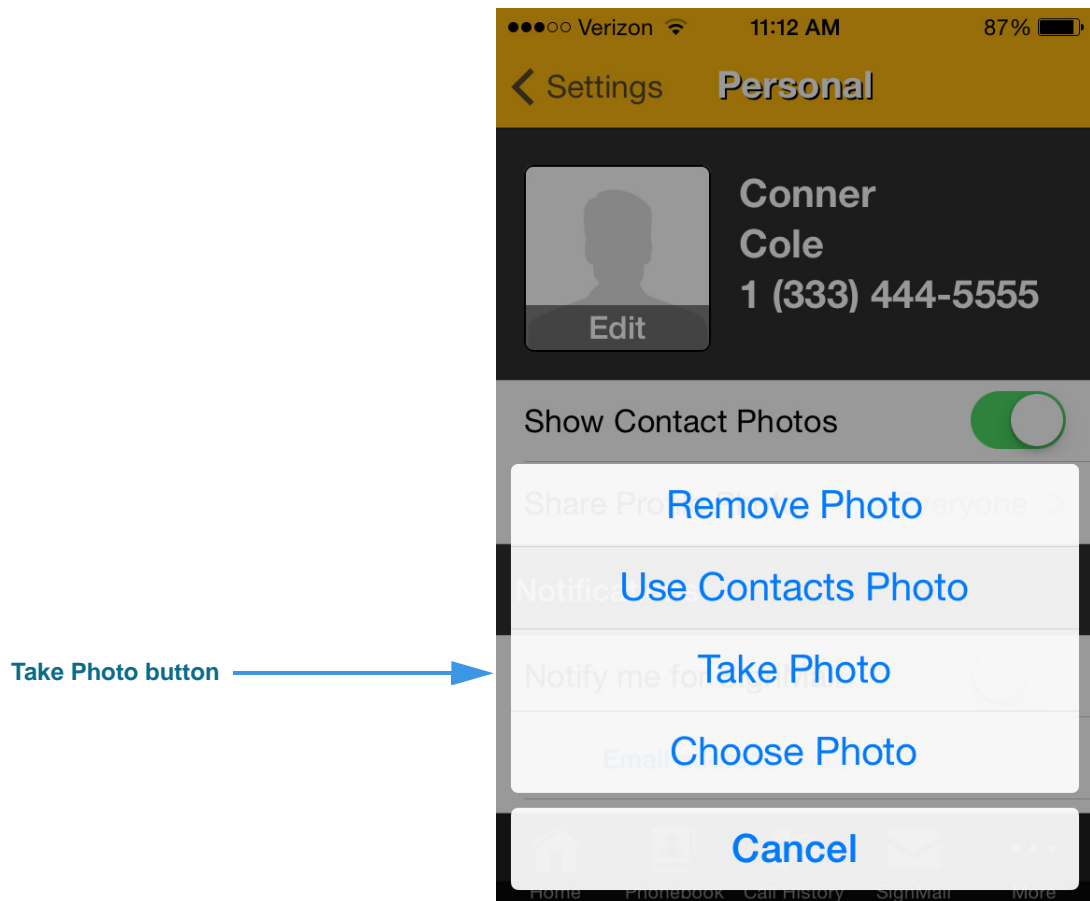


Figure 65 — Profile Photo buttons on *Personal* screen

Tapping the **Edit Photo** button has opened a pop-up menu containing these options:

- Select the **Remove Photo** button to remove the current photo from your profile.
- Select the **Use Contacts Photo** button to use the current photo, if any, stored with your device's user profile.
- Select the **Take Photo** button to use your device's camera to take your photo.
- Select the **Choose Photo** button to find and select a photo from your device's "Camera Roll" instead of taking a photo.
- Select the **Cancel** button to cancel and exit the change photo function.

Step 5. Tap the **Take Photo** button to display the screen shown below.

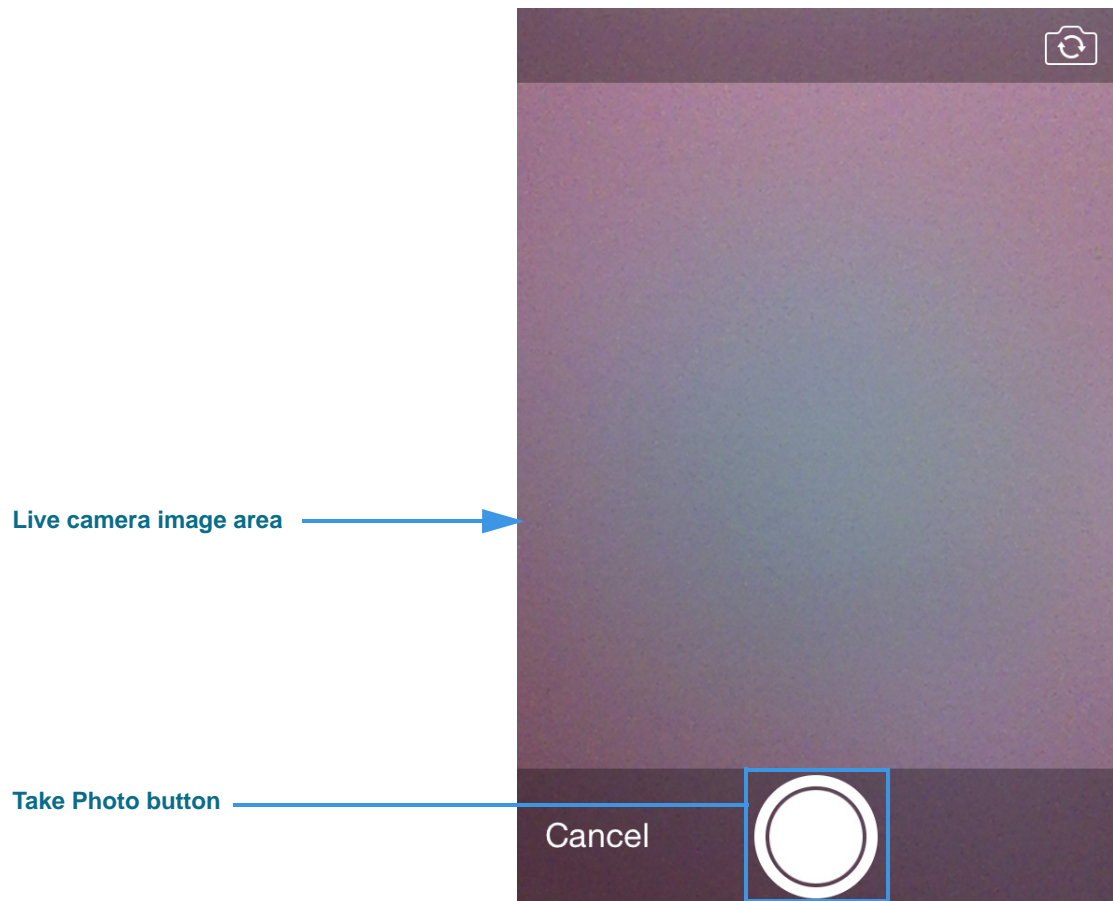


Figure 66 — *Take Photo* screen

Notice the round, unlabeled white button below the camera image area. After positioning the device to show the image you want, tap this button to take the photo.

Add a Profile Photo

- Step 6. Position yourself so that the live camera image area shows the photo you want to take. Then tap the white, unlabeled **Take Photo** button to take the photo and display the screen like the example shown below.

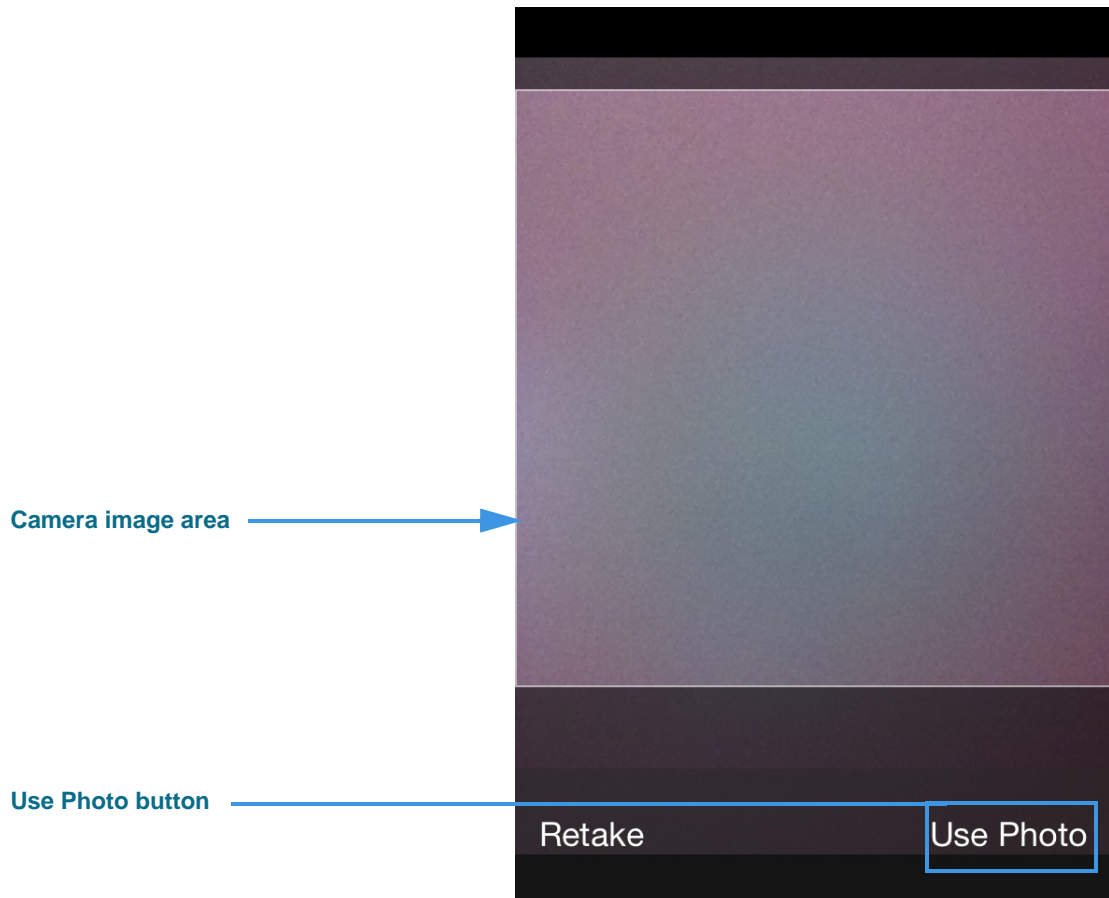


Figure 67 — Use or Retake Photo screen

This screen shows the photo that you captured at the previous screen. The two buttons at the bottom of the screen let you **Retake** the photo or **Use Photo** as your Profile photo.

You can repeat the process of taking a photo until you are satisfied with the results.

Step 7. Tap the **Use Photo** button to display the screen shown below.

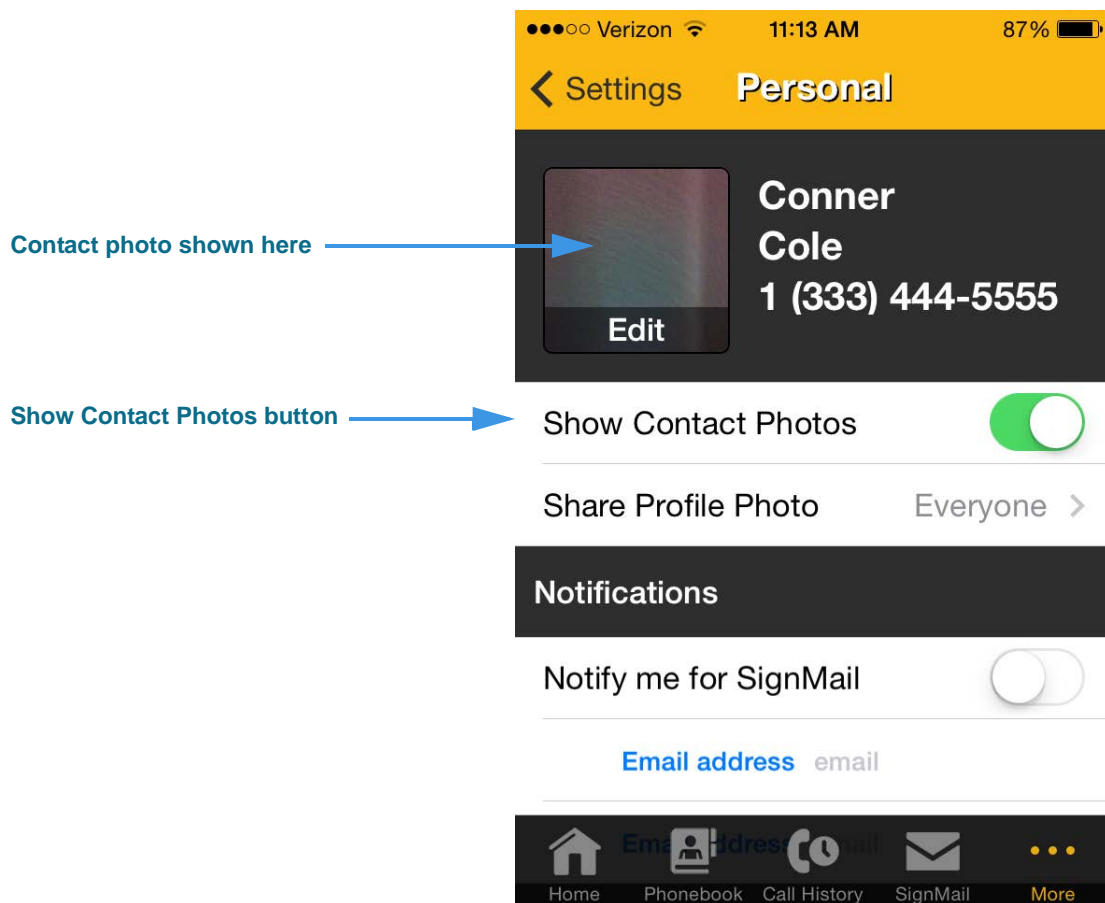


Figure 68 — *Personal* screen showing Profile photo

Notice that the photo you took at the previous screen is now in the Profile photo image area in the center of the *Personal* screen. The photo has been saved to your Sorenson account. To turn on the display of contact photos for the contacts in your Phonebook, you must turn on (slide to green to enable) the **Show Contact Photos** slider.

Add a Profile Photo

To Add a Photo to a Contact

You can add a photo to any of your Sorenson contacts. You can add the photo to an existing contact or at the time you create a new contact record. To use contact photos, you must first turn on (enable) the display of contact photos on the *Personal* screen.

- Step 1. Tap the **Phonebook** button to open the Phonebook screen.
- Step 2. Tap the **Sorenson Contacts** button to open your Contacts list as shown below.

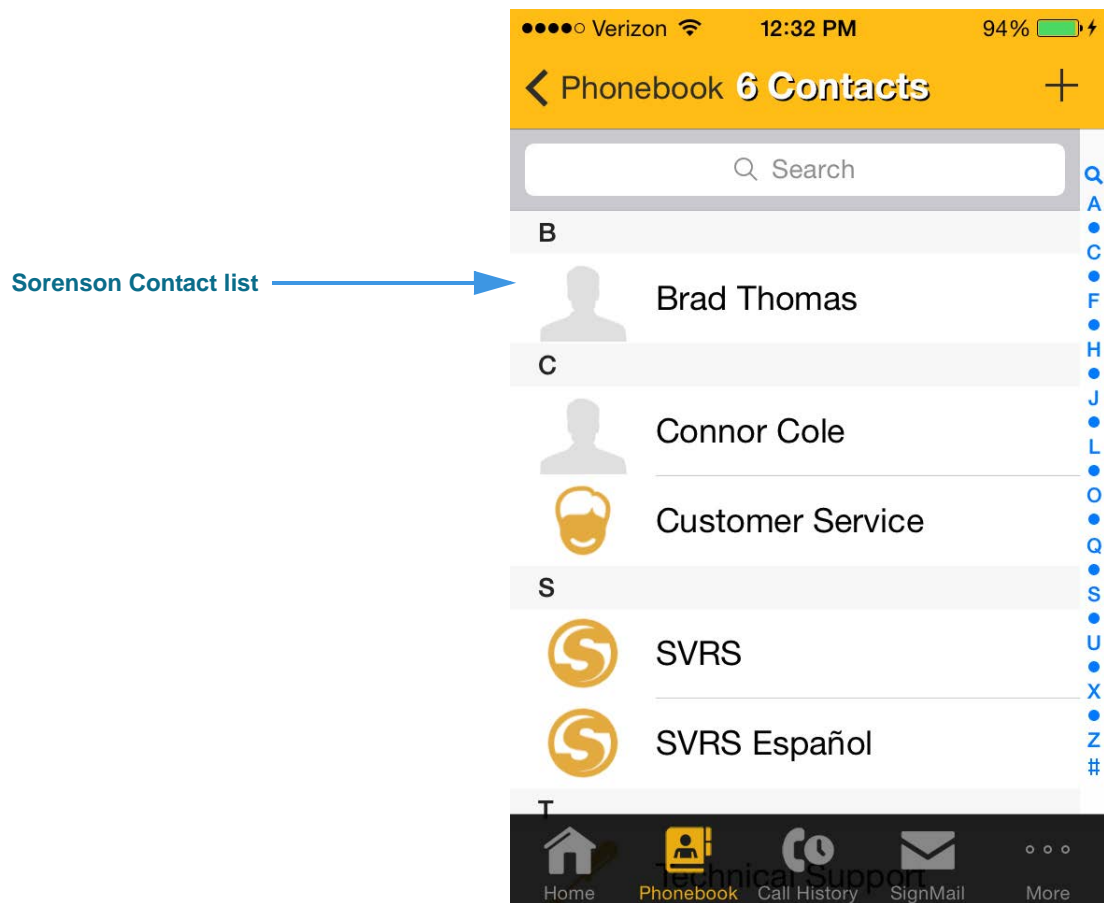


Figure 69 — Sorenson Contacts list screen

- Step 3. Tap one of your **existing contact records** to display a screen like the example shown below.

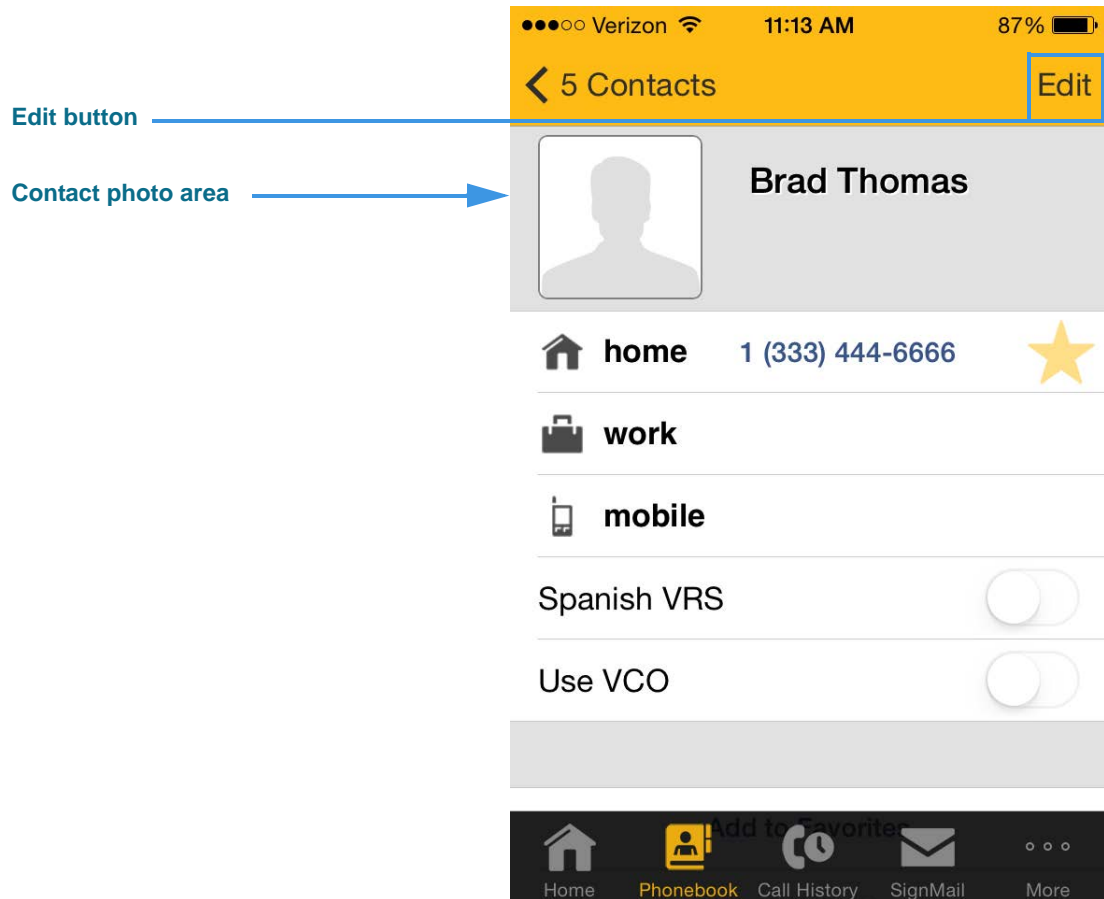


Figure 70 — Contacts screen

Notice the generic icon in the contact photo area. To add or change the photo, you must first select to edit the contact record by tapping the **Edit** button.

Add a Profile Photo

Step 4. Tap the **Edit** button to display the screen shown below.

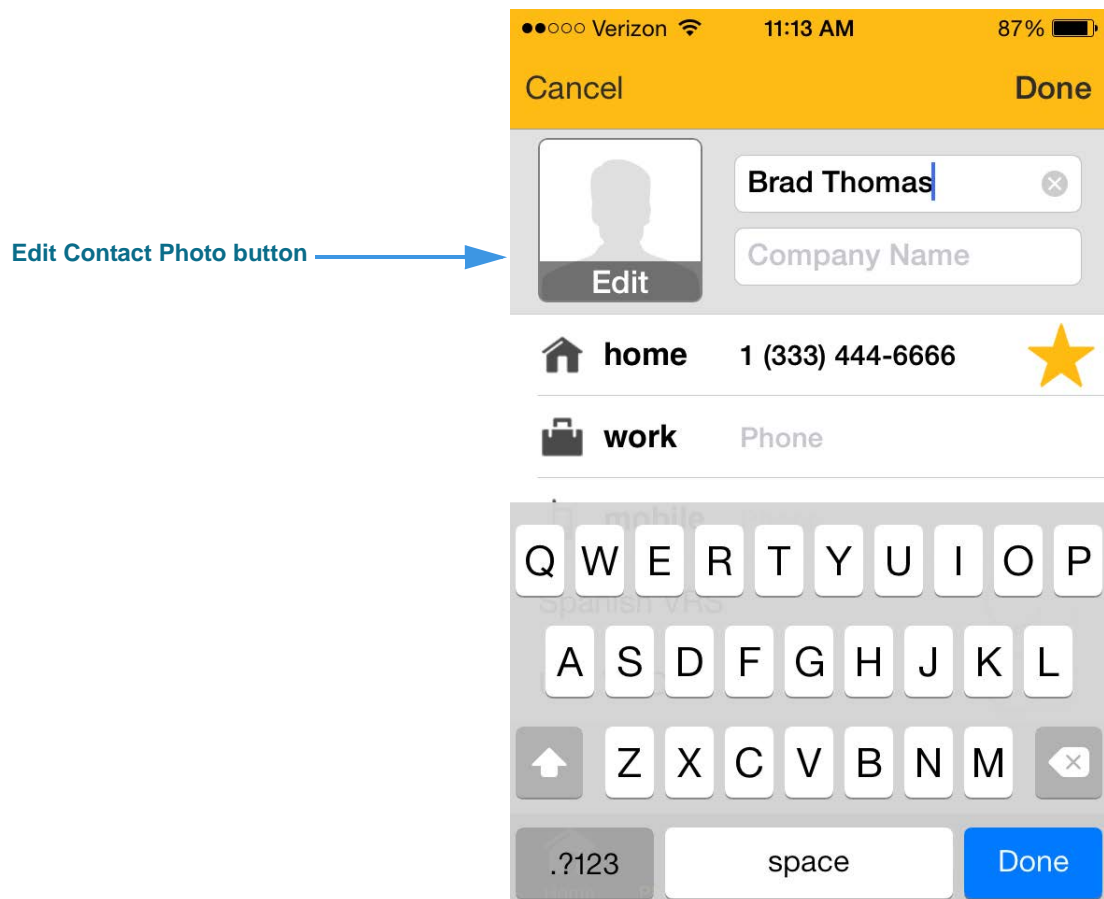


Figure 71 — Edit contact screen

Notice that the on-screen keyboard has appeared to allow you to edit the name and phone numbers for this contact. The contact photo display area has turned in the **Edit Contact Photo** button which you must tap to change the photo.

Step 5. Tap the **Edit Contact Photo** button to display the screen shown below.

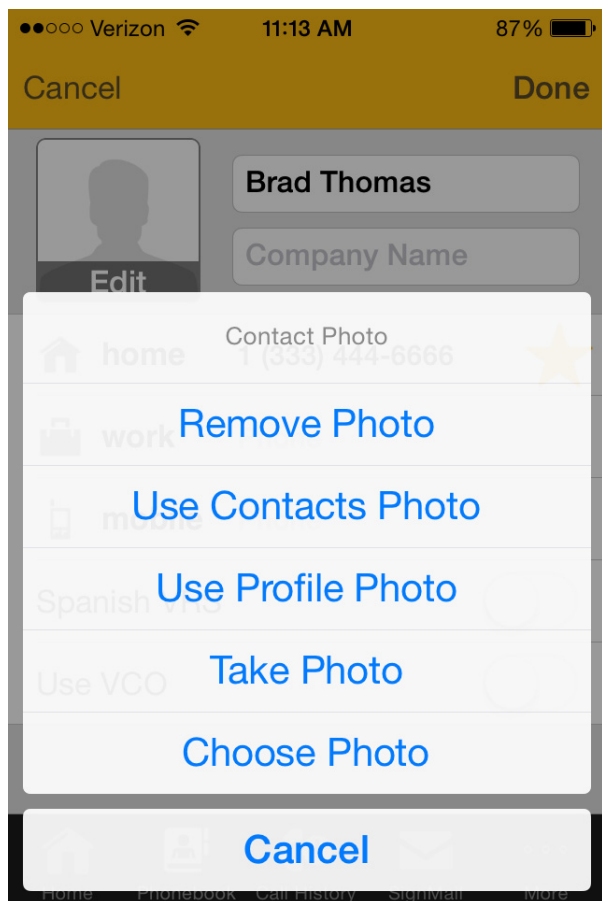


Figure 72 — Edit contact screen

Tapping the **Edit Contact Photo** button opens a pop-up menu containing these options:

- Select the **Remove Photo** button to remove the current photo from the contact.
- Select the **Use Contacts Photo** button to use the current photo, if any, stored with your device's Contact's app.
- Select the **Use Profile Photo** button to use the current profile photo, if any, stored for this Sorenson VRS user. The contact must be a Sorenson VRS user for this option to be available.
- Select the **Take Photo** button to use your device's camera to take a photo for this contact.
- Select the **Choose Photo** button to find and select a photo from your device's "Camera Roll" instead of taking a photo.
- Select the **Cancel** button to cancel and exit the change photo function.

Step 6. After you select one of the buttons to add a photo to this contact, you can fill in (or edit) the fields on the screen for the contact's name and phone number(s). You can also set the Spanish VRS and/or VCO options for this contact.

Use the Phonebook

ntouch Mobile's Phonebook button is used to open the *Phonebook* screen. You can save names and phone numbers as Sorenson Contacts which are stored by the ntouch app. You can also choose to access the iOS device's own Contacts app, but you cannot edit the those contacts from within the ntouch Mobile app.

The Phonebook's Favorites feature lets you create a list of favorite contacts. You can store your most important contacts in the Favorites list to make them easy to find quickly. Using the Favorites list is helpful if you have a large number of contacts. You can add a phone number to your Favorites list at the time you create the contact or afterwards.

To Call a Sorenson Contact

Step 1. Tap the **Phonebook** button to open the screen shown below.

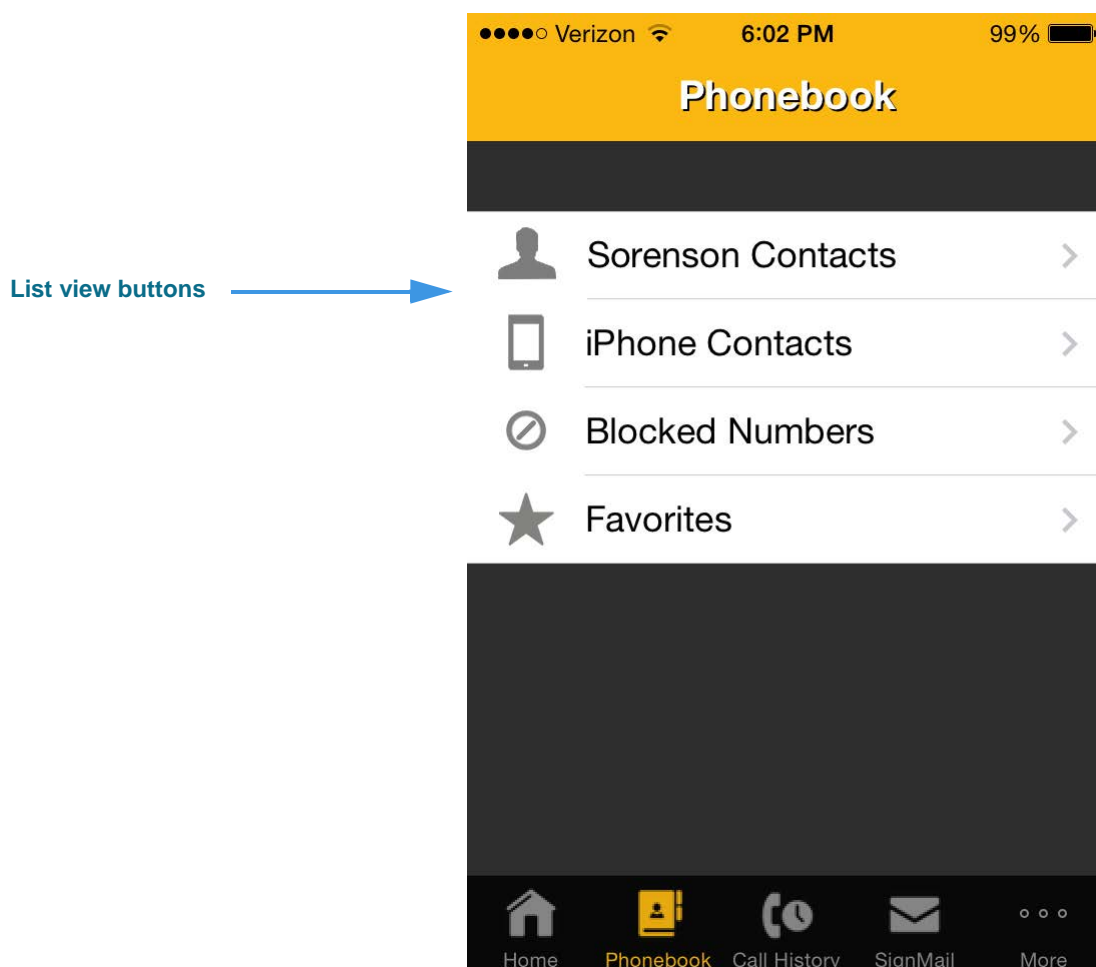


Figure 73 — Phonebook screen

Notice the four list view buttons. You can choose to view the Sorenson Contacts list, the contacts stored by the iOS device itself, your Blocked list or your Favorites list.

- Step 2. Tap the **Sorenson Contacts** button to open the screen shown below. This example image shows a contact named "Conner Cole."

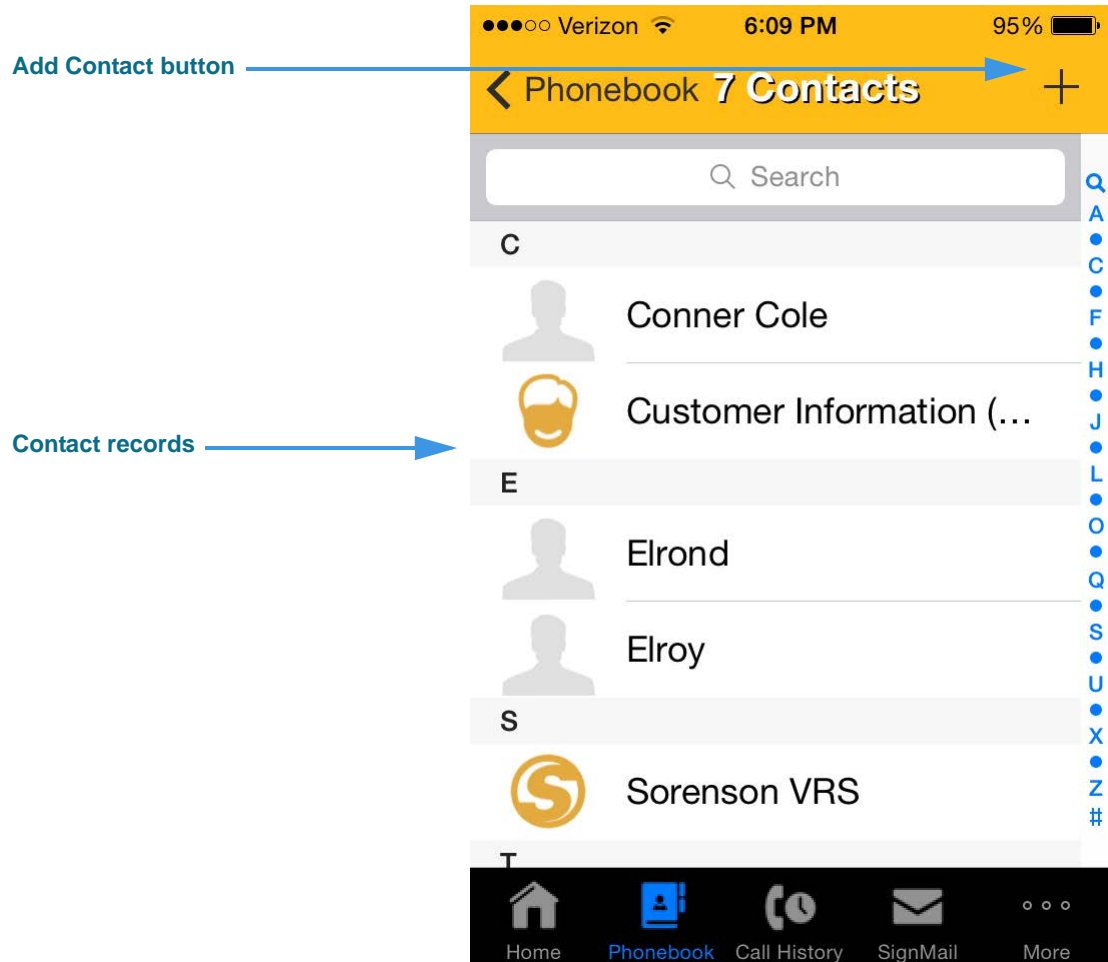


Figure 74 — Sorenson Contacts screen

This screen shows a list of all the contact records stored by the ntouch app. To view any contact, just tap on its name.

The **Add Contact (+)** button located at the top-right of the screen is used to add a new contact record to the Sorenson Contacts List.

Use the Phonebook

- Step 3. Tap the name of the contact you want to call. This example image shows a contact named “Conner Cole.”

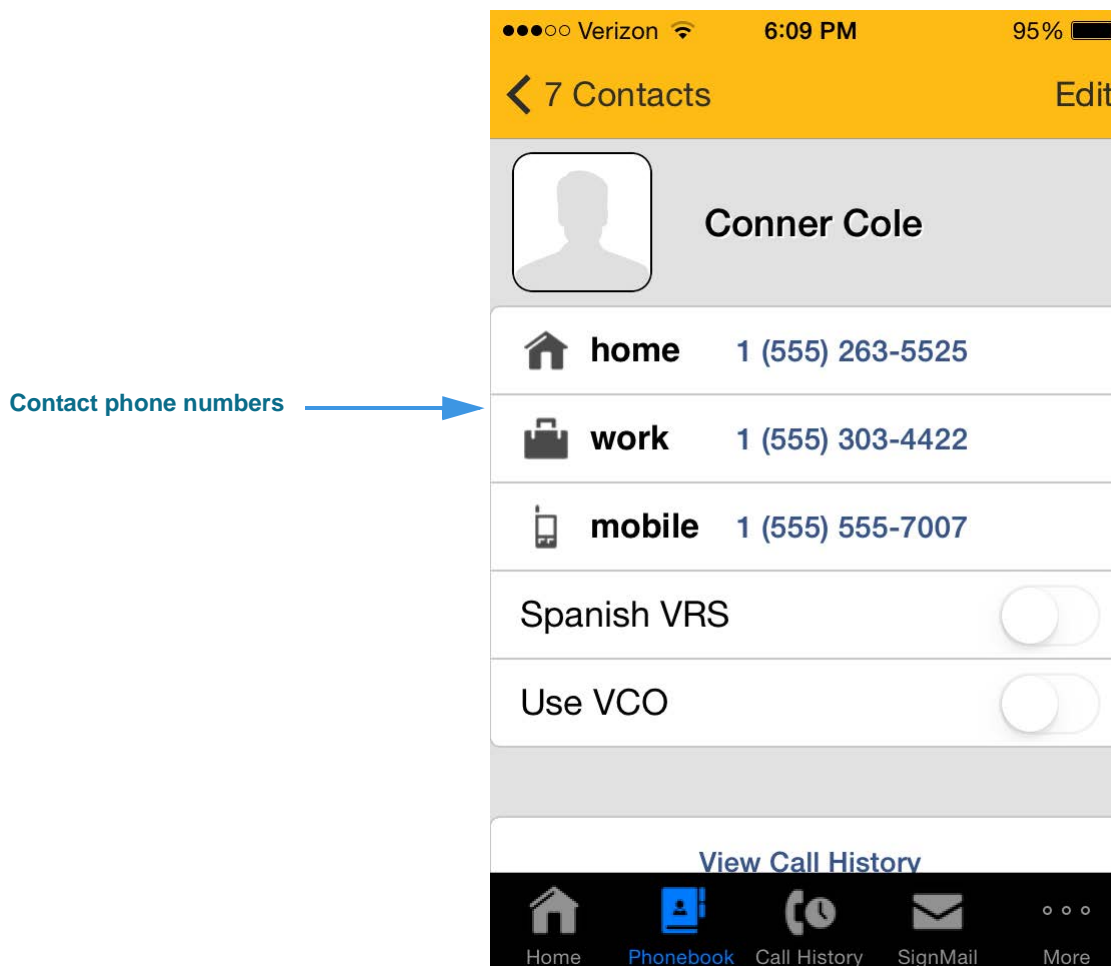


Figure 75 — Contact record opened

This example image shows three numbers are stored for this contact. You can make a call to this contact by tapping on one of the listed phone numbers. The **Use VCO** control will only appear if the 1-Line VCO feature is enabled on the *Settings* screen.

- Step 4. Tap the button that shows the **phone number** you want to call.
- Step 5. Proceed with your call as usual.
- Step 6. Hang up to end the call.

To Add a New Contact

- Step 1. Start at the **Sorenson Contacts** screen.
- Step 2. Tap the **Add Contact (+)** button to open the screen shown below.

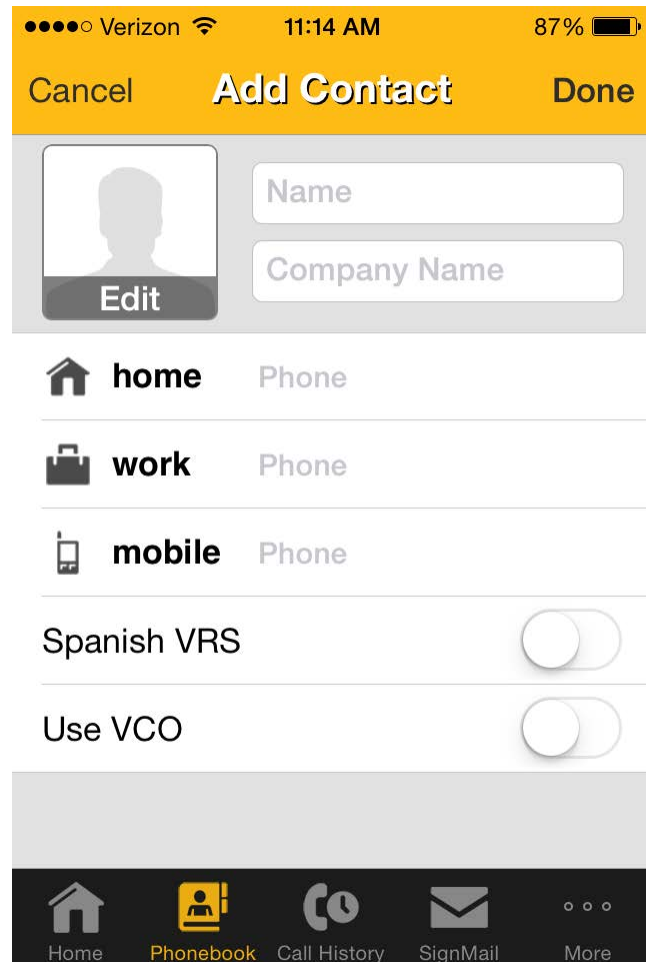


Figure 76 — Add Contact screen

To make entries in the text fields, tap on the field to open the on-screen keyboard. You can change the **Spanish VRS** and **Use VCO** controls before tapping on a text field.

Use the Phonebook

Step 3. Tap any **text field** to open the screen shown below.

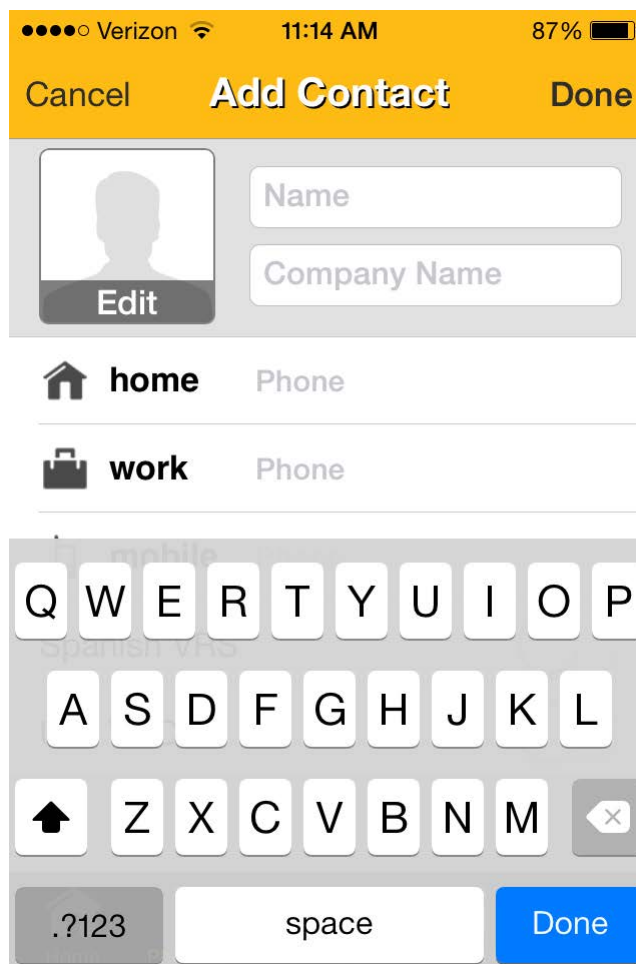


Figure 77 — Add Contact screen, keyboard opened

You must enter a **name** and at least one **phone number** for the contact. The **Company** field is optional. You can save up to three phone numbers named **Home**, **Work** and **Mobile**. You can specify whether this contact will use VCO and/or a Spanish interpreter.

- Step 4. Enter a name in the **Name** and **Company** (if needed) fields for the new contact.
- Step 5. Enter the phone numbers to be stored for this new contact in the **Home**, **Mobile**, and/or **Work** fields. You must enter at least one phone number.
- Step 6. If desired, select the **Request a Spanish VRS** checkbox to make every call to this contact a Spanish VRS call.
- Step 7. If desired, select the **Use VCO** checkbox to make VCO calls to this contact.
- Step 8. Tap the **Done** button to save the new contact.

To Edit a Contact

- Step 1. To edit a contact, tap on the **name of the contact** at the Sorenson Contacts screen to open the screen shown below.

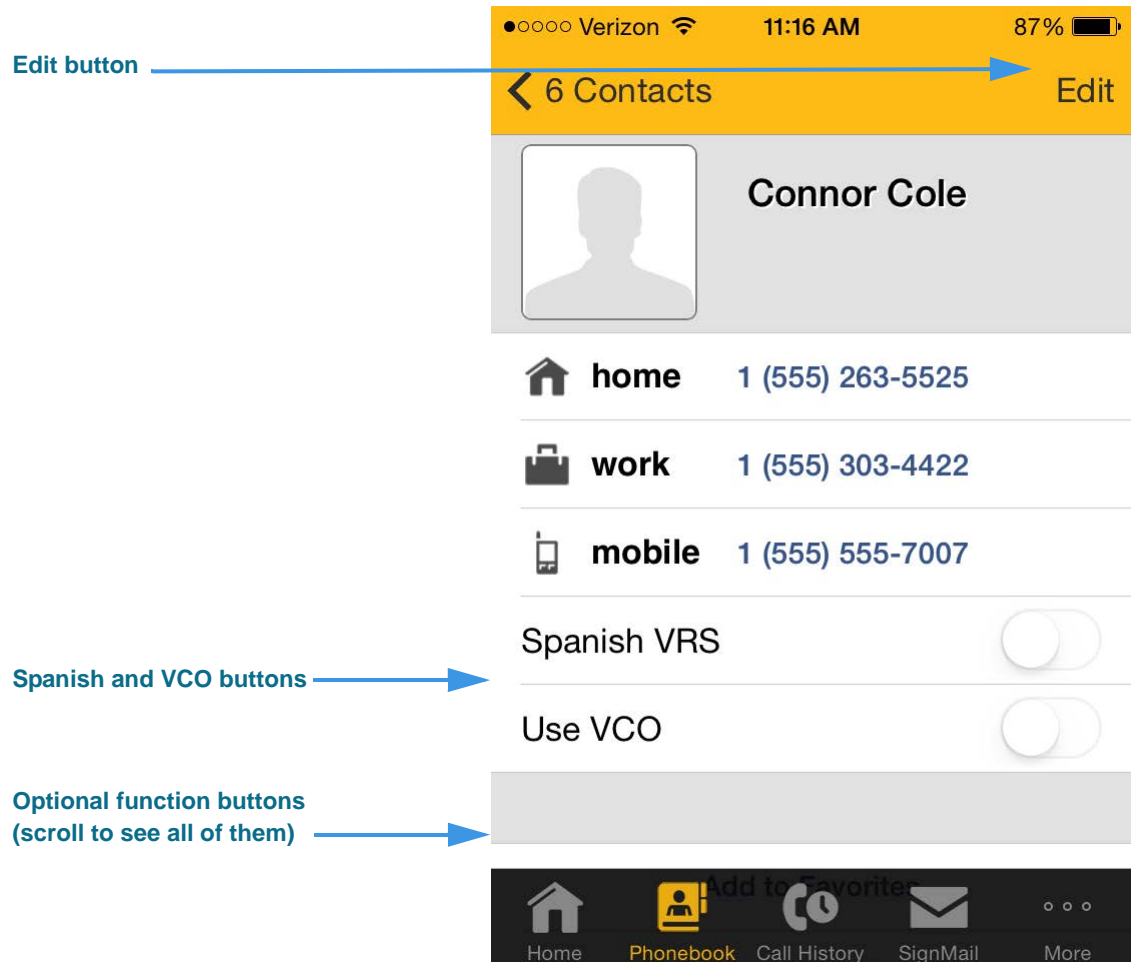


Figure 78 — Contact record screen

Notice the **Edit** button at the top-right of the screen. You must tap this button to make any edits to the name or number fields or to the **Spanish VRS** or the **Use VCO** controls.

Step 2. Scroll down the screen to reveal the buttons shown below.

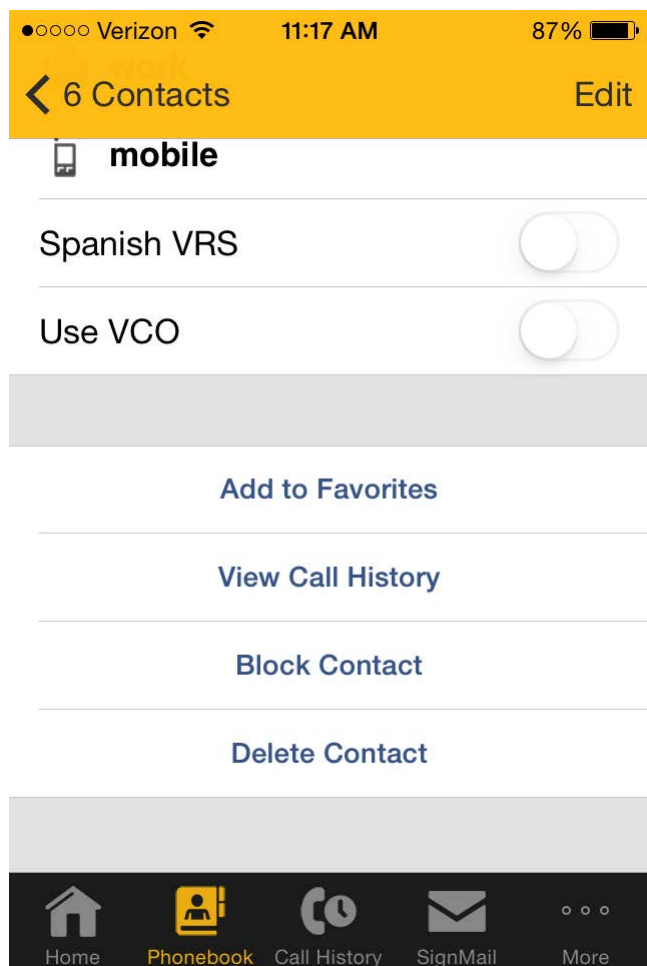


Figure 79 — Contact record screen, function buttons revealed

You can use the **Add to Favorites** button to add this contact to your Favorites list. If more than one phone number is saved for this contact, you will be asked which one you want to add to the Favorites list.

You can use the **View Call History** button to jump to the *Call History* screen where you can see all the calls made to, or received from, this contact.

You can use the **Block Contact** button to block this contact from calling you from any of the numbers stored for the contact. You have to scroll the screen to see this button.

You can use the **Delete Contact** button to delete this contact record. You have to scroll the screen to see this button.

Step 3. Tap on the **Edit** button to open the screen shown below.

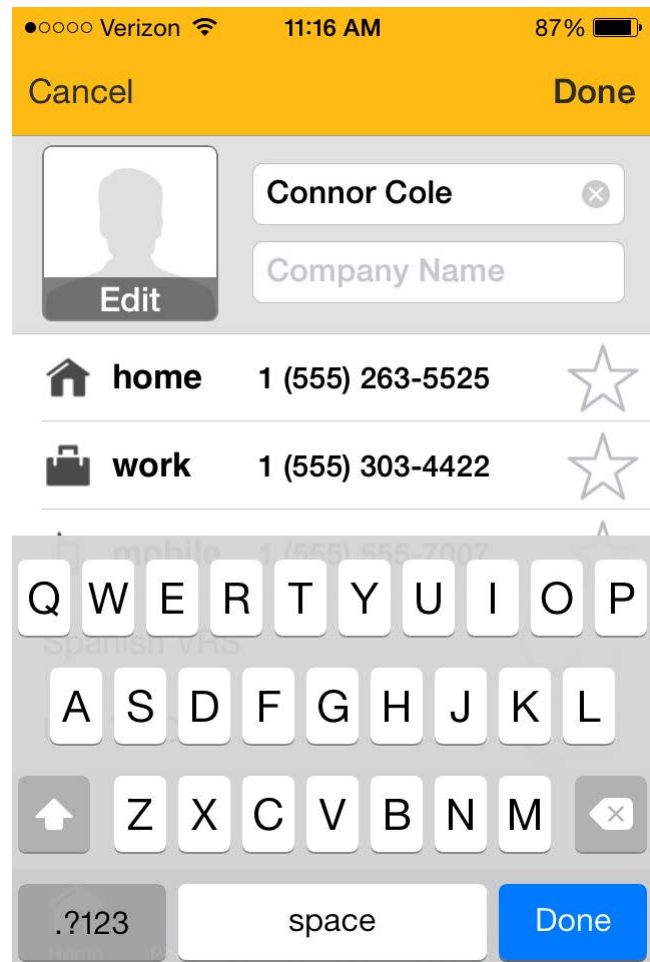


Figure 80 — Contact record screen, editing enabled

Notice that pop-up keyboard has reappeared to allow you to edit the name field. You can also now make changes to the phone numbers or other controls on the screen.

- Step 4. Make any changes that you want to the name or phone numbers stored for this contact. You can also enable or disable the **Spanish VRS** and **Use VCO** controls.
- Step 5. Tap the **Done** button when ready to save the changes made to this contact.

To See iPhone Contacts

Step 1. Start at the Phonebook screen shown below.

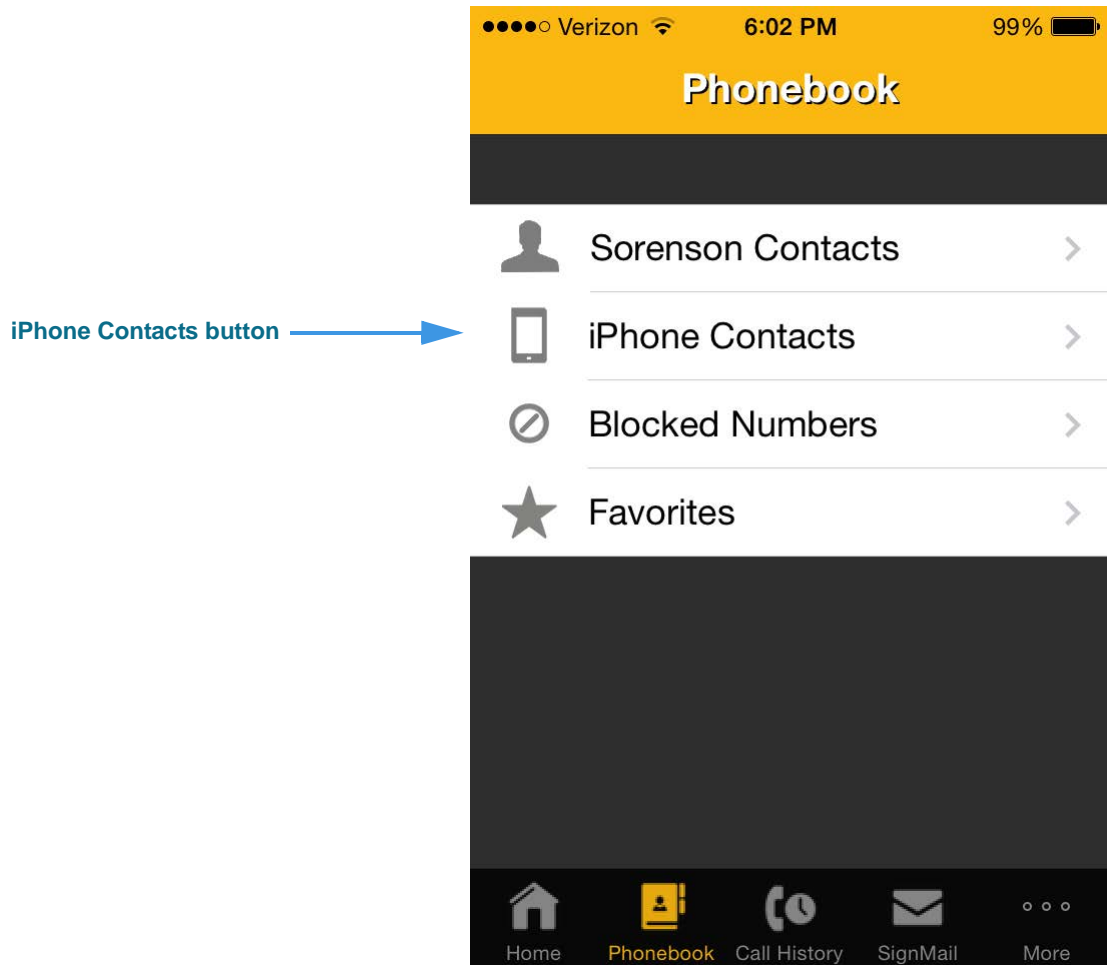


Figure 81 — Phonebook screen, iPhone Contacts button

Notice the **iPhone Contacts** button near the top of the screen.

Step 2. Tap the **iPhone Contacts** button to open the screen shown below.

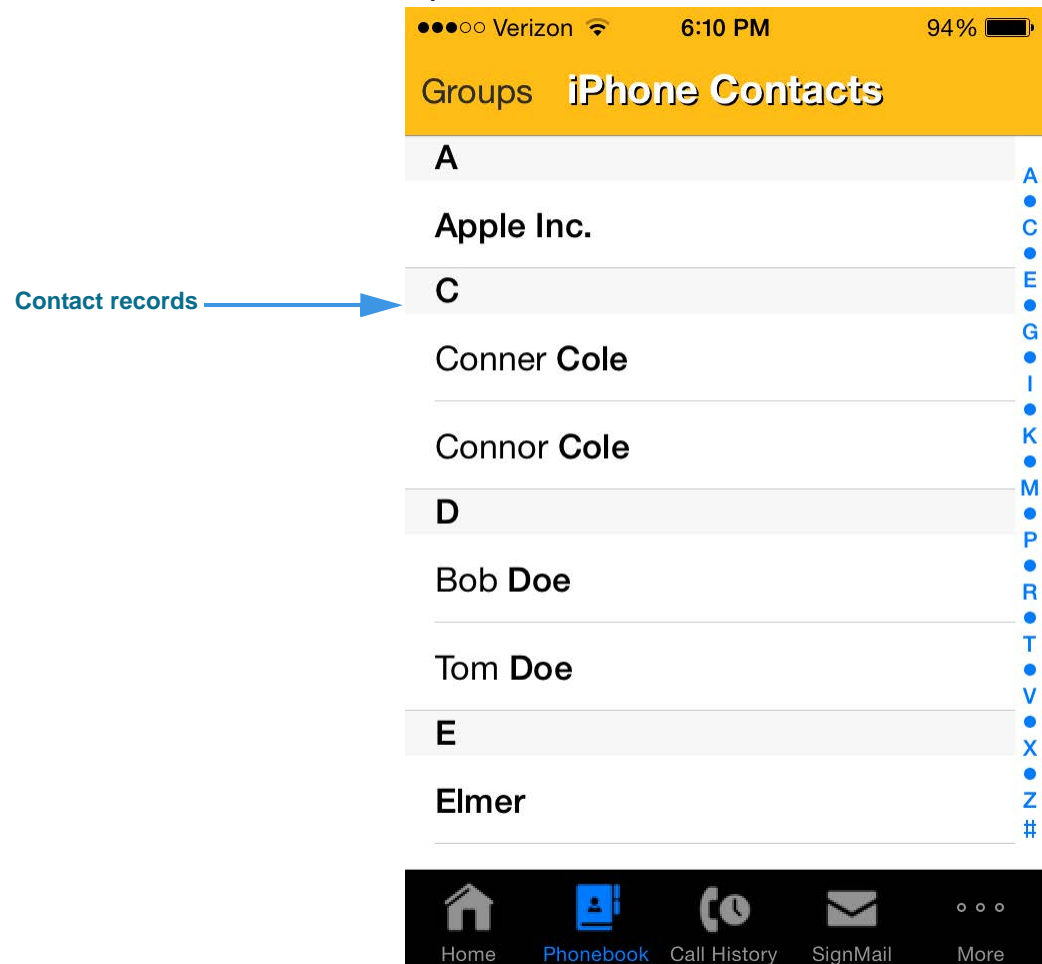


Figure 82 — *iPhone Contacts* screen

This screen shows a list of all the contact records currently stored by the iPhone's own Contacts app. To open any contact, just tap on its name.

Use the Phonebook

- Step 3. Tap the name of the contact you want to open. This example image shows a contact named “Tom Doe.”

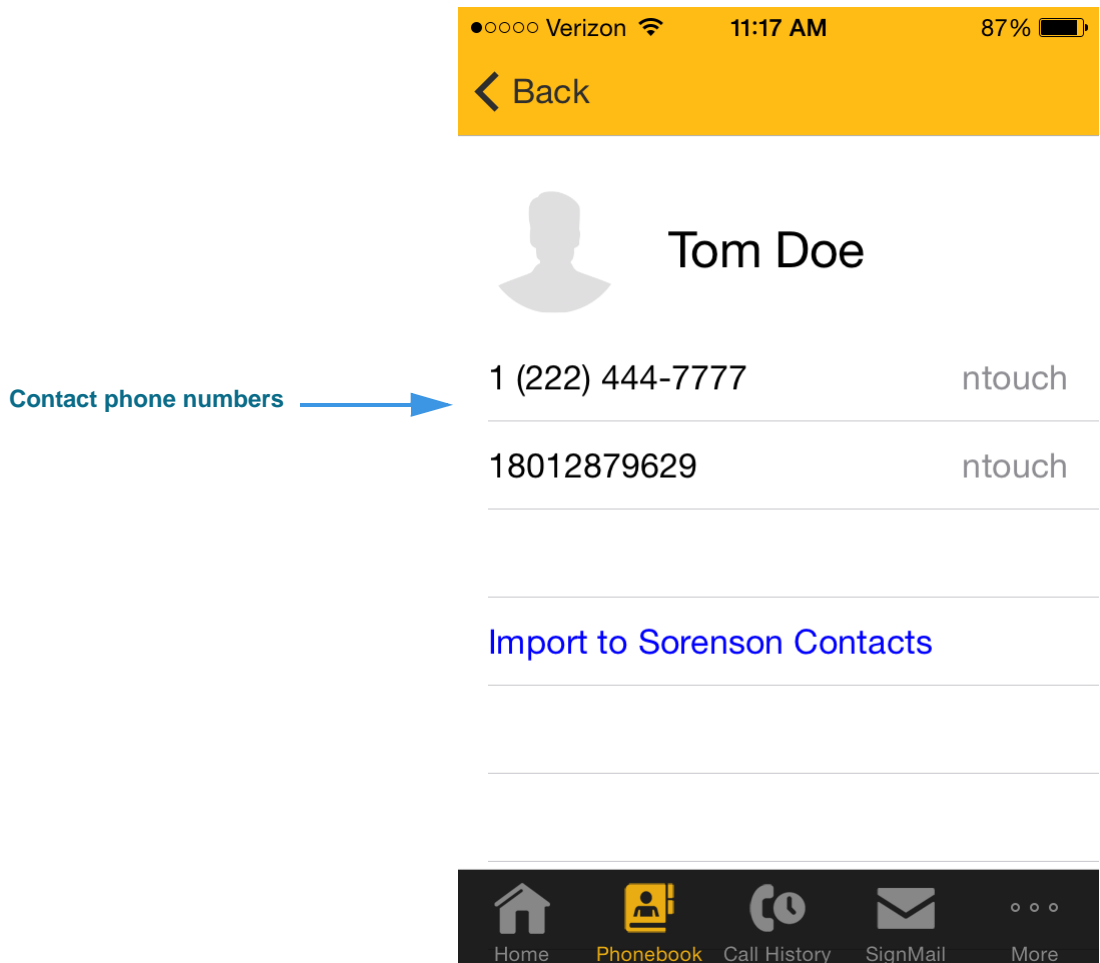


Figure 83 — iPhone Contact record opened

The phone number(s) stored for this contact are shown on the screen. Any other information, such as an email address, that you may have stored for this contact from within the iPhone’s Contacts app will also be shown.

To import this contact to the ntouch Mobile app, tap the **Import to Sorenson Contacts** button.

You cannot make any changes to the information stored for this contact from within the ntouch Mobile app. To make changes, you must open the iPad’s Contacts app.

To Add Blocked Numbers

There are three ways to add phone numbers to ntouch Mobile's Block List. You can add any existing contact to the list, you can add a new phone number directly, or you can block a number from a SignMail caller. See **Page 53** for details on blocking calls from the senders of SignMail videos you receive.

This section shows how to add a number directly. The following section shows how to block an existing contact stored in your Sorenson Contacts List.

Step 1. Start at the Phonebook screen shown below.

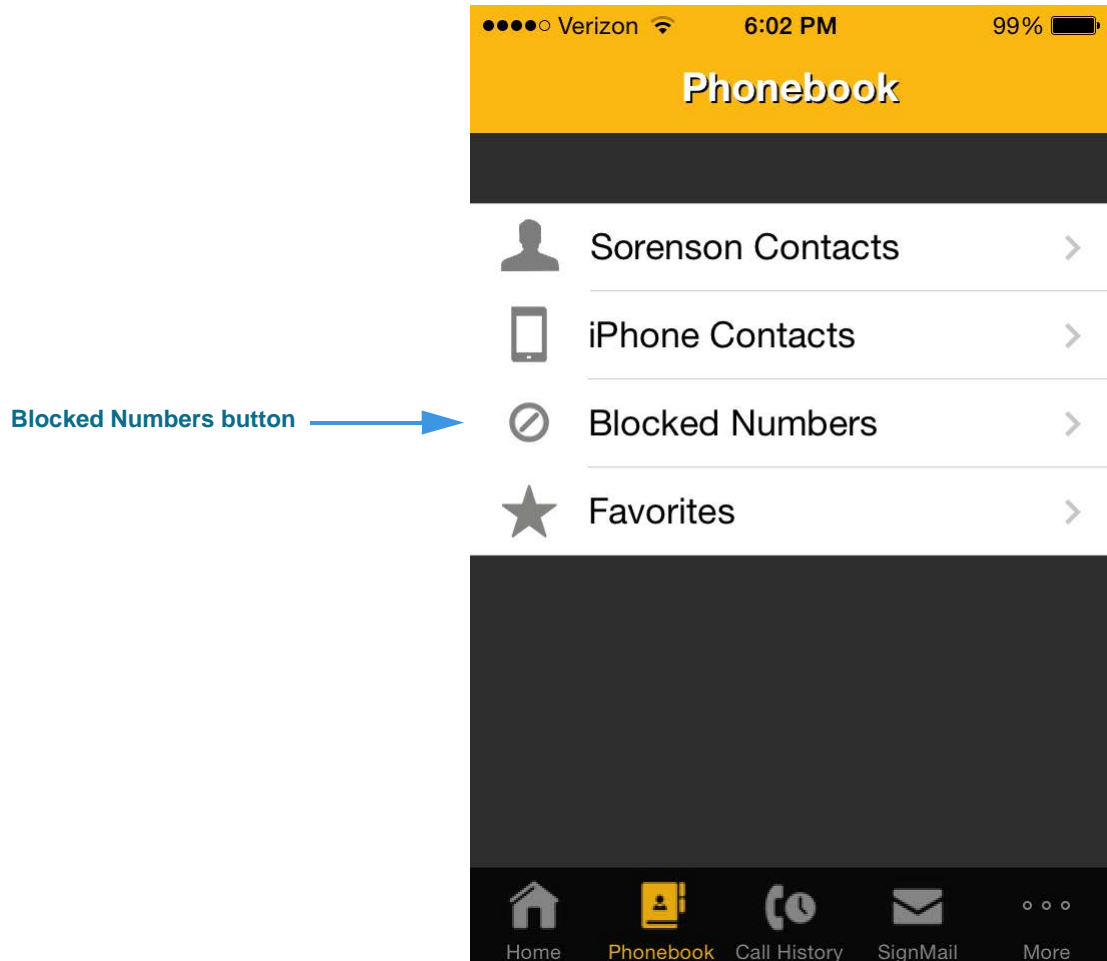


Figure 84 — Phonebook screen, Blocked Numbers button

Notice the **Blocked Numbers** button near the top of the screen.

Use the Phonebook

Step 2. Tap the **Blocked Numbers** button to open the screen shown below.

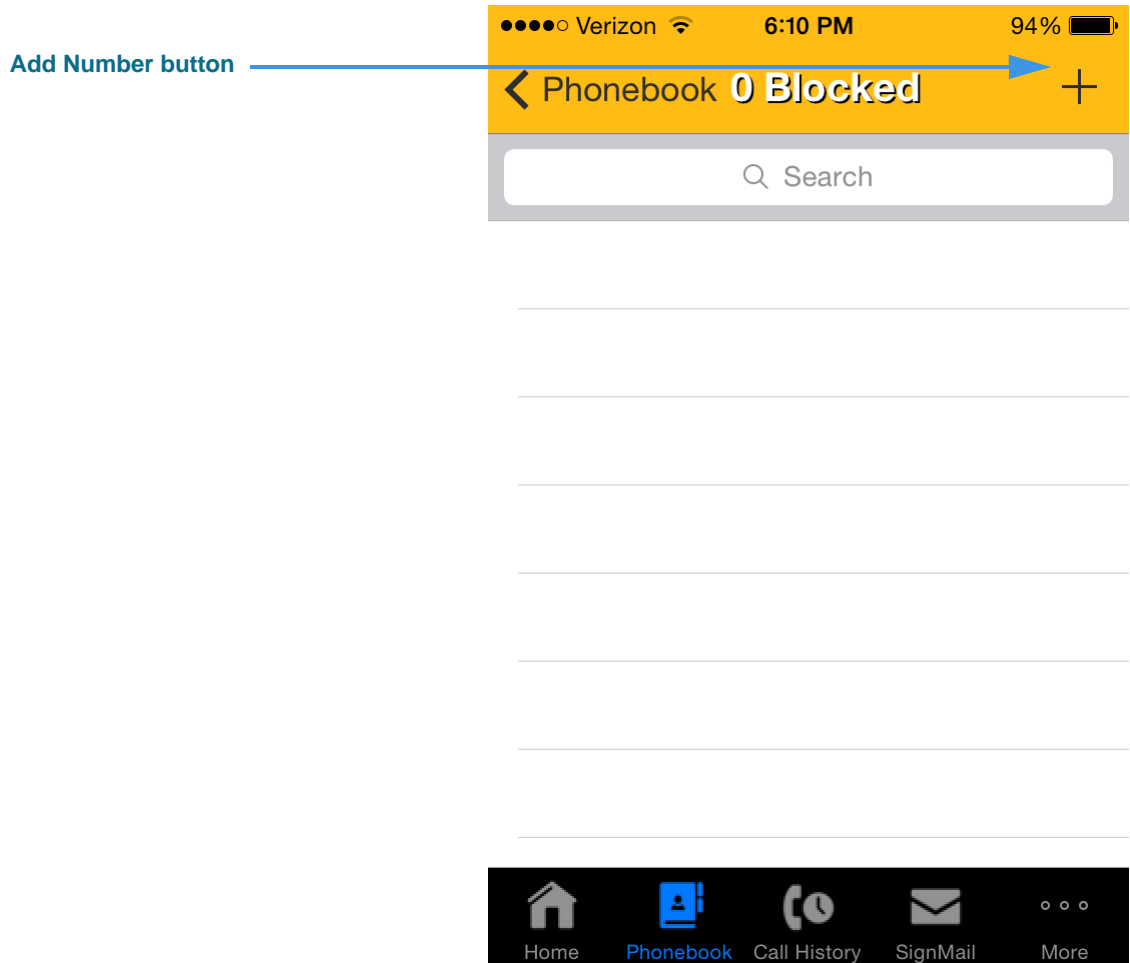


Figure 85 — *Block List* screen

This screen shows a list of all the phone numbers currently in ntouch Mobile's Block List. You can use the **Add Number** button to add a number to the list.

Step 3. Tap the **Add Number** button to open the screen shown below.

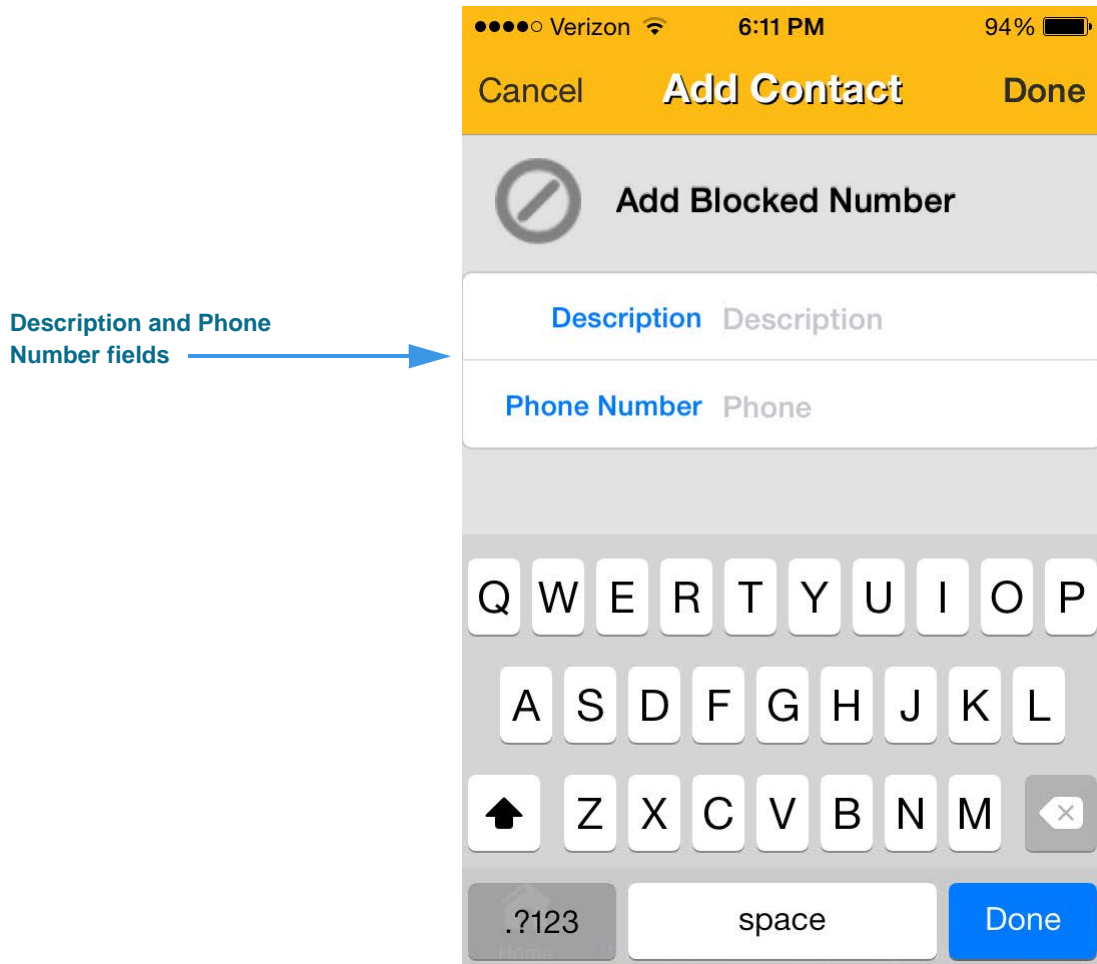


Figure 86 — Add Blocked Number screen

You must enter a description/name and a phone number into the two fields on this screen. If you do not know the person or business' name, you can enter something like "Solicitor" to identify the caller.

Step 4. Enter a description/name and a phone number.

Step 5. Tap the **Done** button to add the number to the Block List.

To Block a Contact

- Step 1. Start at the contact's record screen. Scroll the screen so that you can see the button shown below.

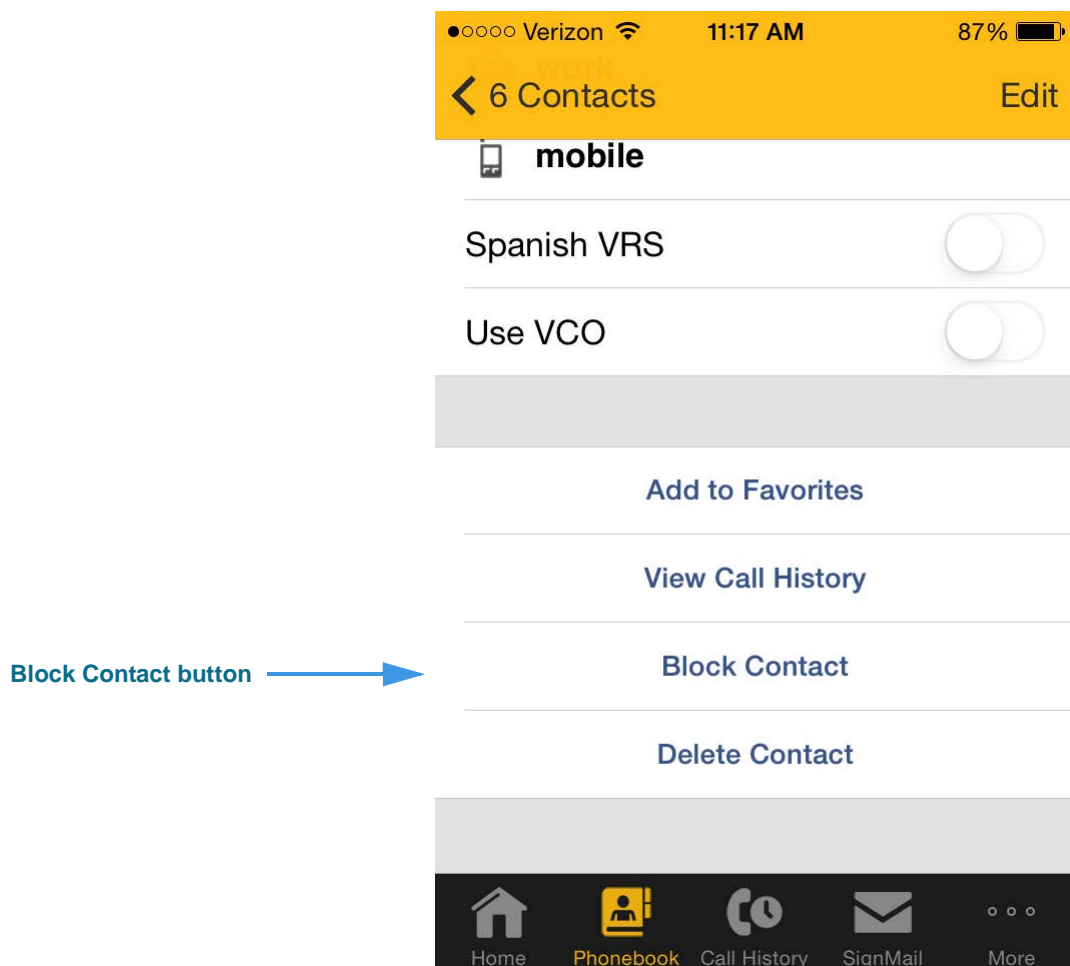


Figure 87 — Block Contact button

Notice the **Block Contact** button near the middle of the screen.

Step 2. Tap the **Block Contact** button to open the dialog shown below.

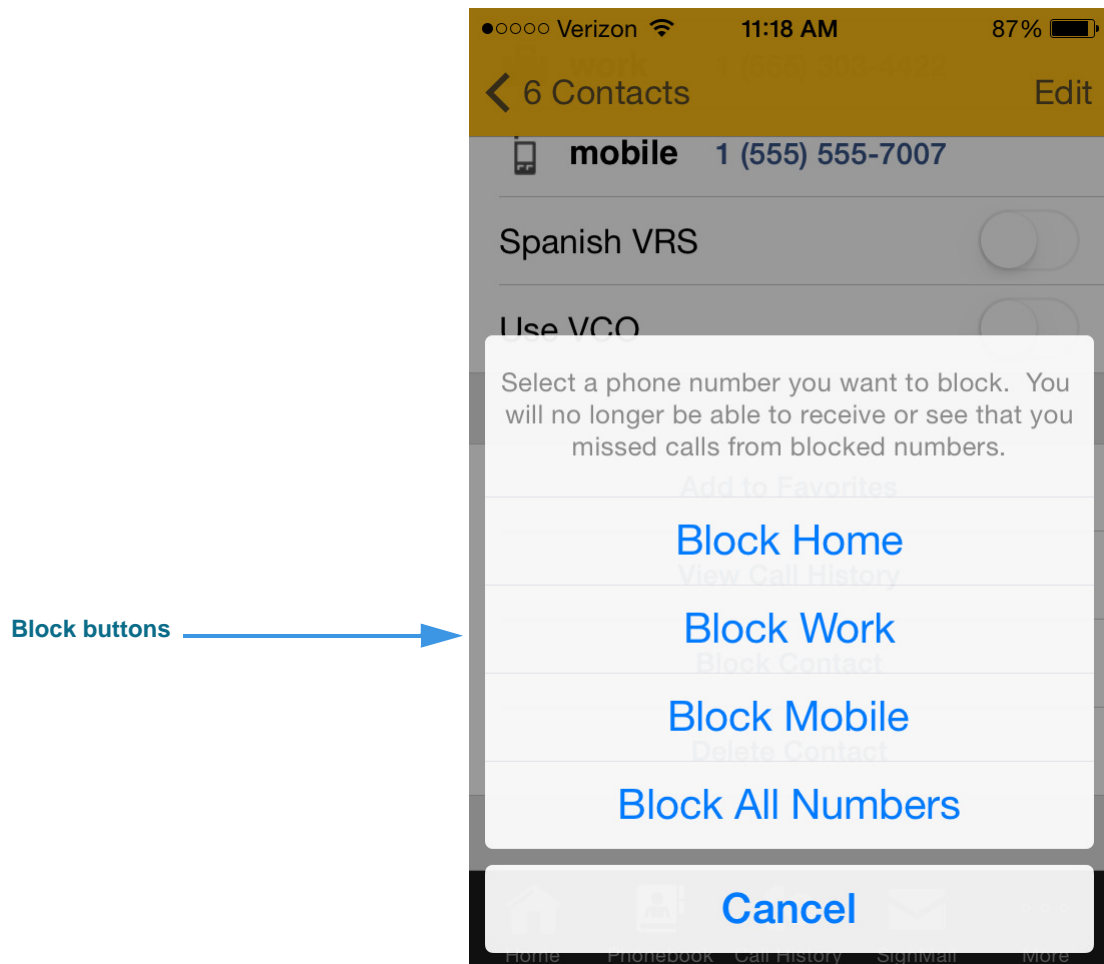


Figure 88 — Block button

The pop-up dialog asks you to select which number stored for this contact that you want to block. If you have stored only one number, you will see a different dialog which asks you to confirm that you want to block all calls from this contact. Remember you will *not* receive missed calls notices or SignMail videos from a blocked phone number.

Step 3. Tap the appropriate **Block** button to add the number to the Block List. Tap **Cancel** to exit without blocking.

Step 4. If you want to block other numbers for this contact, repeat Steps 2 and 3.

To Delete a Contact

Step 1. Start at the contact's record screen. Scroll the screen so that you can see the button shown below.

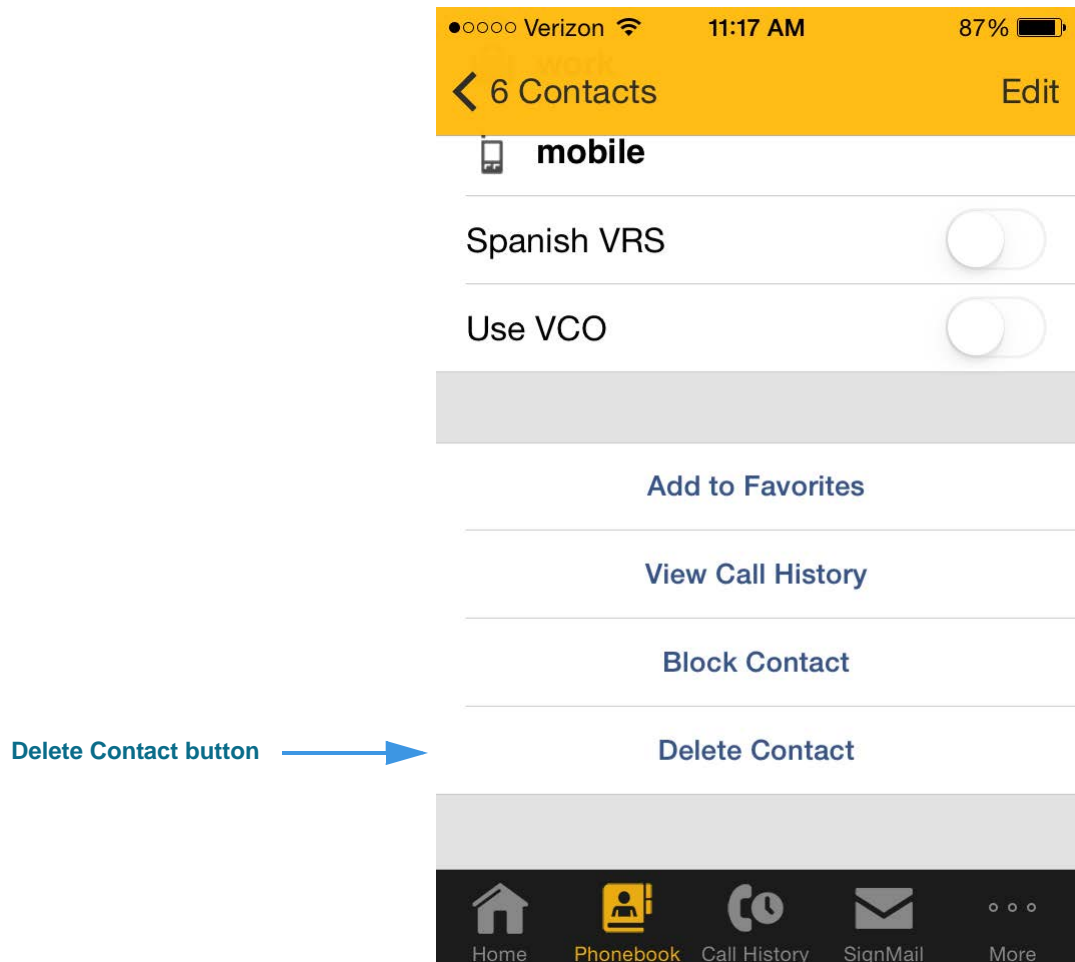


Figure 89 — Delete Contact button

Notice the **Delete Contact** button near the bottom of the screen.

Step 2. Tap the **Delete Contact** button to open the dialog shown below.

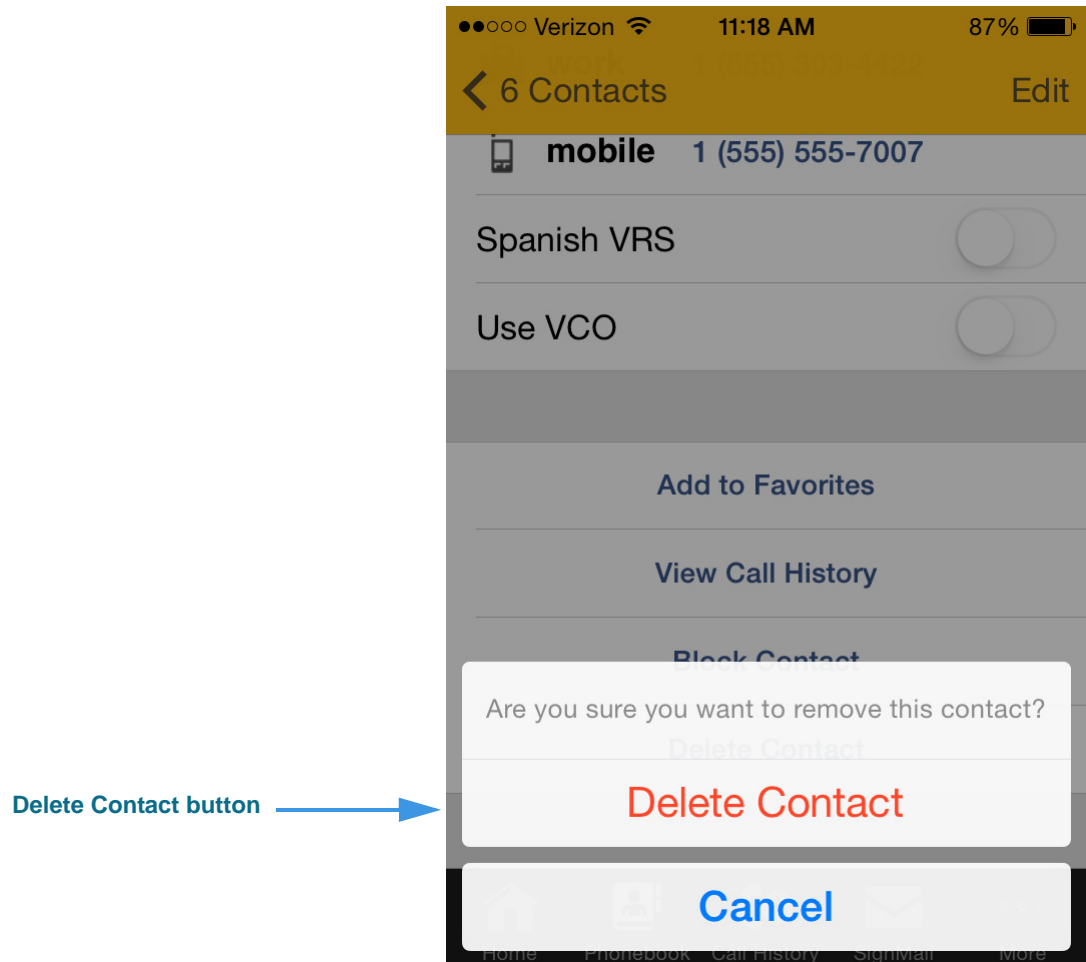


Figure 90 — Delete Contact dialog

The pop-up dialog asks you to confirm that you want to delete this contact. *You cannot recover deleted contacts.*

Step 3. Tap the **Delete Contact** button to delete this contact. Tap **Cancel** to exit without deleting.

To Use the Favorites Feature

The Favorites feature lets you create a list of favorite contacts that can be view separately in the Phonebook. You can add a remove contacts from the Favorites list at any time. You can access the *Favorites* screen from the *More* screen or from the *Phonebook* screen.

Step 1. At the Home screen, select the **More** button to open the screen shown below.

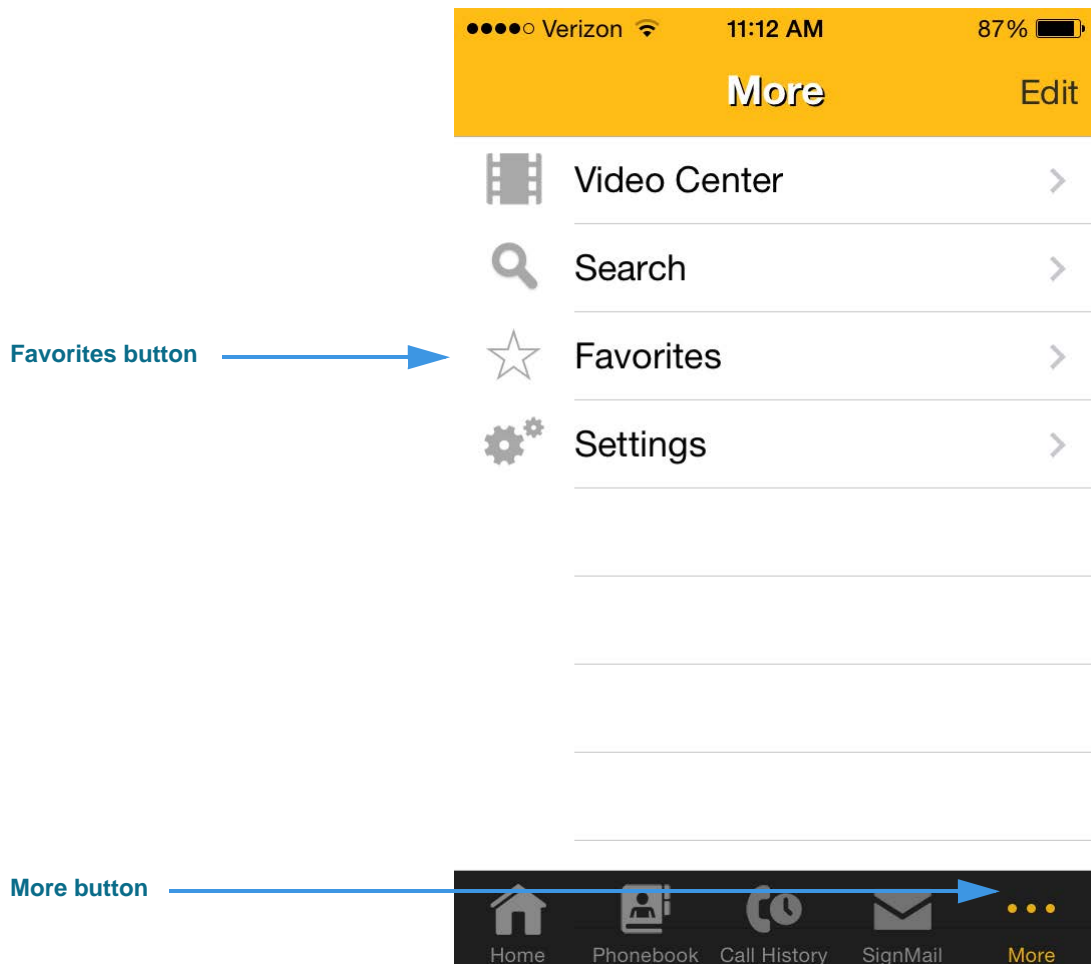


Figure 91 — *More* screen

Notice the **Favorites** button in the middle of the *More* screen. You can use this button to open your Favorites list.

Step 2. You can also open the Favorites list from the **Phonebook** screen as shown below.

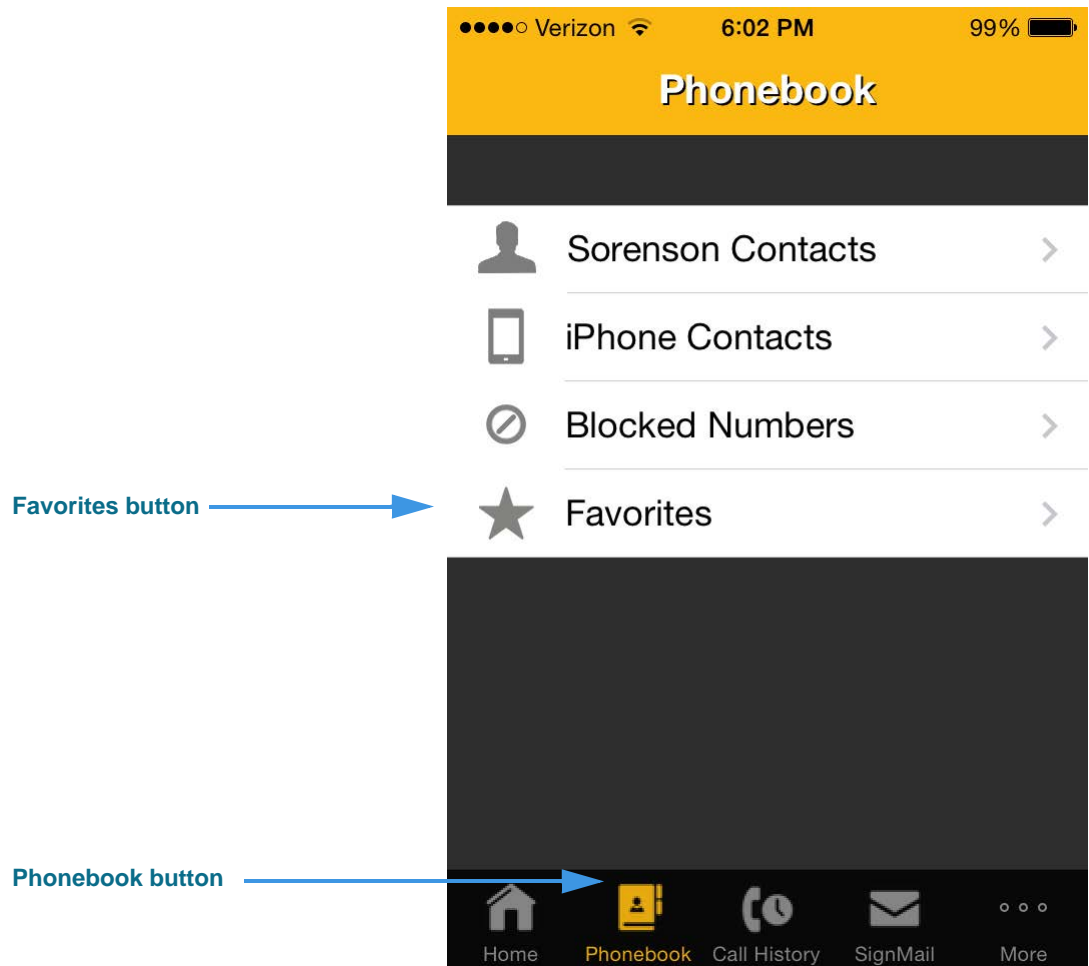


Figure 92 — Phonebook screen

Use the Phonebook

Step 3. Select the **Favorites** button to open the screen shown below.

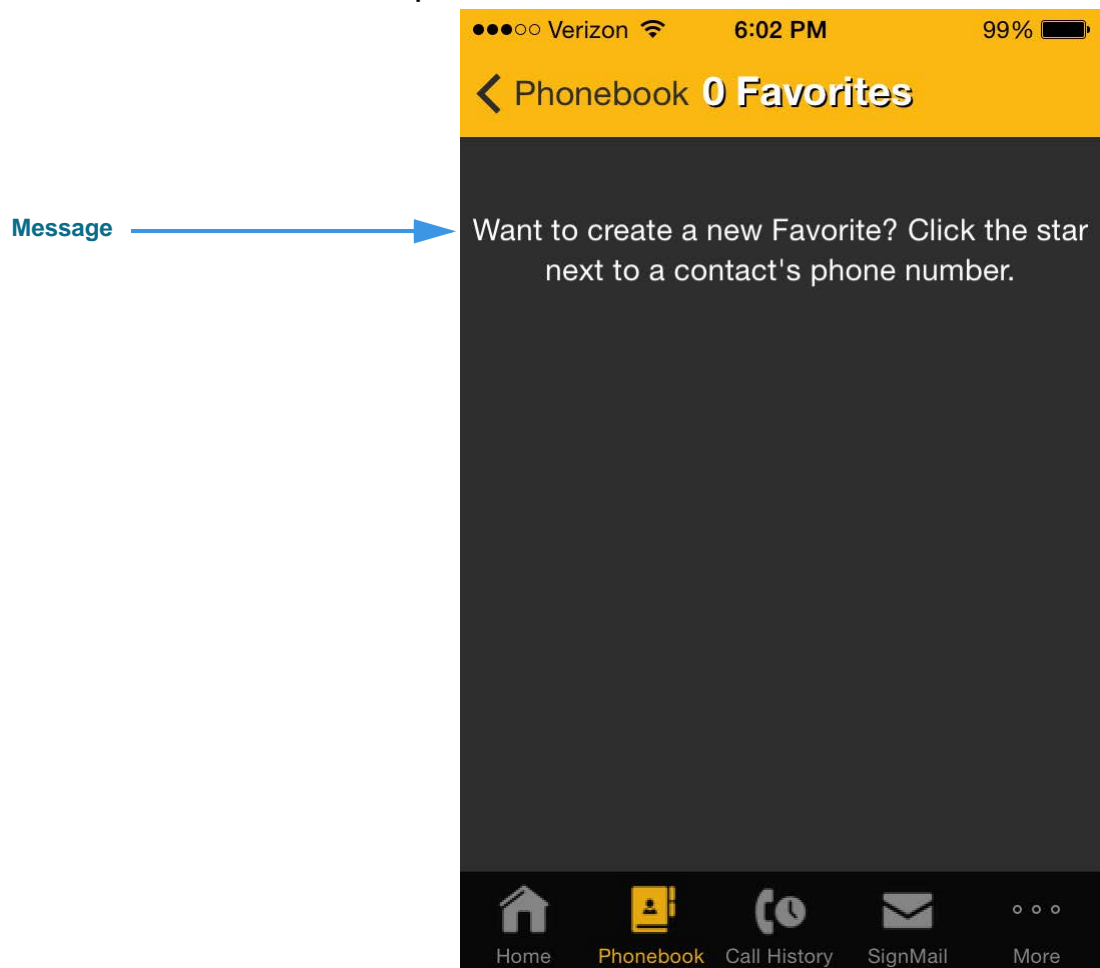


Figure 93 — Contacts tab selected, Contacts list open

Notice the message in the empty Favorites list. This message appears in this example shot because there are no favorite contacts in the Favorites list. To add one, you must edit the contact record of the contact(s) you want to add as favorites.

Step 4. Open the **contact** you want to add as a Favorite as shown in the example below.

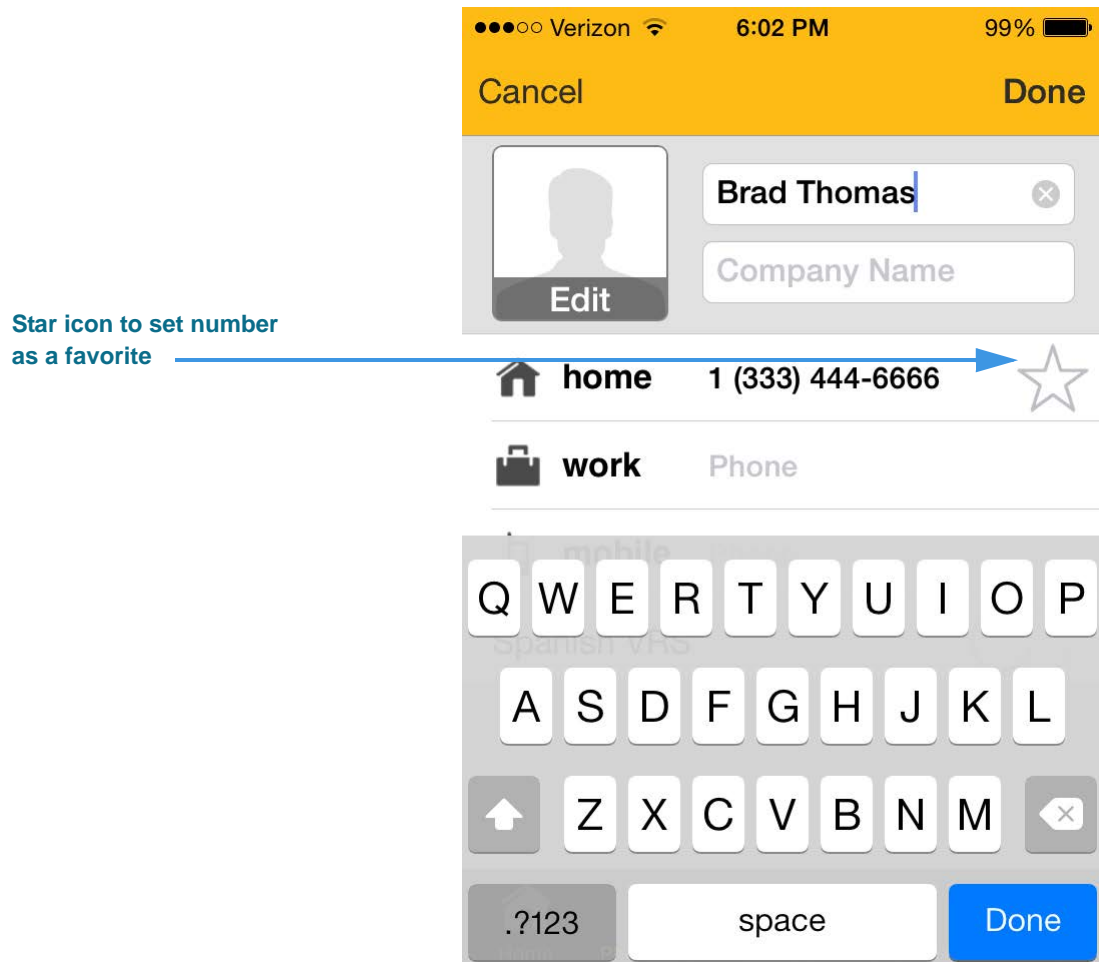


Figure 94 — Selected contact opened

Notice the **star icon** to the right of each of the three phone number fields. By selecting this icon (that is, to make the icon turn yellow), you add the number to the Favorites list.

Use the Phonebook

- Step 5. Select one or more of the **star icons** to add the number(s) to the Favorites list to display the screen shown below.


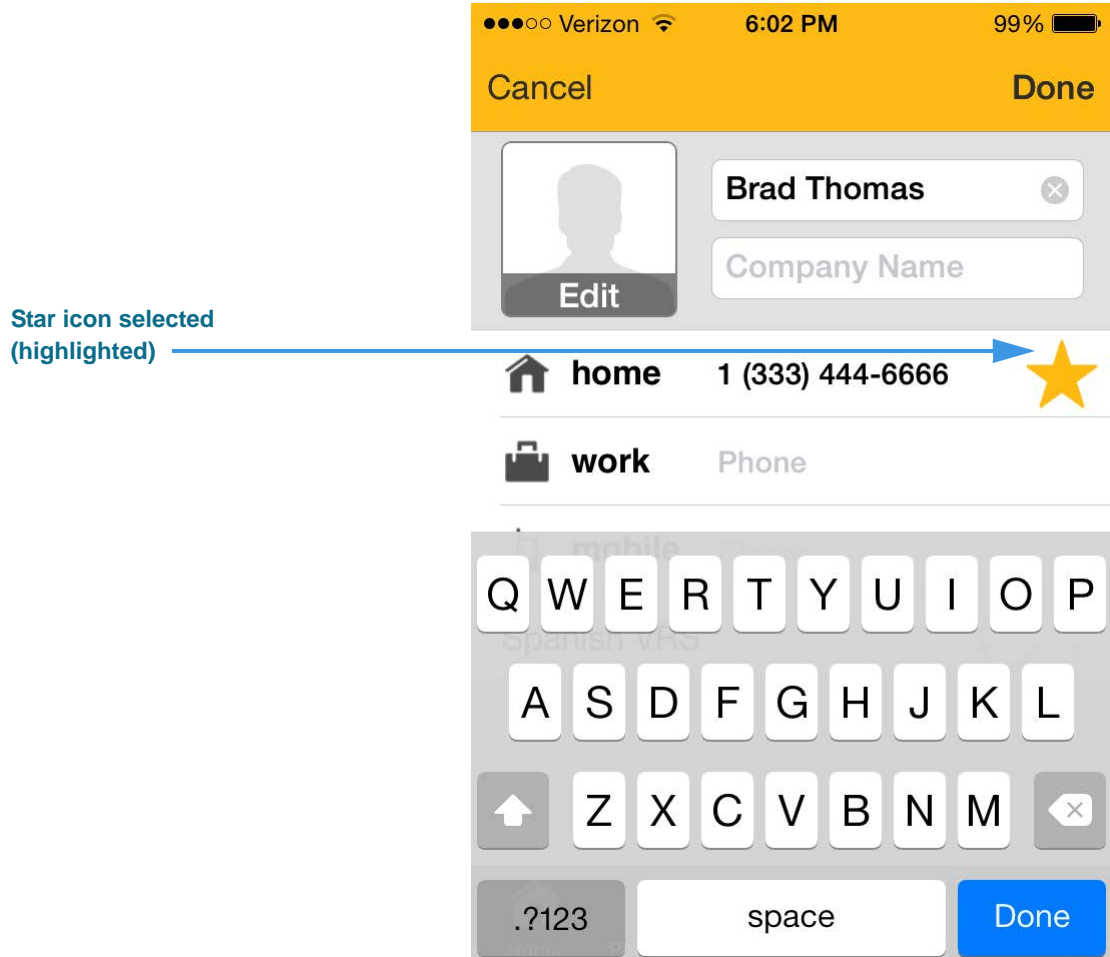


Figure 95 — Star icon selected for one number

You can select the star icons for one or more numbers to add the numbers as favorites.

Step 6. Open the **Favorites** screen again to see the screen shown below.

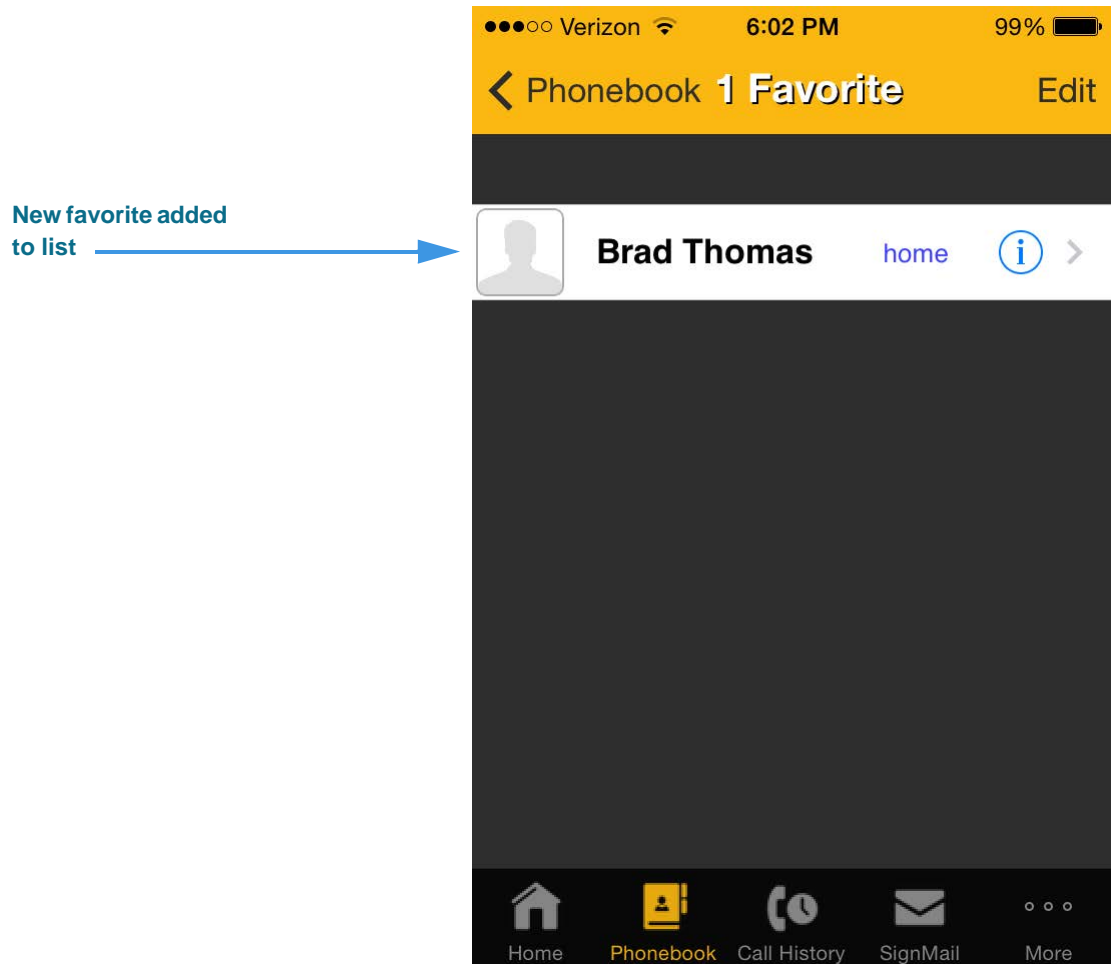

New favorite added to list →

Figure 96 — Favorites screen open, number added to list

Notice that the phone number for the “Brad Thomas” contact was added to the Favorites list in this sample.

Use the Video Center

ntouch Mobile's Video Center is now separate from the SignMail List. The enhanced Video Center offers a wide variety of video content organized into multiple channels, programs, and episodes. You can access the Video Center from the *More* screen.

To Find a Video to View

Step 1. Tap the **More** button to open the screen shown below.

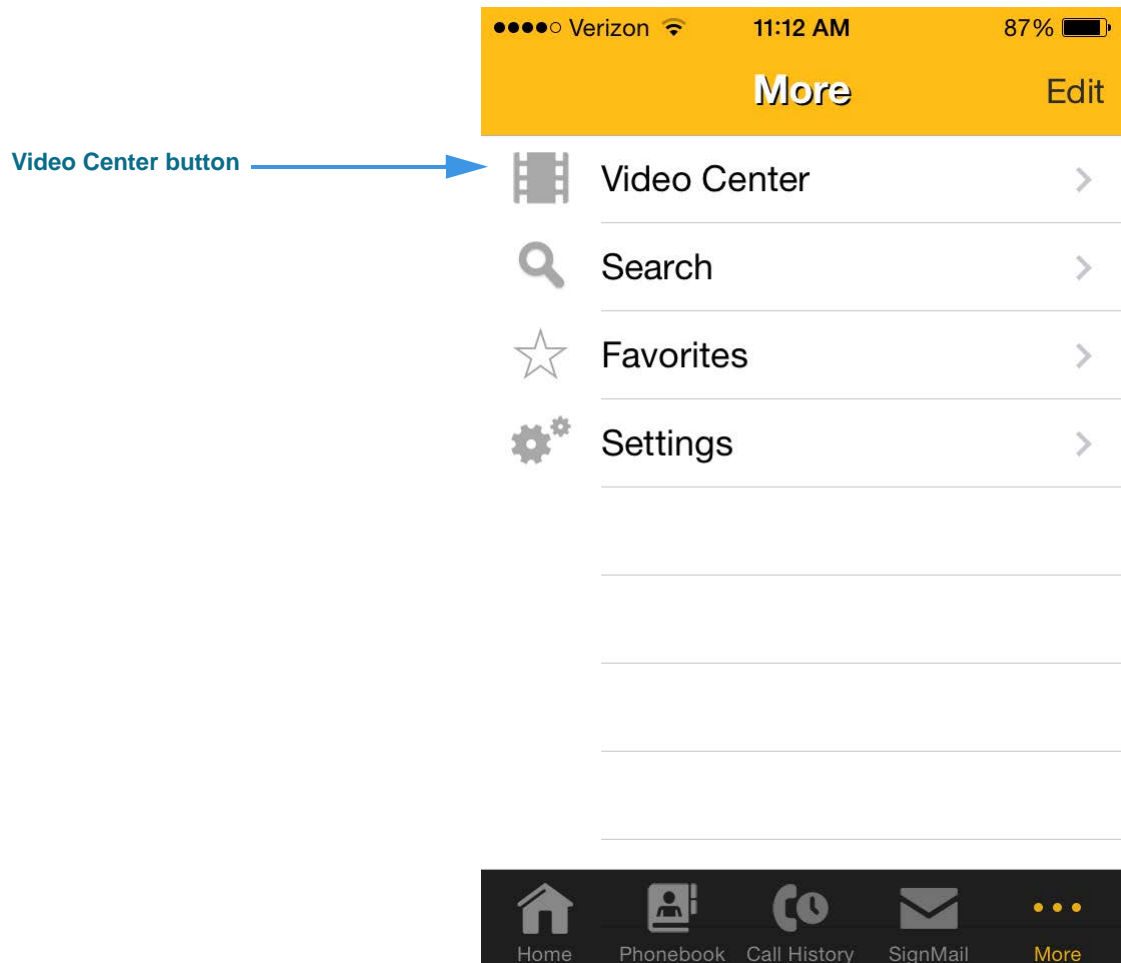


Figure 97 — *More* screen, Video Center button

Step 2. Tap the **Video Center** button to open the screen shown below.

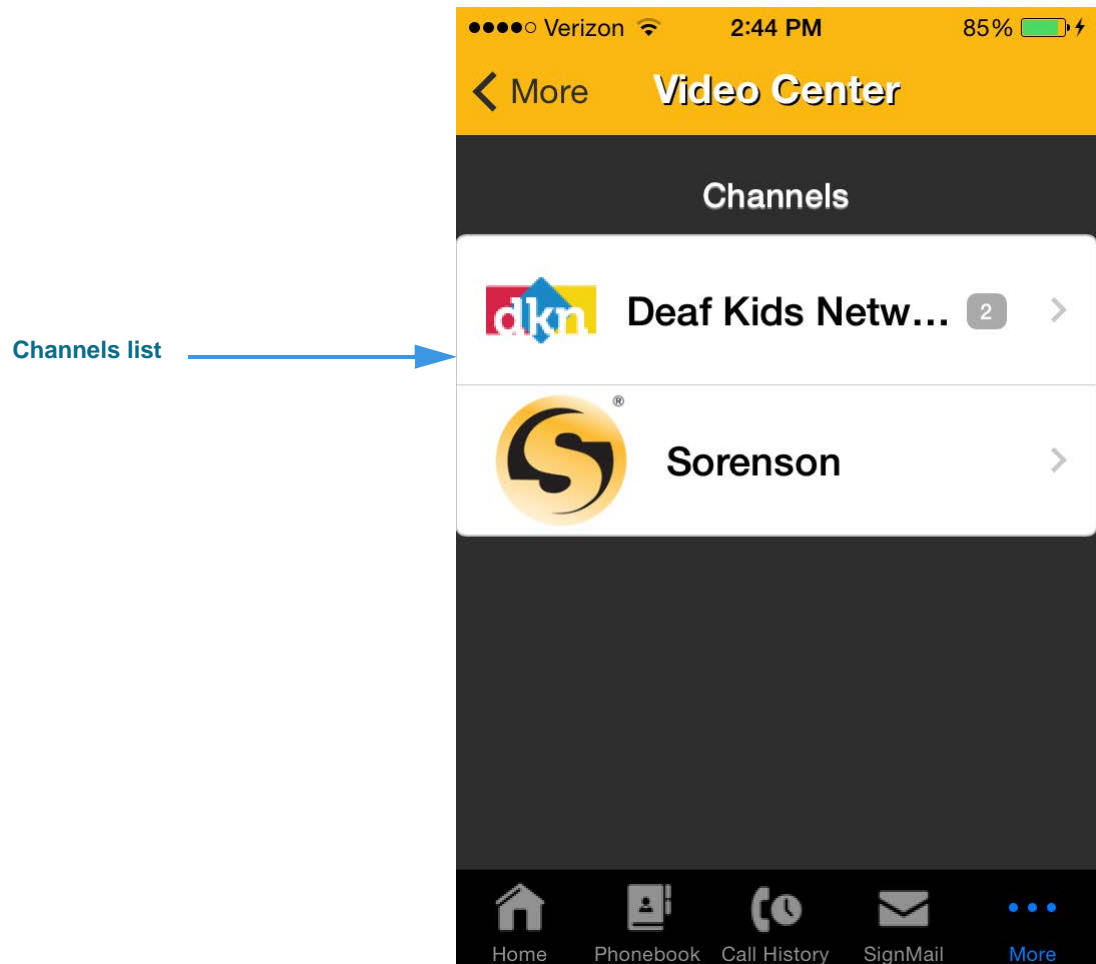


Figure 98 — Video Center screen showing Channels

A list of video channels is shown in the center of the screen. The channels have names like “Deaf Kids Network” and “Sorenson.” The specific channels that you will see will vary over time.

Use the Video Center

Step 3. Tap one of the **channel names** to display a screen like the one shown below.

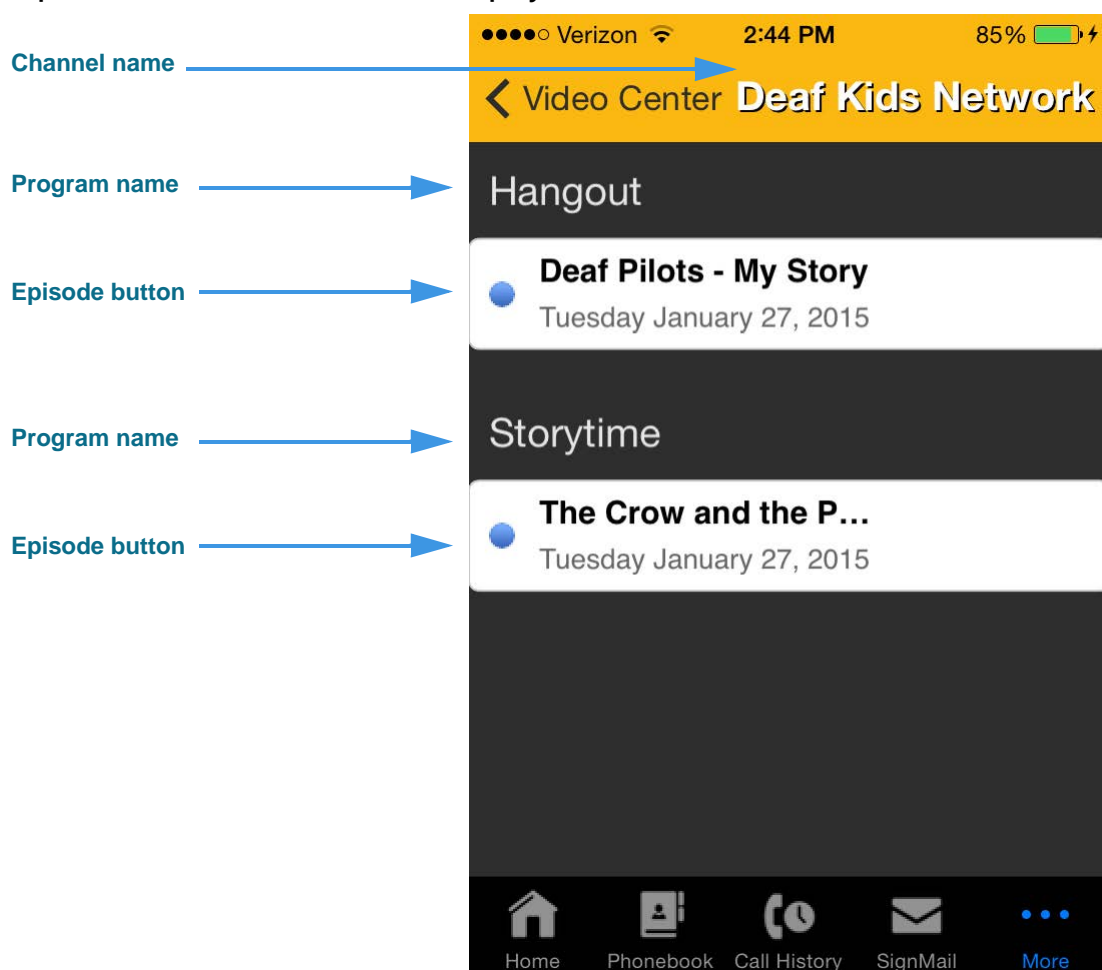


Figure 99 — FCC News screen, Video Center

This is an example *Deaf Kids Network* channel screen. The available programs and the episodes for each program are shown in the list in the center of the screen. In this example, there are two programs on the “Deaf Kids Network” named the “Storytime” program and the “Hangout” program. The episodes for each program are named “Deaf Pilots - My Story” and “The Crow and the Pitcher.”

A small blue dot will appear next to the title of an unviewed video. After you view the video, the blue dot will disappear. This sample image does not show the blue dot.

You *cannot* delete videos from the Video Center. The list will be updated regularly by Sorenson.

You can view a video by tapping on its name in the list. The *View Video* screen looks exactly the same as for SignMail videos. See **Page 50**.

Use Yelp Search

The Yelp Search feature lets you search for phone numbers of local businesses using ntouch Mobile's Fast Search feature. Your device's Location Services help you find and call businesses near your current location. To see a list of Yelp search results, just type a search term (such as "Pizza") in the search field. The search results from the Yelp service will be shown in a list. You can visit the Yelp results for an item or make a call.

To Use the Yelp Search Feature

Step 1. At the Home screen, tap the **More** button to open the screen shown below.

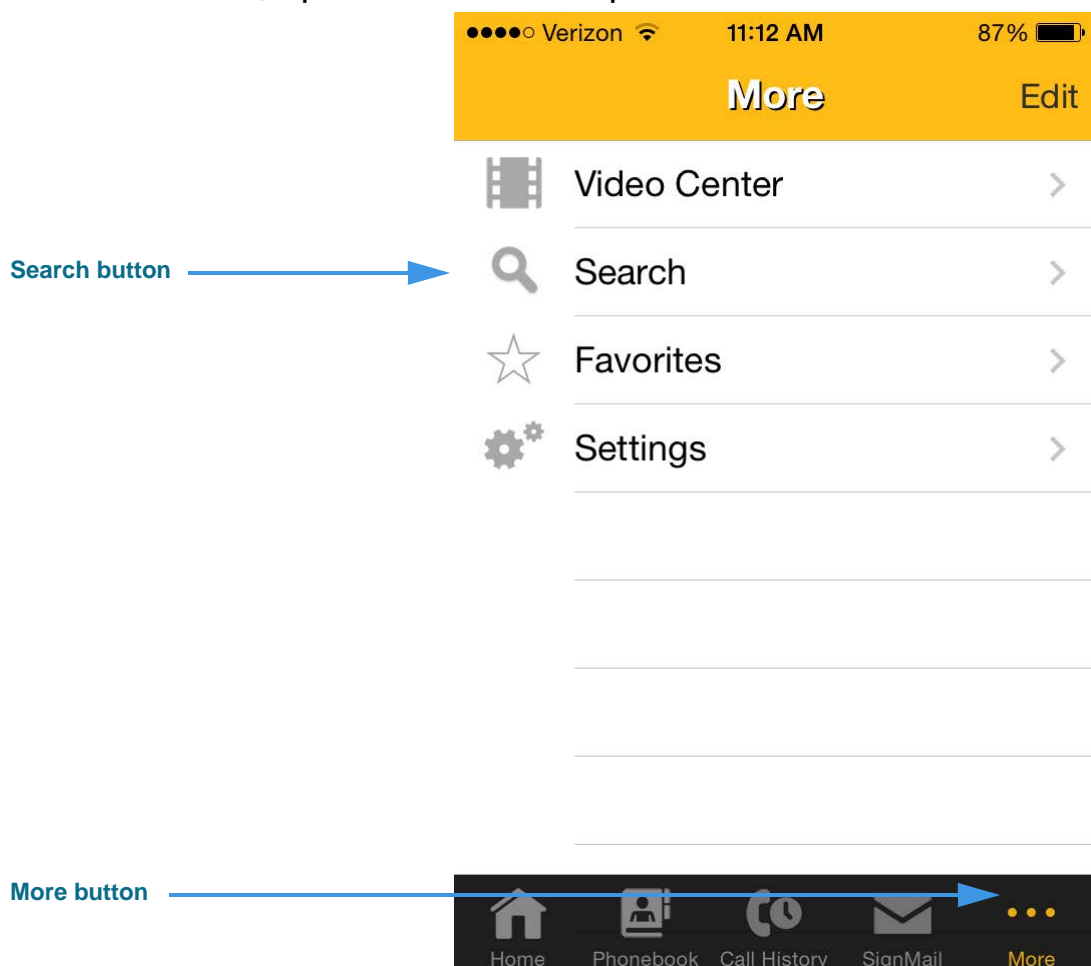


Figure 100 — More screen

Step 2. Tap the **Search** button to open the Search screen.

Step 3. If you see a message asking whether you want to allow ntouch to use your current location, tap **OK**.

Use Yelp Search

Step 4. You will then see the Search screen shown below.

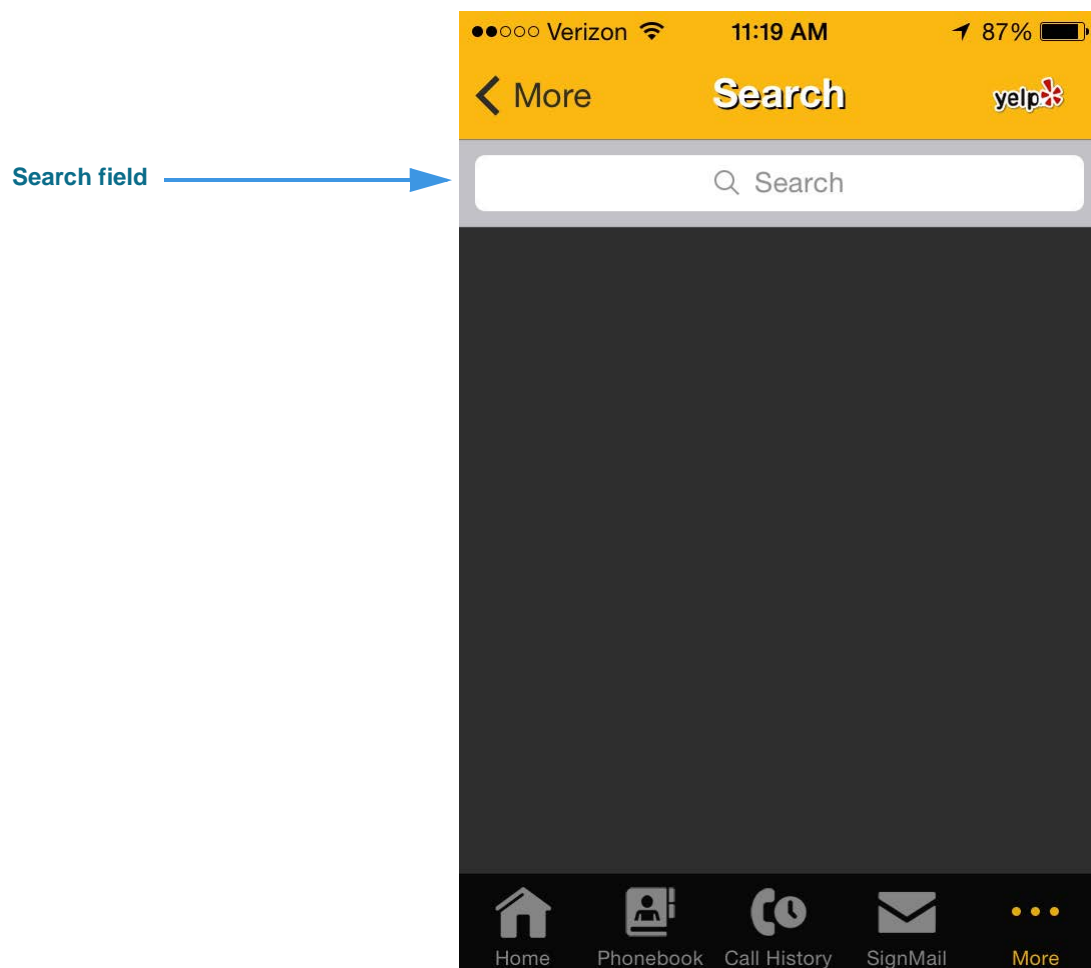


Figure 101 — Search screen

You can enter any word (such as “pizza”) or the specific name of a business in the **Search** field to start your search. Notice that the Yelp logo appears at the top-right corner of the screen.

Step 5. After you start typing in the Search field, you will see the dialog shown below.

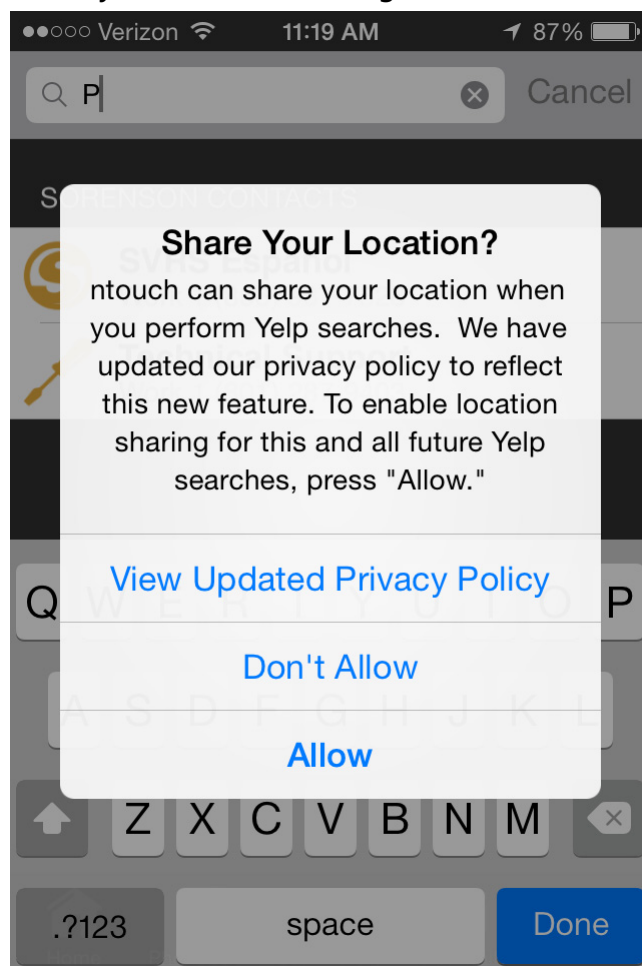


Figure 102 — *Share Your Location?* dialog

You will see the above dialog the first time you use the Yelp Search feature. Sorenson shares your location with the Yelp service. If you want to read the privacy policy related to this feature, tap the **View Updated Privacy Policy** button. If you do not want to use the Yelp Search feature, tap the **Don't Allow** button.

Step 6. Tap the **Allow** button to proceed with the Yelp search.

Use Yelp Search

Step 7. Finish typing a **search string** (such as “Pizza” or a business name such as “Pazzo”) into the search field as shown below.

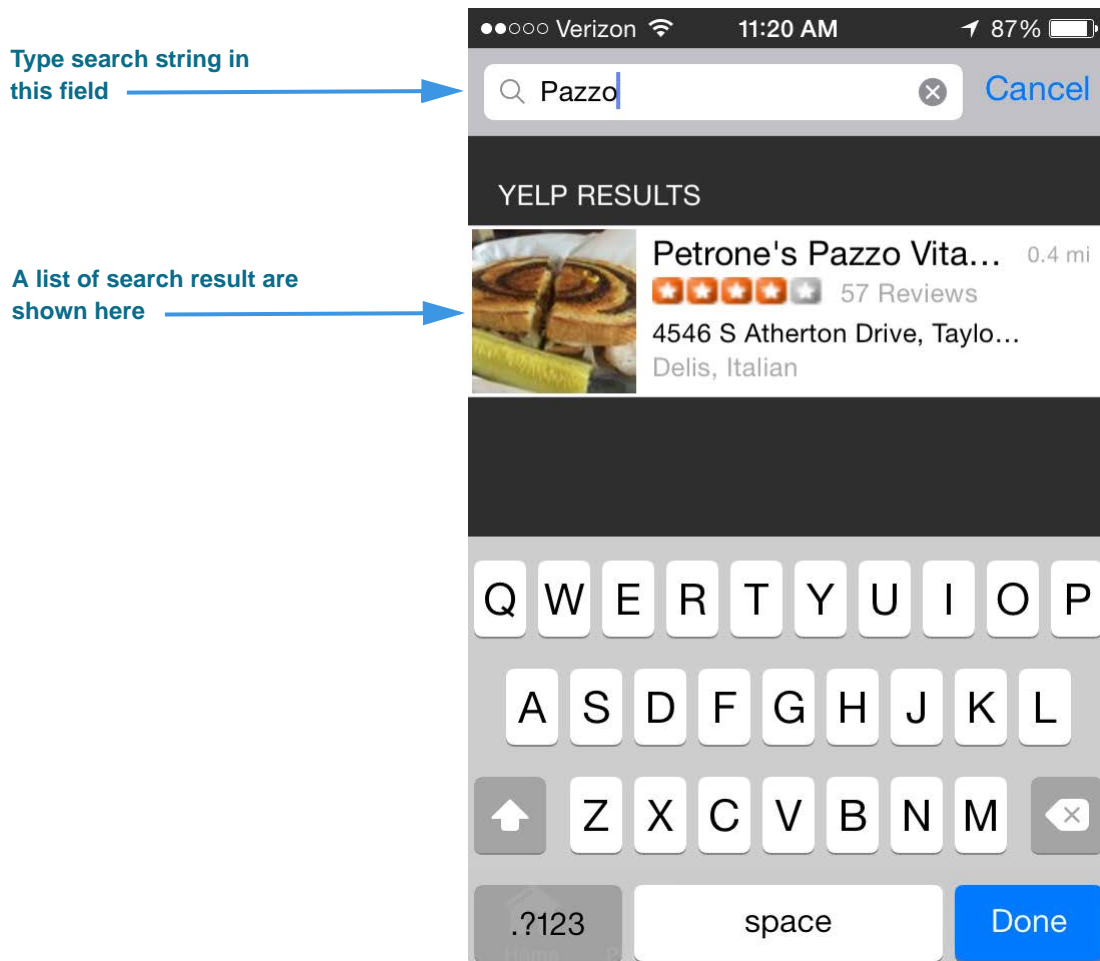


Figure 103 — Yelp Search Results

The business names returned by Yelp for the search term you entered are shown in a list. In this example, the search term entered was “pazzo.” ntouch Mobile uses your 911 Location Information to limit the search results to those closest to your home location.

Step 8. To open an item, tap **the name of the result** to open the screen shown below.

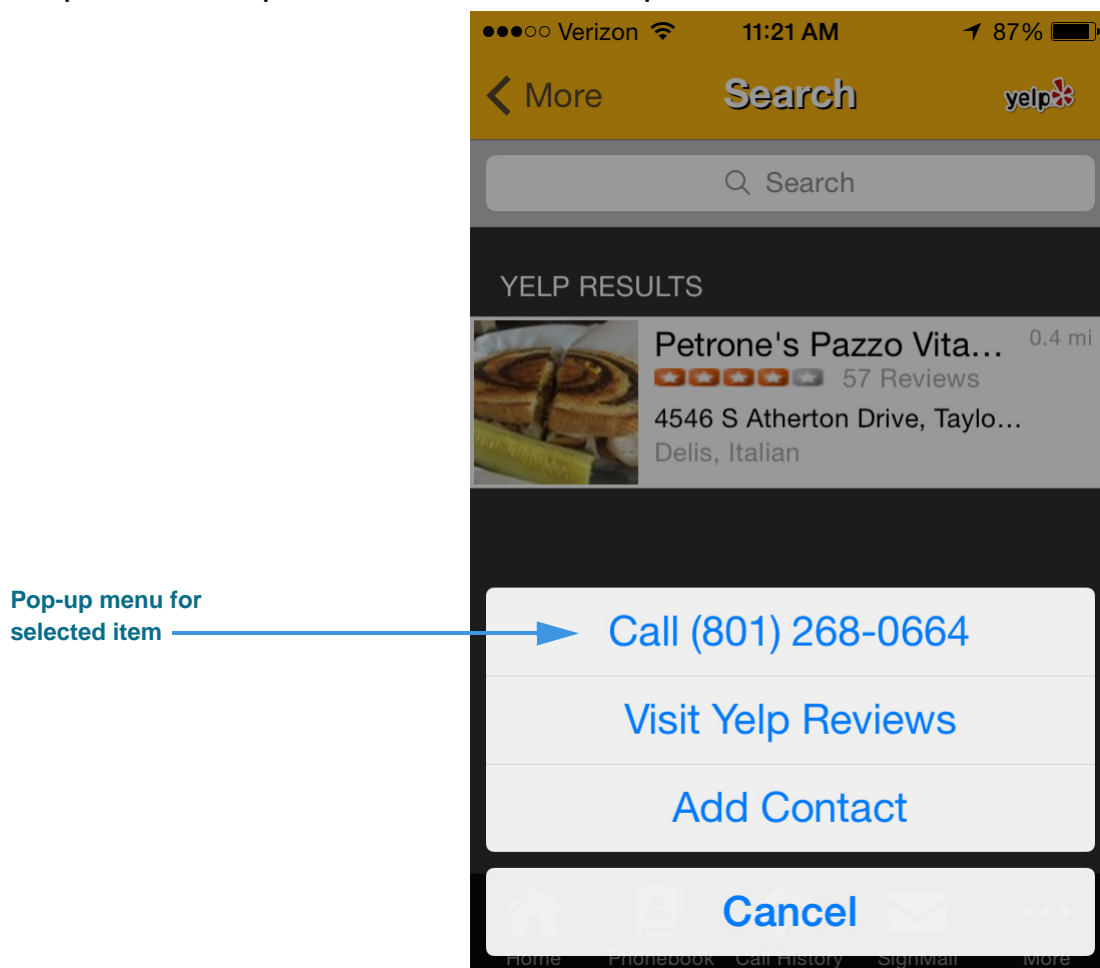


Figure 104 — Pop-up menu for Yelp Search item

Notice that you can choose options to **Call** the phone number listed for this business, **Visit Yelp Reviews** or **Add Contact** for the selected Yelp Search item.

Use Yelp Search

Step 9. Select the [Visit Yelp Reviews](#) button to open the screen shown below.

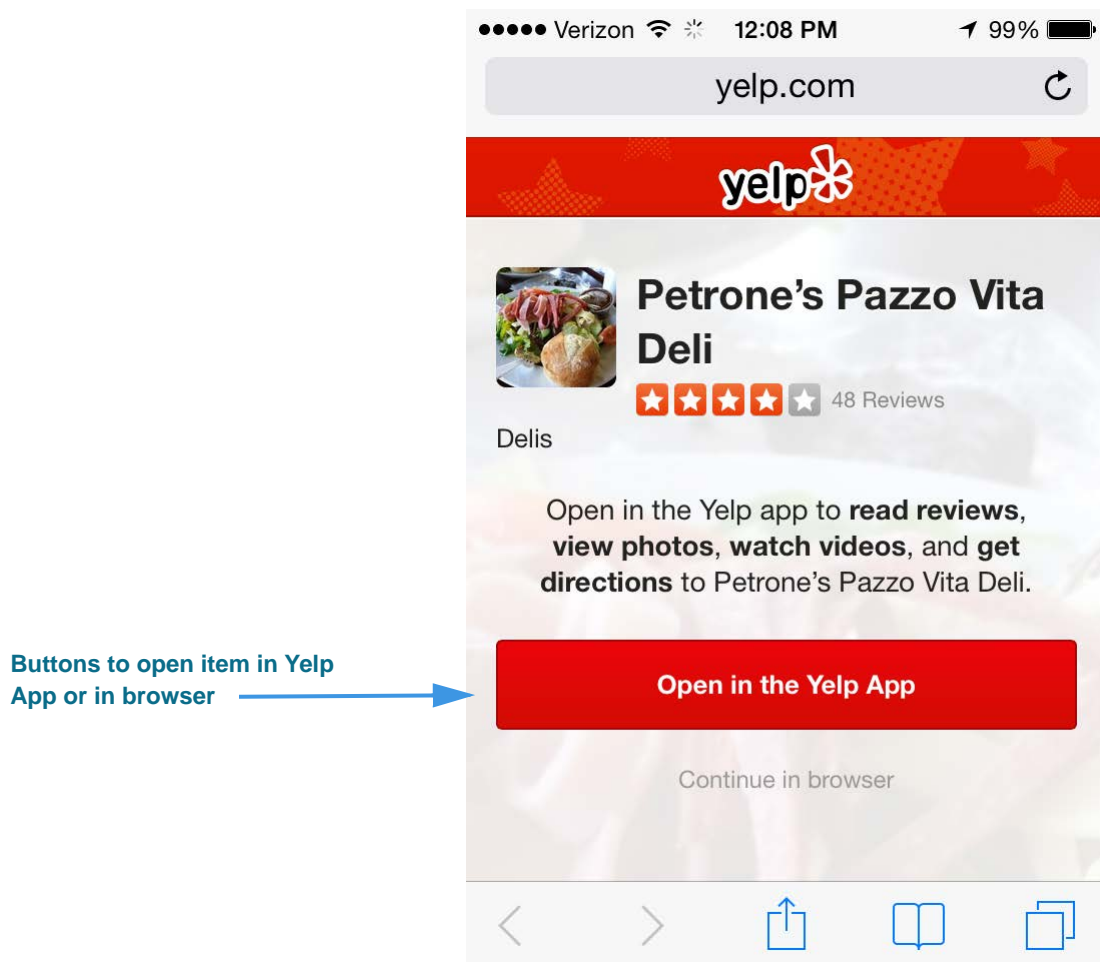


Figure 105 — Choose app or browser screen for Yelp item

Notice you can choose to open the search results page in the Yelp app (if you have it installed already) or continue in the browser window that has been opened.

Step 10. Select the [Continue in browser](#) link to open the screen shown below.

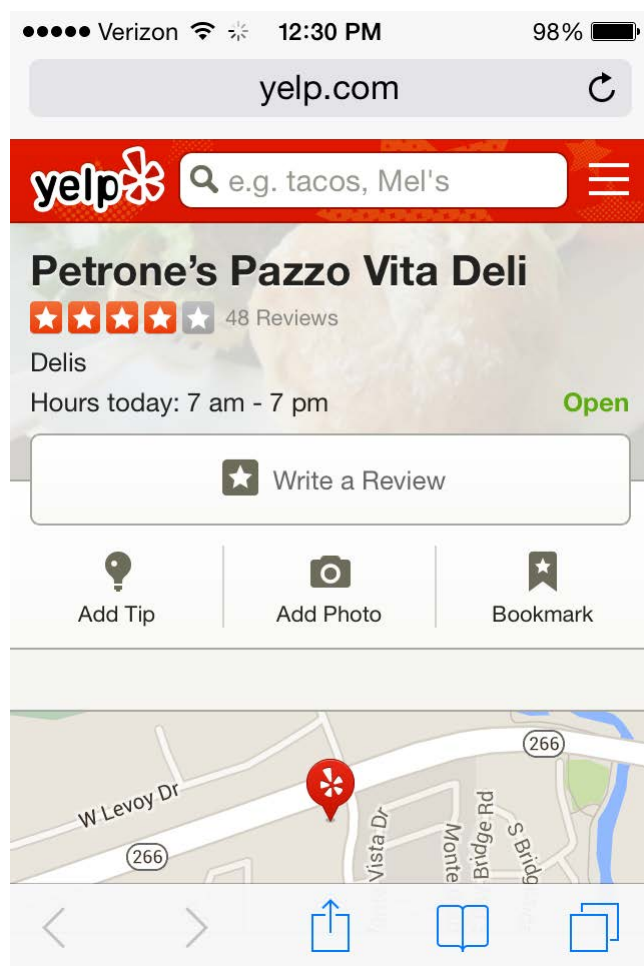


Figure 106 — Yelp.com search results page

This is the Yelp.com search results page. You can scroll down the screen to see the phone number for this business, and then tap the number to dial a call using ntouch Mobile.

Use Yelp Search

Step 11. Select the [phone number](#) link to open the dialog shown below.

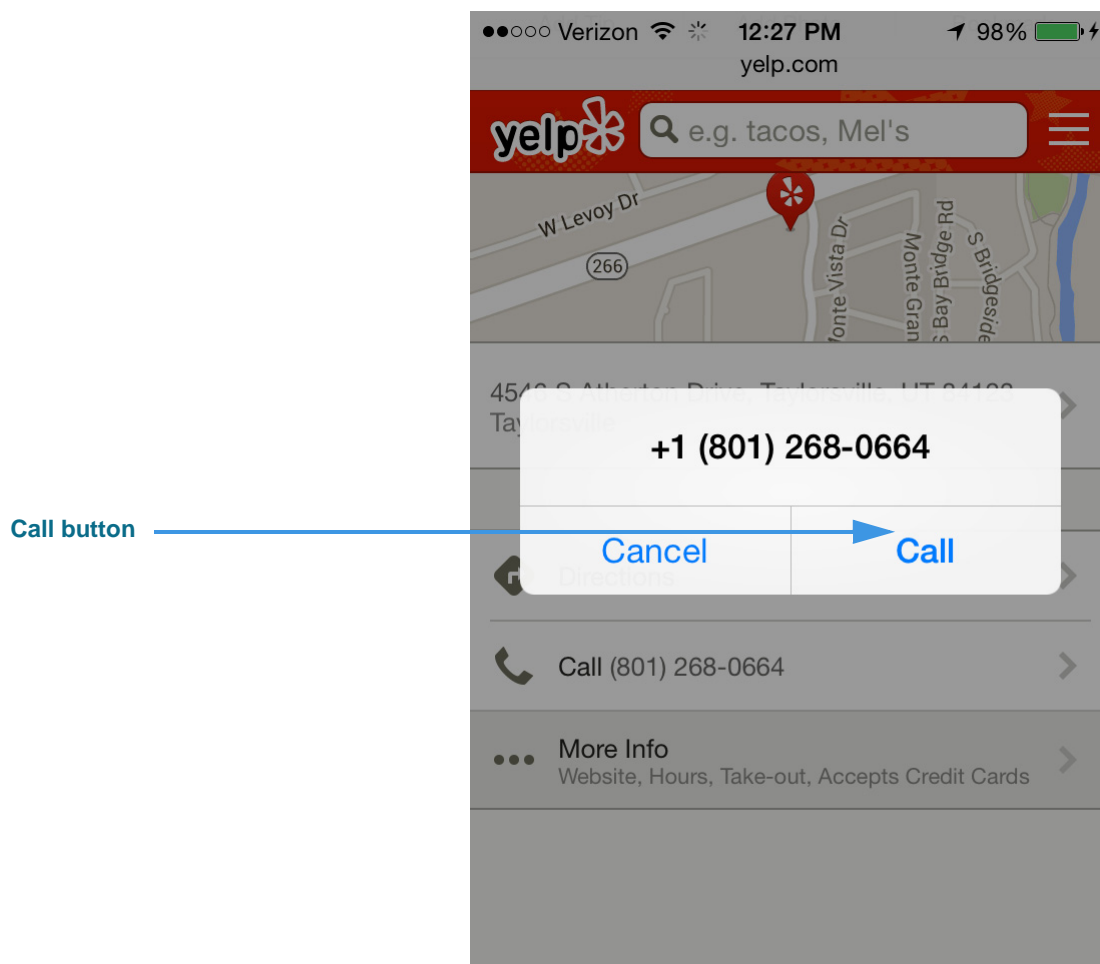


Figure 107 — Call button in dialog

Selecting the **Call** button in the dialog will place a call using ntouch Mobile.

Change Settings

ntouch Mobile's *Settings* screen lets you manage your ntouch Mobile account profile and configure certain app settings. You can access the *Settings* screen from the *More* screen.

To See/Set Available Settings

Step 1. Tap the **More** button to open the screen shown below.

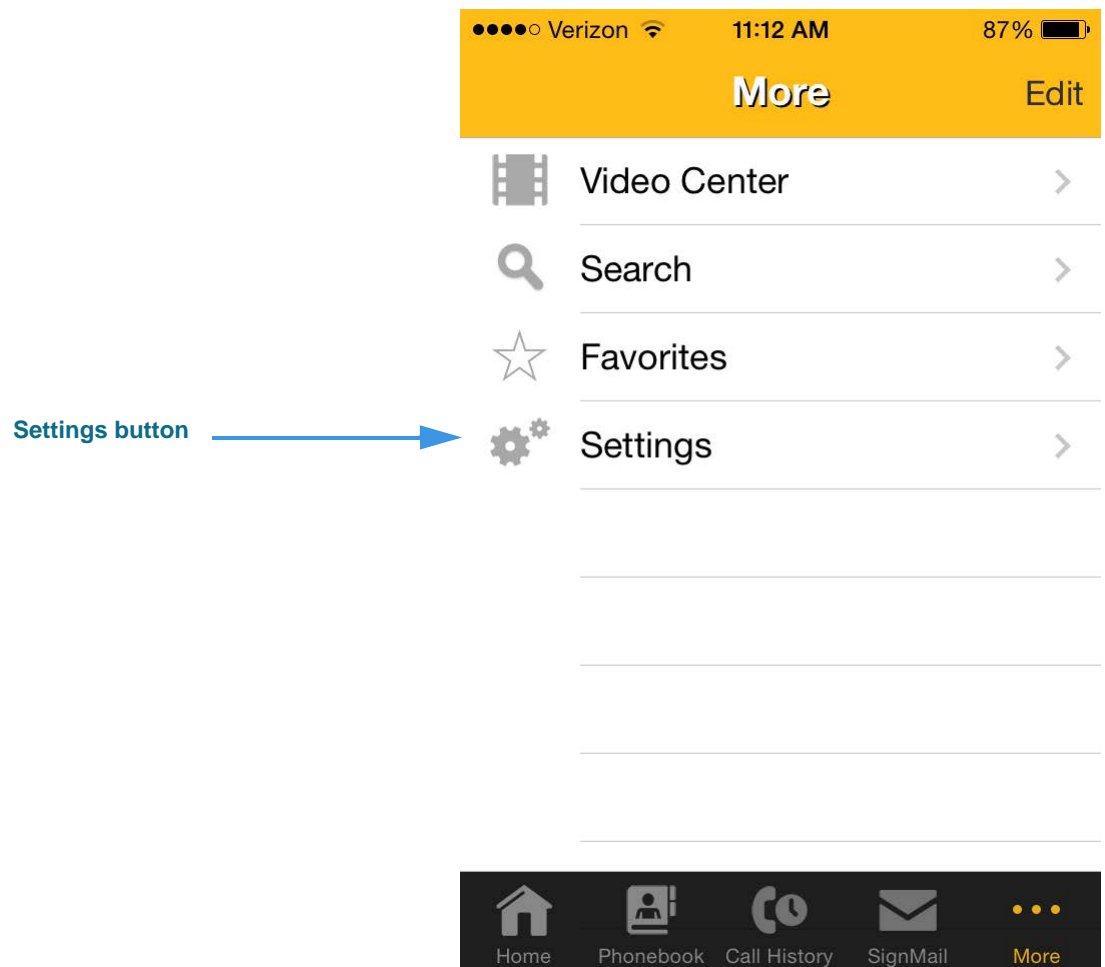


Figure 108 — *Settings* screen

The *Settings* button is shown in the list in the center of the screen.

Change Settings

Step 2. Tap the **Settings** button to open the screen shown below.



Figure 109 — Settings screen, top portion

The *Settings* screen is divided into a **Profile Settings** area near the top of the screen, a **Device Settings** area is in the middle of the screen (not shown in this sample image; scroll to see it), a **myRumble Settings** area, and a **Network Settings** area near the bottom of the screen. At the very bottom of the screen is an area that shows your phone number and the release version of the ntouch app.

To record a Personal SignMail Greeting, see **Page 40**.

To add saved text messages to use during calls, see **Page 21**.

To use the in-app Help feature, see **Page 130**.

Step 3. Scroll the screen to see the middle part of the screen as shown below.

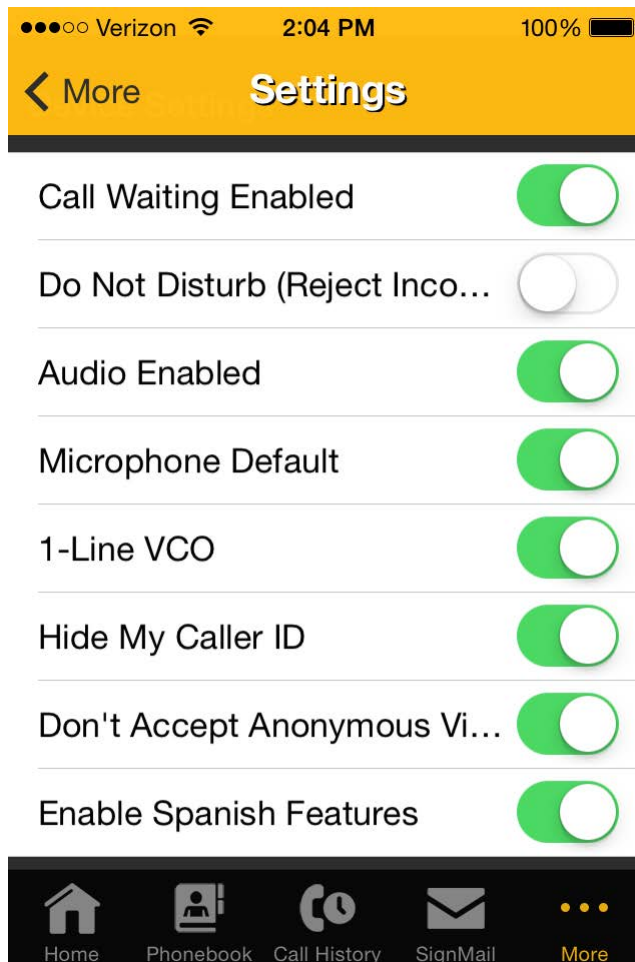


Figure 110 — *Settings* screen, middle portion

The **Device Settings** area is shown at in this sample image. You will need to scroll down to see the other sections of the *Settings* screen.

The controls in this area let you enable **Call Waiting**, reject all incoming calls (“**Do Not Disturb**” mode), enable the **1-Line VCO** feature including enabling **In-Call Audio** function and **Microphone Default** settings (to configure and use 1-Line VCO, see **Page 37**), hide your **Caller ID** when you make outgoing calls, choose not to accept **anonymous calls** (that is, calls that do not include Caller ID information), and choose to show (enable) the **SVRS Espanol contact** in your Contacts list or hide (disable) this contact.

Change Settings

Step 4. Scroll the screen to see the bottom part of the screen as shown below.

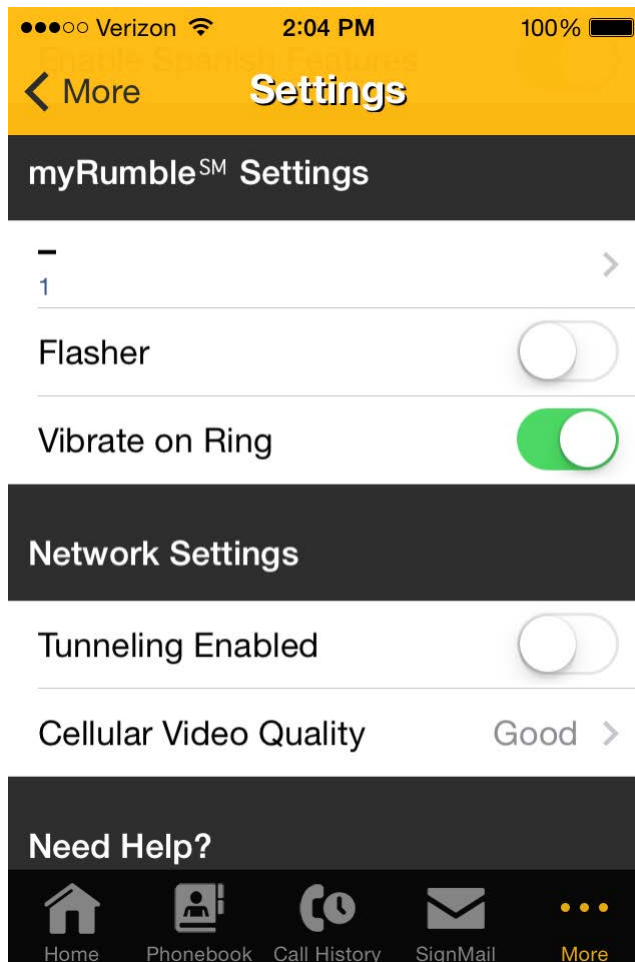


Figure 111 — Settings screen, bottom portion

The **myRumble Settings** and **Network Settings** areas are shown in this sample image. You will need to scroll down to see the entire **Need Help?** area of the screen.

The **Tunneling Enabled** control enables the Tunneling feature which may help in some network situations. Normally, this checkbox should be disabled (unchecked). If you have video image problems due to network problems, please call Sorenson Technical Support.

Note: Do not enable tunneling unless Sorenson Technical Support tells you to do so. This feature is used to provide network connectivity in certain situations. Selecting the checkbox when not needed can cause problems.

The **Cellular Video Quality** control lets you choose from three settings to control the amount of cellular data used for videophone calls. The options are: **Good (least data)**, **Better (more data)**, and **Best (most data)**.

To See Profile Settings

- Step 1. Tap the **Account Information** button in the Profile Settings area to open the screen shown below.

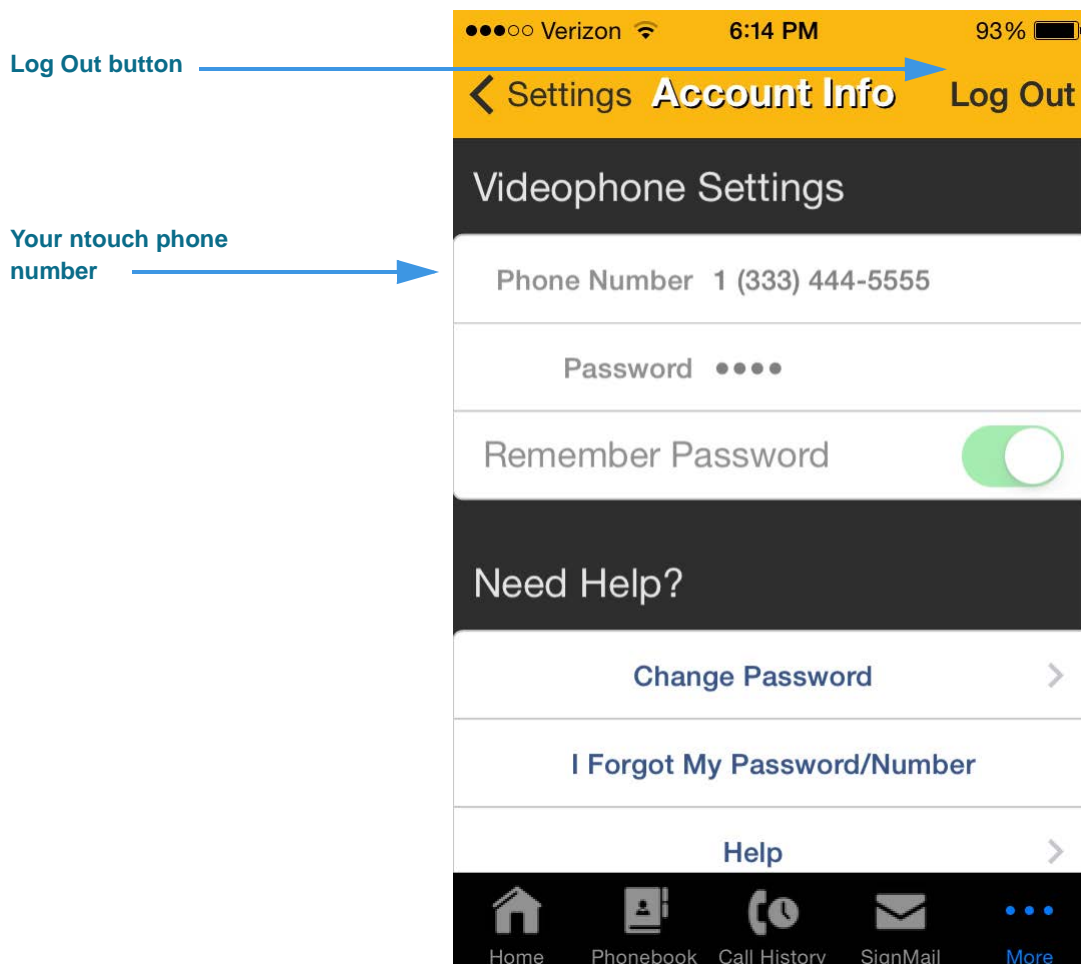


Figure 112 — Account Information screen

You can use this screen to log out of the app, change your password, request a password reset or your phone number, contact Sorenson Support, or view the app’s Help options. See **Page 130** for details on using the Help options.

Your ntouch phone number is shown near the top of the screen. Your password will be shown only as a series of bullet (dot) characters on the screen.

If you want to change the “Remember Password” setting, you must first log out of the app by tapping the **Log Out** button at the top-right of the screen.

To Log Out and In

- Step 1. Start at the Account Info screen shown on [Page 114](#).
- Step 2. Tap the [Log Out](#) button to show the screen shown below.

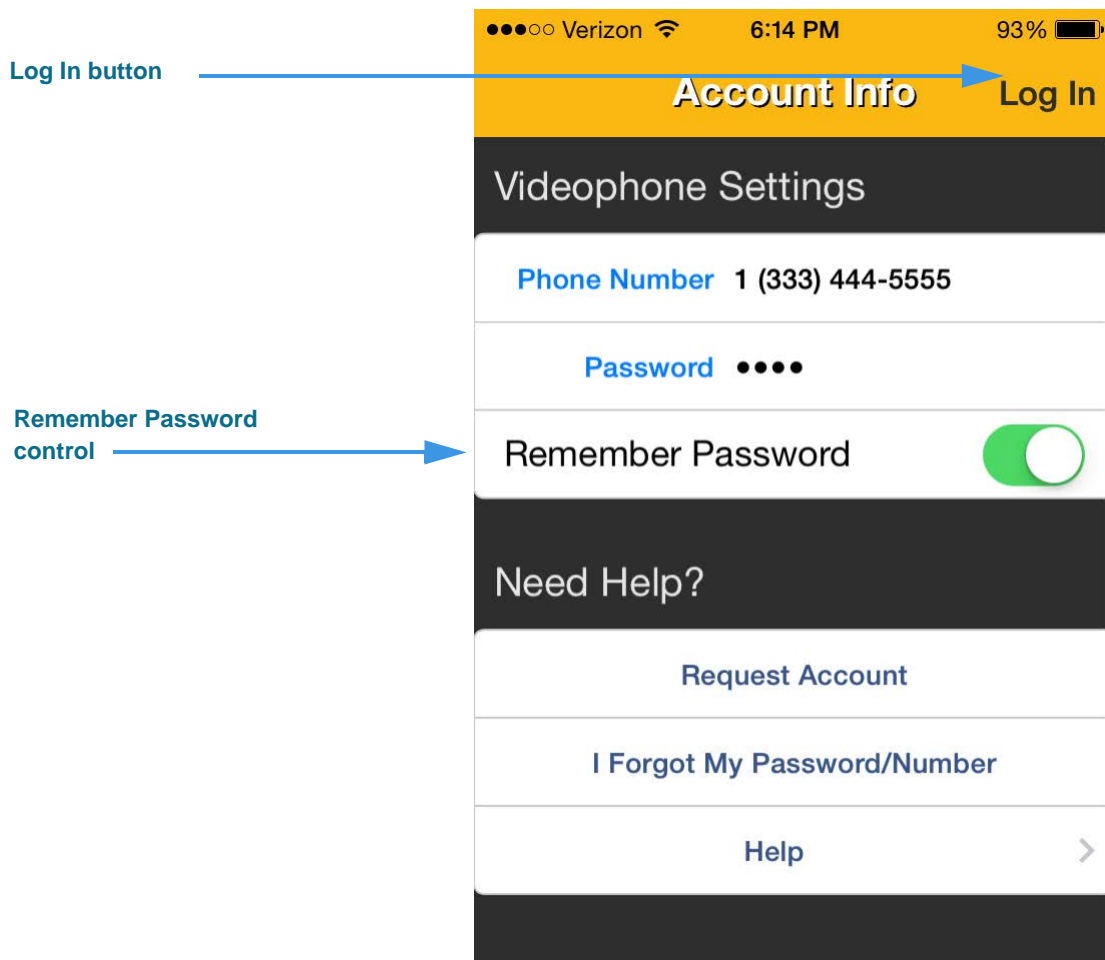


Figure 113 — Account Info screen, logged out of app

This is the *Account Info* screen that appears when you are logged out of the app. You can now change the “Remember Password” control by tapping on its button. When this control is off, you will have to enter your password each time you log in to the app.

At the bottom of the screen below the **Help** button, you will see a **Call 911** button (not shown in this sample image). You can make an SVRS 911 call even when you are logged out of the app. You also have access to the app’s Help options from this dialog.

- Step 3. Tap the [Log In](#) button at the top-right of the dialog to log in to your ntouch account.
- Step 4. You will then be back at the Settings screen.

To Change Your Password

- Step 1. Start at the Account Info screen shown on [Figure 112](#).
- Step 2. Tap the [Change Password](#) button to open the screen shown below.

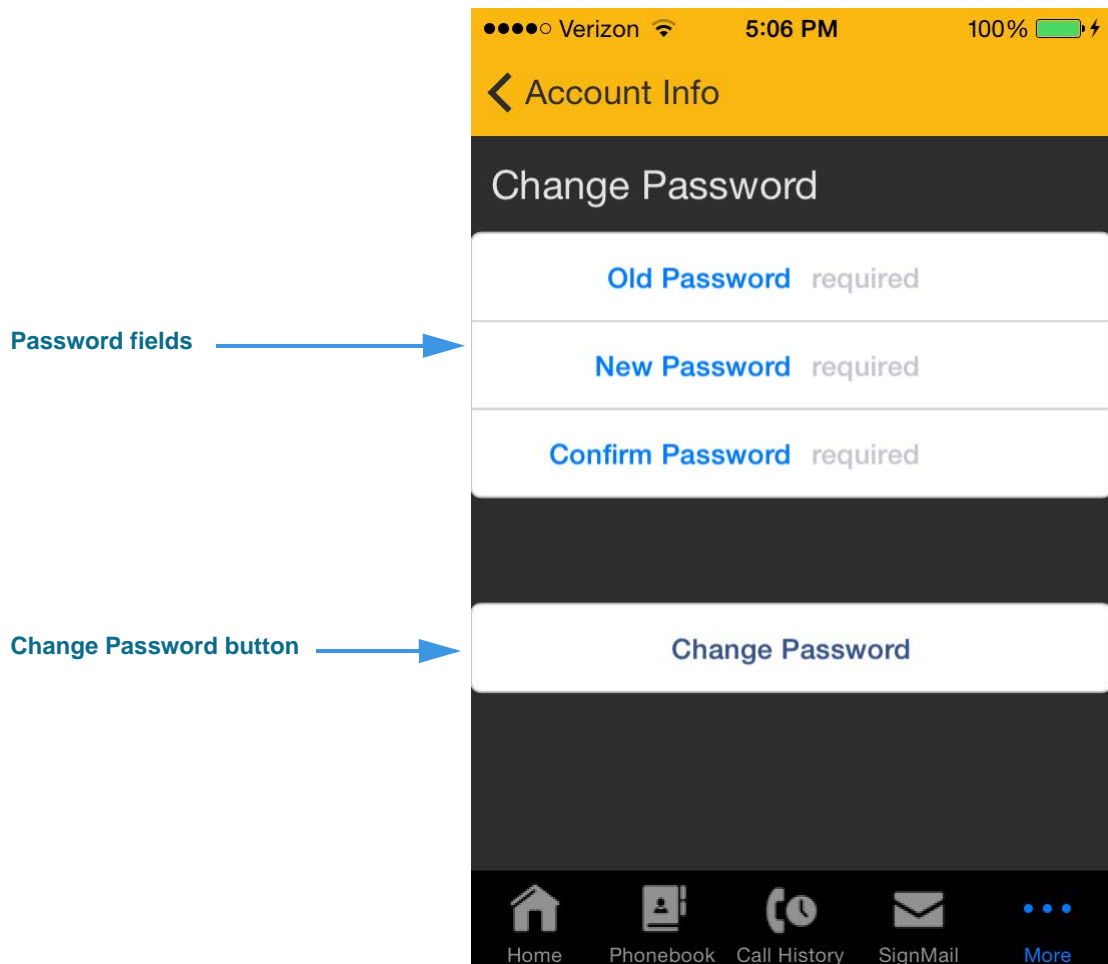


Figure 114 — Change Password screen

You must enter your old and new password into the correct fields on this screen. You must enter your new password twice to confirm the change.

- Step 3. Enter your old and new passwords into the correct fields. A keyboard will appear on the screen when you first tap the [Old Password](#) field.
- Step 4. Tap the [Change Password](#) button when ready to change your password. If you entered the correct old password and the same new password in the New and Confirm fields, the app will allow your password to be changed.
- Step 5. You will then be back at the Account Info screen.

To Reset Your Password/Request Your Phone Number

- Step 1. Start at the Account Info screen shown on [Figure 112](#).
- Step 2. Tap the [I Forgot My Password/Number](#) button to open the screen shown below.

Request fields and buttons →

* indicates required field

First Name *

Last Name *

Email *

Phone number

Please select the SVRS product that you are using.*

ntouch VP / VP-200

ntouch Mobile

ntouch PC

How can we help you?

Figure 115 — Password/Number Request page, top

You can use this page to request that Sorenson reset your account password and/or send you the local 10-digit number for any of your devices (e.g., ntouch PC/Mac, Mobile/Tablet, VP-200/ntouch VP) or your device's MAC ID.

You must enter your name and the email address you gave to Sorenson when your account was first set up. You must also select the device type for your request. Finally, you must choose what type of help you are requesting from the drop-down list.

- Step 3. Enter the required information in the [Request](#) fields and buttons.
- Step 4. Select the [Submit](#) button. If you entered the correct email address, you will receive an email from Sorenson with the information you requested.

To See/Edit Personal Information

- Step 1. Start at the Settings screen shown on [Figure 109](#).
- Step 2. Tap the [Personal Information](#) button to open the screen shown below.

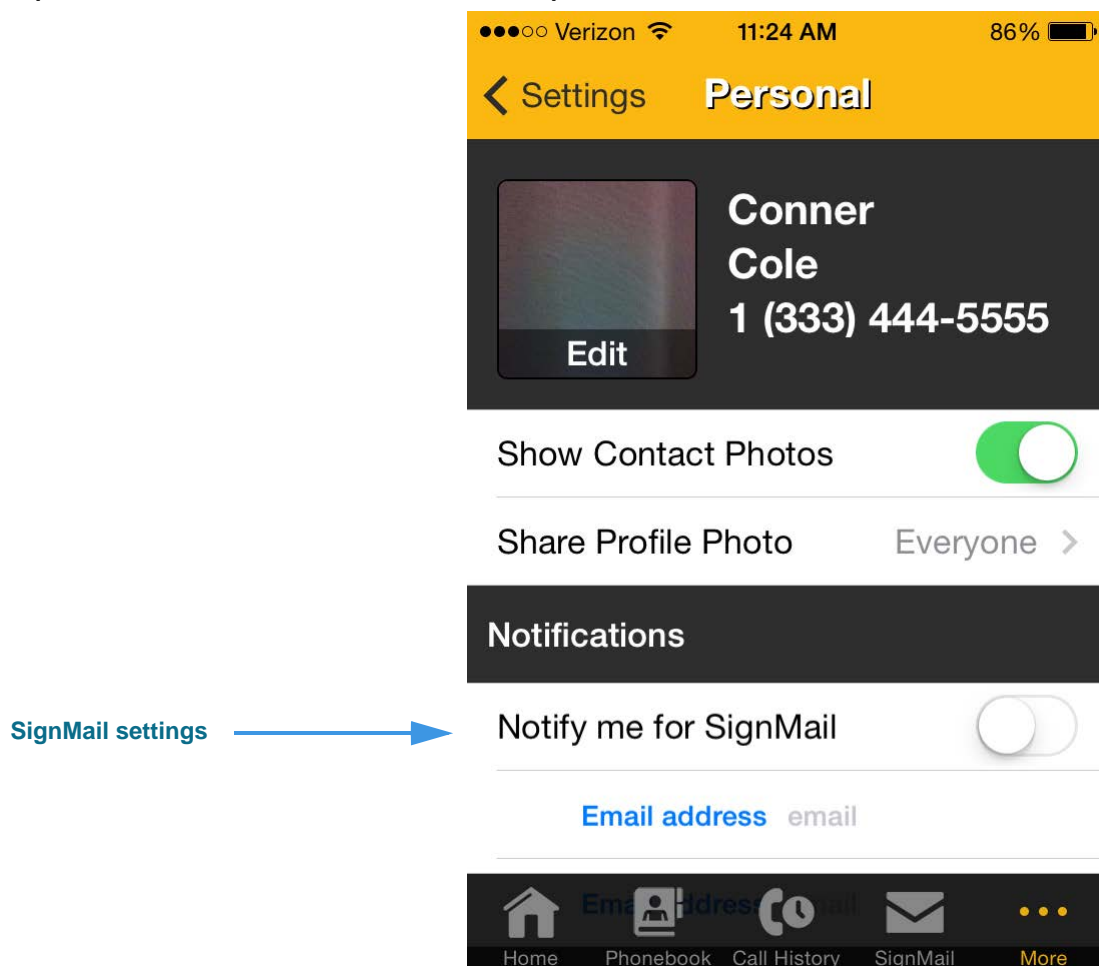


Figure 116 — *Personal* screen

The area at the top of the *Personal* screen shows your name and phone number(s). The use of the Profile Photo and Contact Photos features is described starting on [Page 64](#).

The **Notify me for SignMail** control lets you turn on the option to have emails sent to you when you receive SignMail videos.

The **Change Password** button (near the bottom of the screen) opens the *Change Password* screen shown on [Page 116](#). The Change Password option is in two places for convenience. The **Caller ID** control (if shown) lets you choose to use your toll-free number (if you have one) for Caller ID.

- Step 3. Make the desired changes to the settings.
- Step 4. Tap the [Settings](#) button to return to the Settings screen.

To Update 911 Location Info

- Step 1. Tap the **911 Location Information** button on the Settings screen to open the screen shown below.

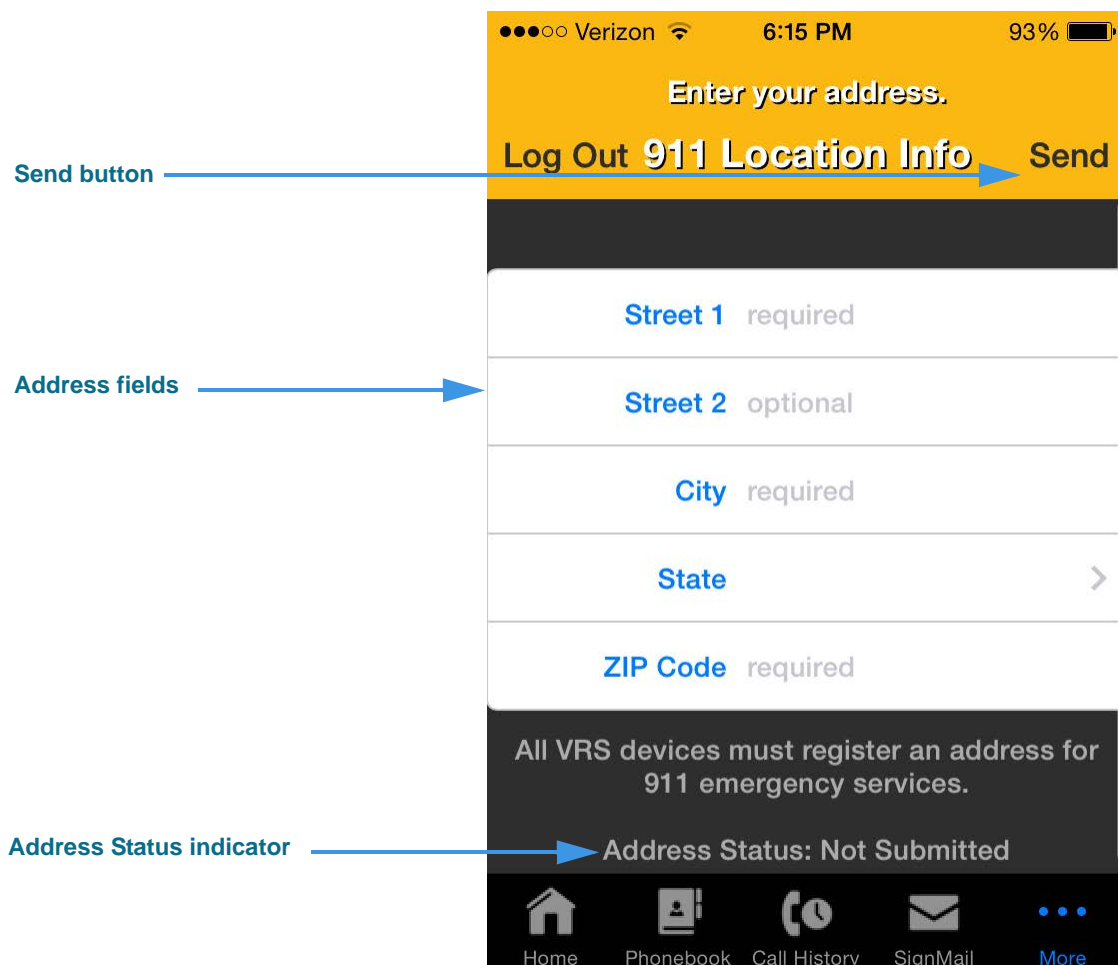


Figure 117 — 911 Location Info screen

The *911 Location Info* screen shows the 911 address registered for your ntouch Mobile account. This “default address” will be given to the emergency services personnel if you cannot sign your current address. You saw this screen during the registration process, but you can return here to update your address information at any time. The **Address Status** field shows whether or not the address as shown has been submitted for provisioning with 911 emergency services.

You should enter the address where you are most likely to be at any given time. For example, you could enter your home address or your work address.

- Step 2. Make any necessary changes to the fields on the screen, and then tap the **Send** button to submit the updated address.
- Step 3. If you are not making changes to your address information, tap the **More** button to exit. From there, tap the **Setting** button to return to the Settings screen.

To See/Edit myPhone Settings

Step 1. Tap the **myPhone** button on the Settings screen to open the screen shown below.

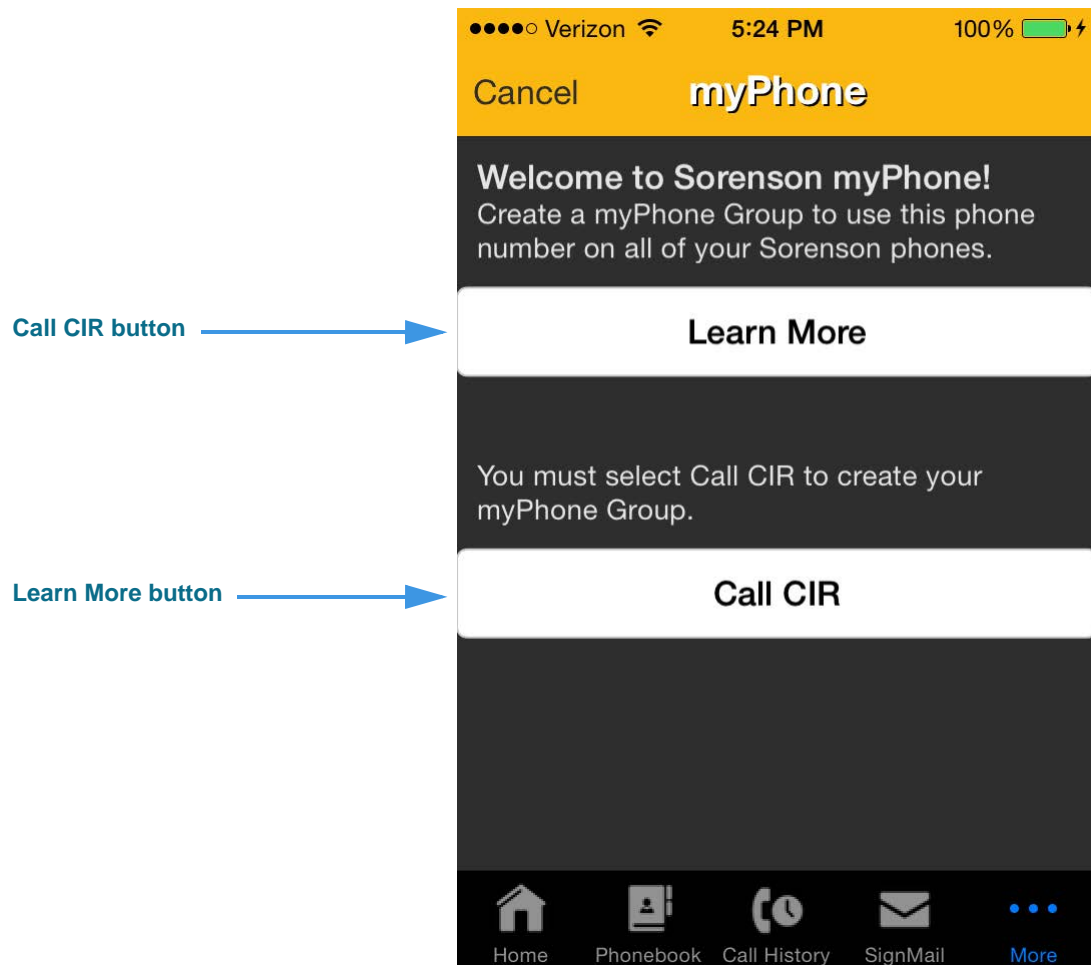


Figure 118 — Welcome to Sorenson myPhone screen

This screen explains that you can create a myPhone Group by calling the Sorenson CIR department. Tap the **Learn More** button to view a short ASL video that describes the myPhone feature.

Step 2. Tap the **Call CIR** button to call to Sorenson Customer Service (CIR). Ask to create your myPhone Group.

Change Settings

- Step 3. After your myPhone Group has been created, you can open the myPhone Settings screen to see the members of your group and your myPhone number.

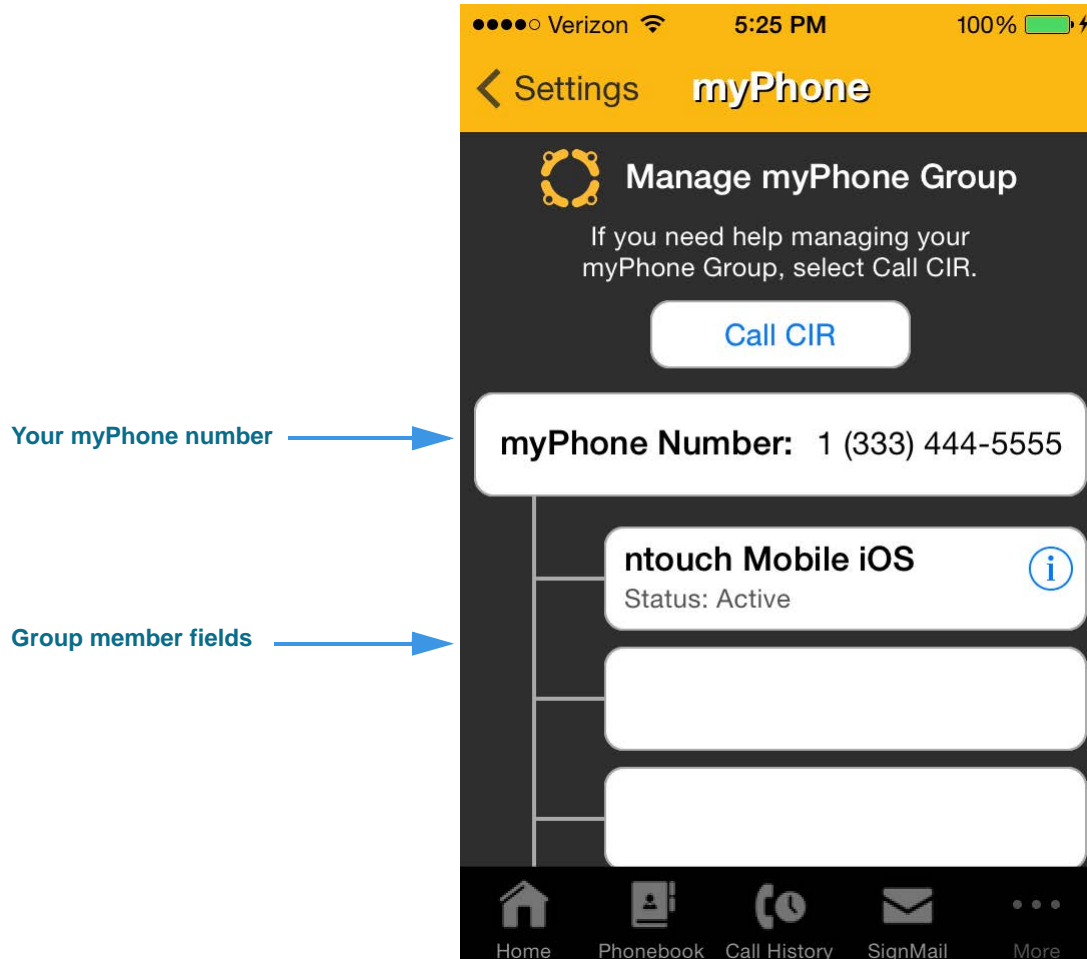


Figure 119 — Manage myPhone Group screen

The five fields in the middle of the screen show the names of the members of your myPhone Group. You will have to scroll to see all five fields. A myPhone Group can contain one to five members. In this example image, there is just one group member named “ntouch Mobile iOS.” If you need to make any changes to your group, you must call the Sorenson CIR department.

- Step 4. Select **Call CIR** to make a call to Sorenson Customer Service (CIR). Ask for help managing your myPhone Group.

To Import Videophone Contacts

Step 1. Tap the **Contacts** button on the Settings screen to open the screen below.

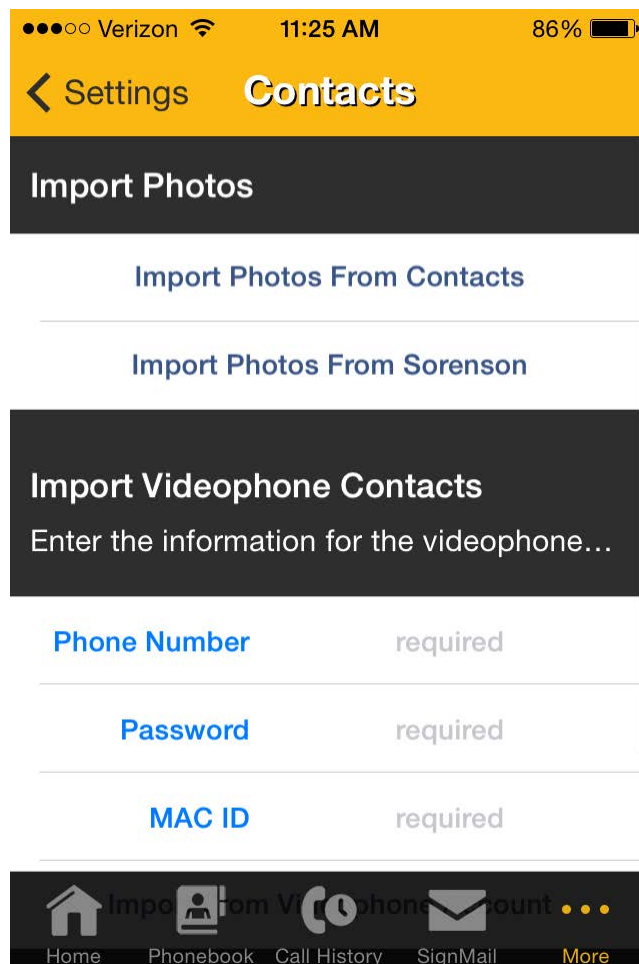


Figure 120 — Import Contacts screen

You can use the **Import Photos from Contacts** and **Import Photos from Sorenson** buttons to import photos into the ntouch app. The **Import from Videophone Account** button is located near the bottom of the screen (not shown in this image). Scroll to see it.

You can import contacts from a Sorenson account if you have the account's phone number and password (and the videophone's MAC ID). If you need help locating this information, see **Page 117**.

- Step 2. Enter the required information into the three fields on the screen.
- Step 3. Tap the **Import from Videophone Account** button to import the contacts. You will see a message if the contacts were imported successfully.
- Step 4. Tap the **Settings** button to return to the Account Info screen.

Change Settings

To Select a VRS Announce Option

Step 1. Select the **Setting** button to open the screen shown below.

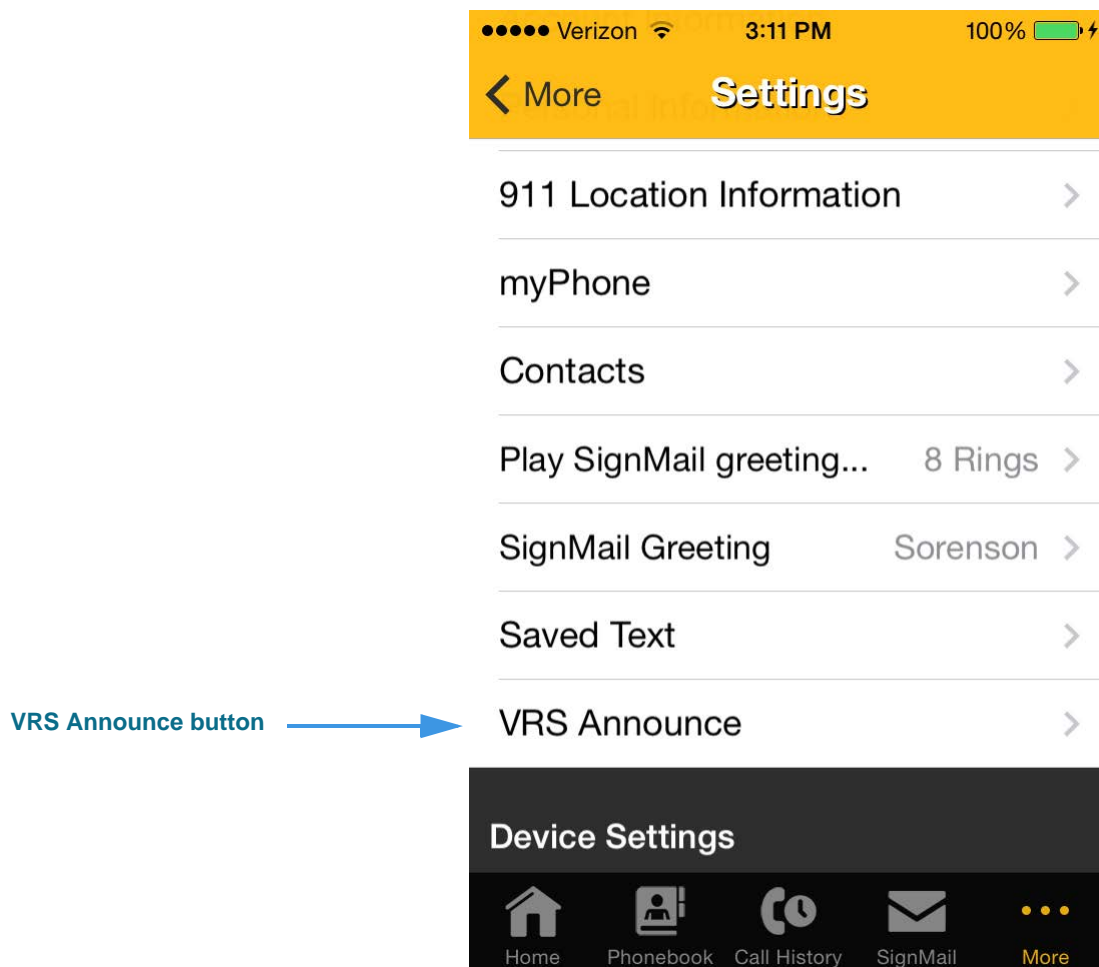


Figure 121 — Settings screen, VRS Announce button

Notice the **VRS Announce** button under the Profile Settings area of the screen.

Step 2. Tap the **VRS Announce** button to display the dialog shown.

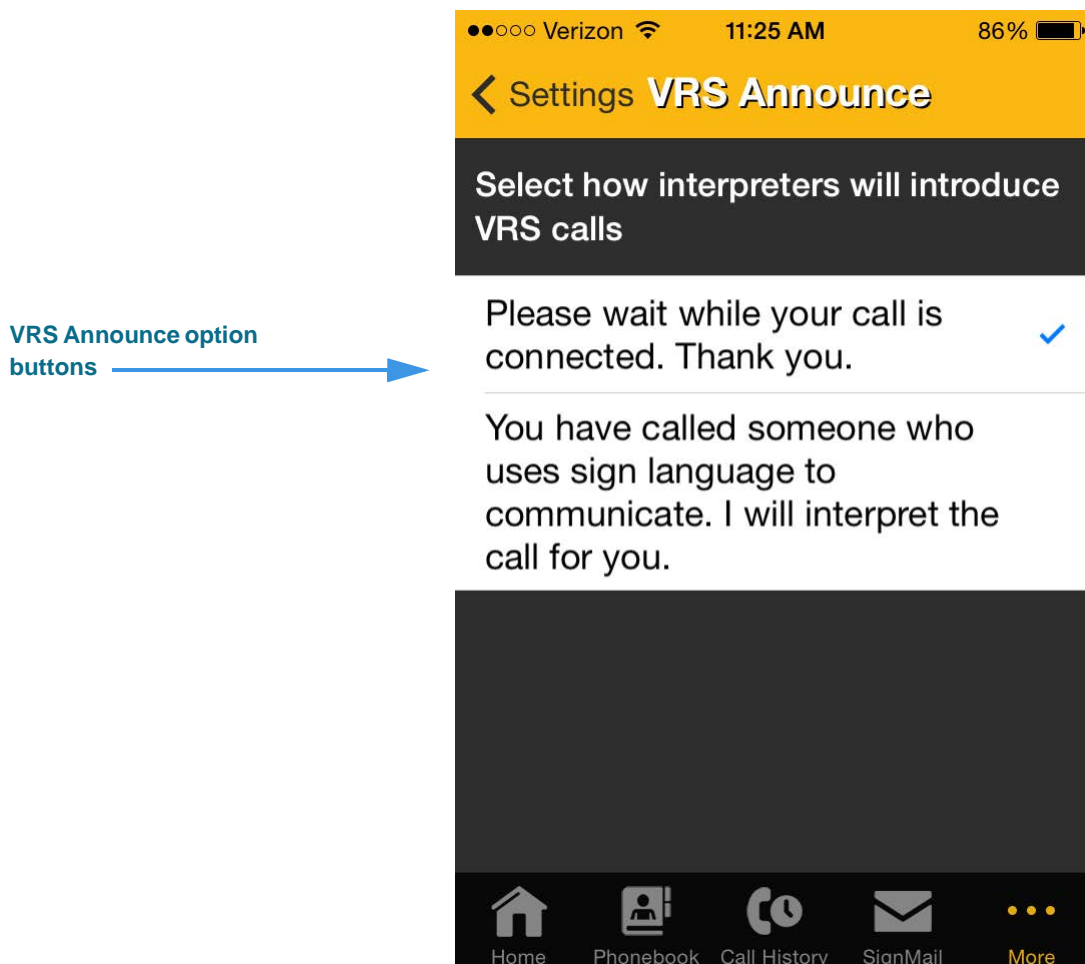


Figure 122 — VRS Announce screen

Step 3. Select which of the two announcements you want the VRS interpreter to use when introducing your VRS calls to a hearing person. The selected option will be marked with the blue checkmark at the right side of the screen.

Step 4. Tap **Settings** at the top-left of the screen to return to the main Settings dialog.

Change Settings

To Set the Ring Count

ntouch Mobile lets you set the number of rings before the device answers incoming calls and starts playing the SignMail greeting video. The default setting is 8 rings.

- Step 1. Open the Settings screen and then tap the **Play SignMail greeting after** button to open the screen shown below.

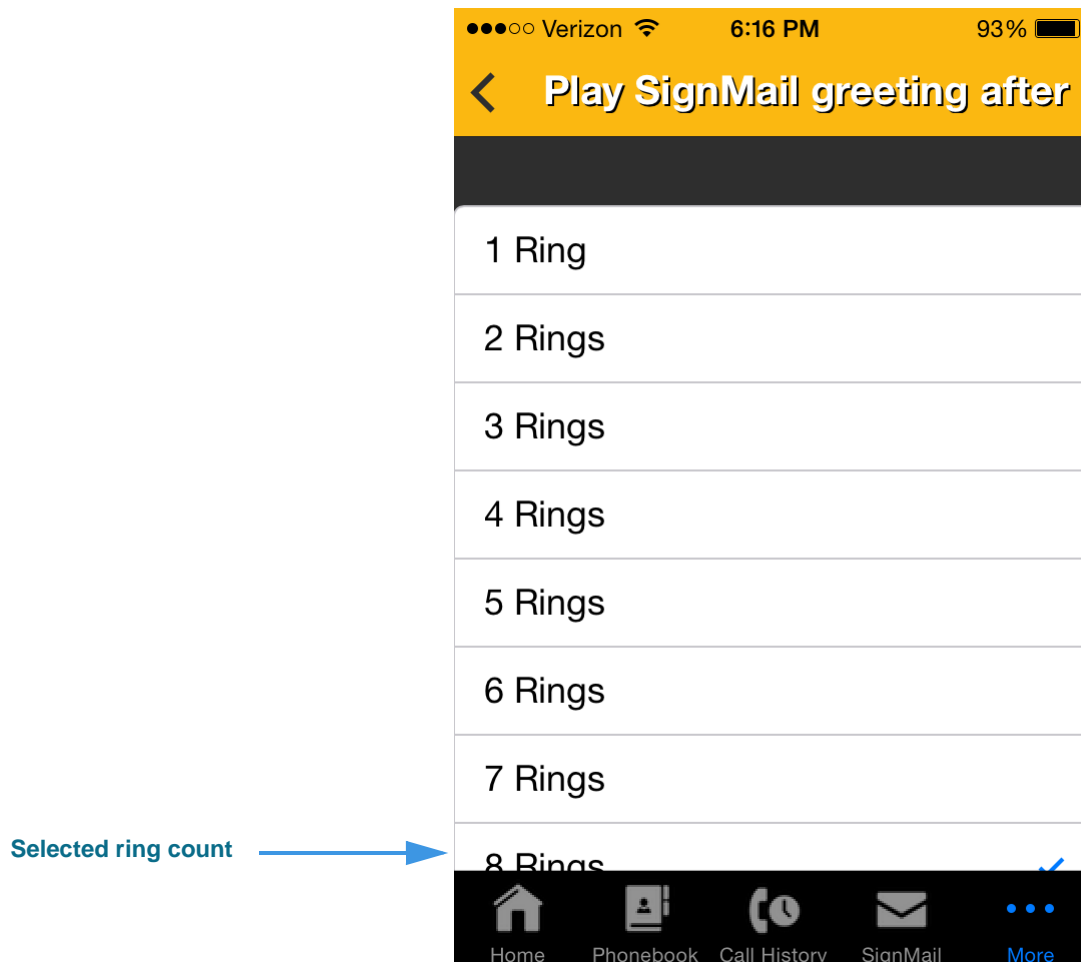


Figure 123 — Play SignMail greeting after screen

The buttons on this screen let you choose the number of rings before the device will answer incoming calls received other Sorenson videophones. The default setting is 8 rings. After answering, the SignMail greeting video will be played to indicate to the caller that he/she can then record a SignMail video message for you to view later.

- Step 2. Tap the button for the **ring count** that you want to use.
- Step 3. You will then be back at the Settings screen.

To Set a myRumble Pattern

- Step 1. Open the Settings screen and then tap **myRumble Pattern** button to open the screen shown below.

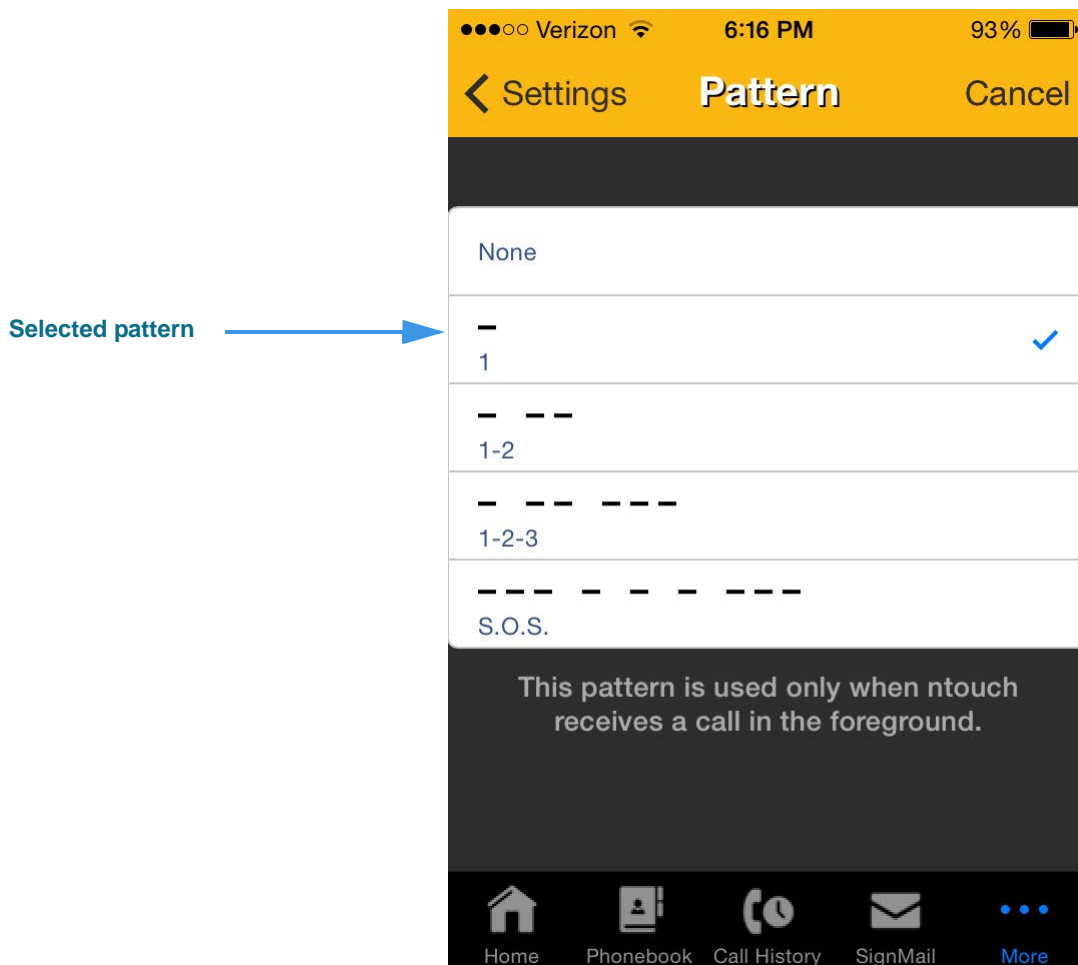


Figure 124 — Pattern screen

This screen provides four pre-defined pattern options. The iPhone device can vibrate at only one speed and intensity, however it can repeat the vibration in specific patterns. The dashes and numbers on the buttons indicate vibrations and pauses. The numbers under the dashes show the number of times the vibrations are repeated for each pattern. The bottom button makes the phone vibrate using the Morse code sign for “SOS.”

- Step 2. Tap the button for the vibration pattern that you want to use for all incoming calls. The checkmark symbol will appear to the right side of the selected pattern.
- Step 3. Tap the **Settings** button to return to the Settings screen.

To Configure the More Screen

The **Edit** button located at the top right of the *More* screen is used to configure the row of buttons at the bottom of each app screen.

Step 1. Go to the More screen shown in Figure 108 on Page 110.

Step 2. Tap the **Edit** button to open the screen shown below.

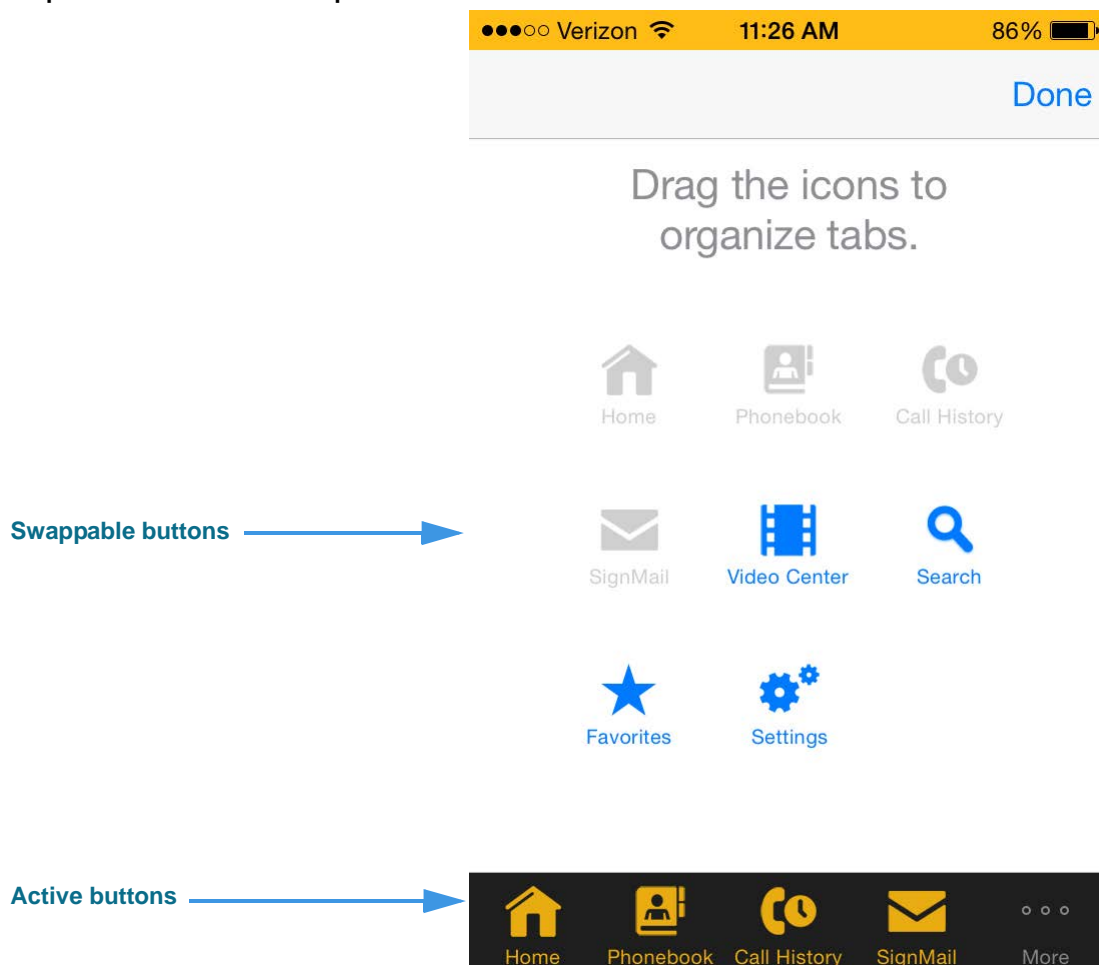


Figure 125 — Configure screen

This screen is used to change three of the five buttons located at the bottom of every app screen. You have the option to swap out the **Phonebook**, **Call History** and **SignMail** buttons with any of the buttons shown in the middle part of the screen.

To swap a button, just drag the desired function button down to one of the swappable areas of the screen. For example, you could swap the **SignMail** function with the **Favorites** function if you wanted to have faster access to your Favorites list.

- Step 3. Drag the **Favorites** icon from the top area of the screen down to the area of the screen where the **SignMail** button is located as shown in Figure 125. The screen will then look like the image shown below.

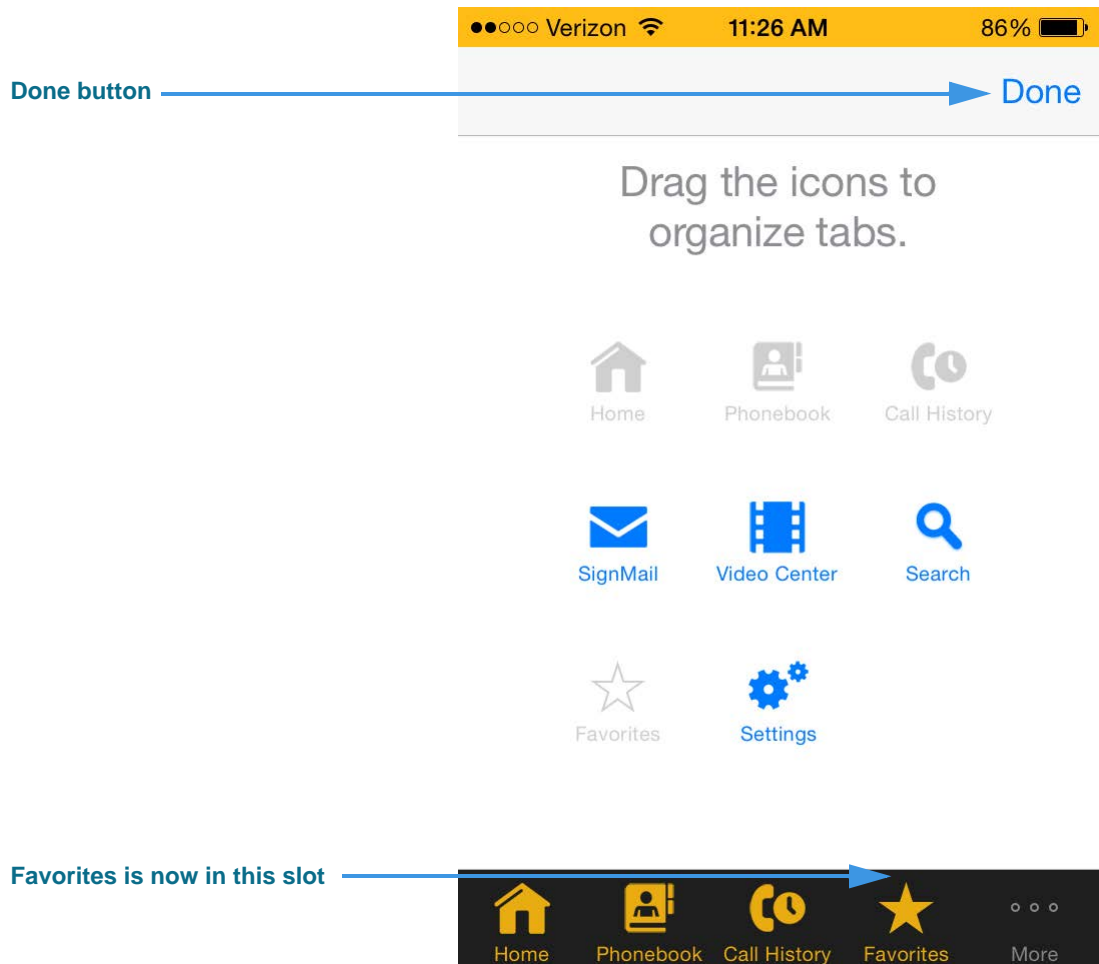


Figure 126 — Swapped buttons on *Configure* screen

You can continue to make changes (or experiment with placement of buttons) as long as you like. When finished making changes, you must tap the **Done** button.

Change Settings

Step 4. Tap the **Done** button to return to the More screen as shown below.

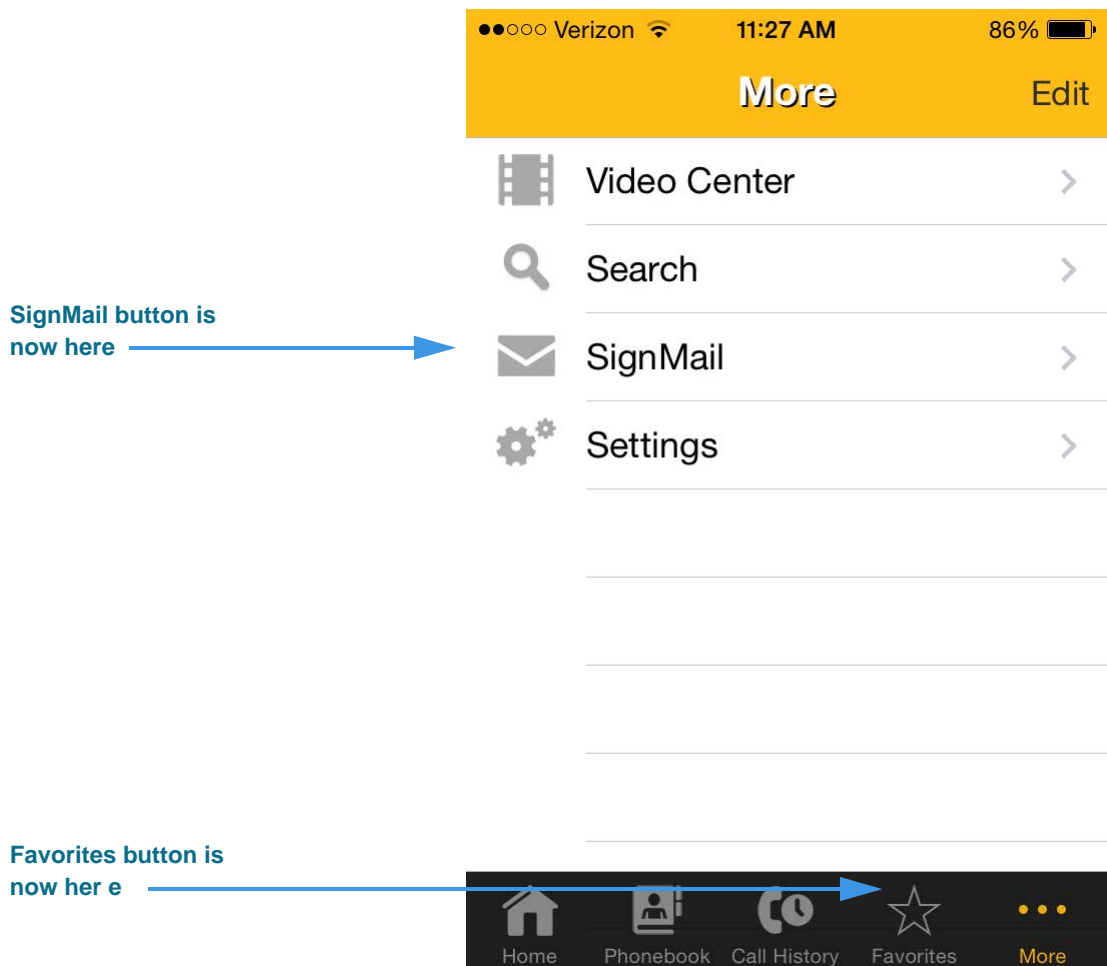


Figure 127 — More screen showing swapped buttons

The *More* screen now shows one of the two buttons you swapped in the previous steps. This means that the SignMail feature can now be accessed only by first opening the *More* screen and that the Favorites feature can now be accessed by tapping the button that now appears at the bottom of every app screen.

Step 5. If you are happy with the changes you've made, you can exit the More screen.

Step 6. If you want to make other changes to the buttons, or even put the buttons back to their default locations, you can tap the **Edit** button to make changes.

Use App Help

ntouch Mobile has a variety of built-in Help options. You can access the *Help* screen from the main *Settings* screen or from the *Account Information* screen.

To See the Help Options

Step 1. Tap the **Settings** button to open the Settings screen. Scroll to the bottom of the screen as shown below.

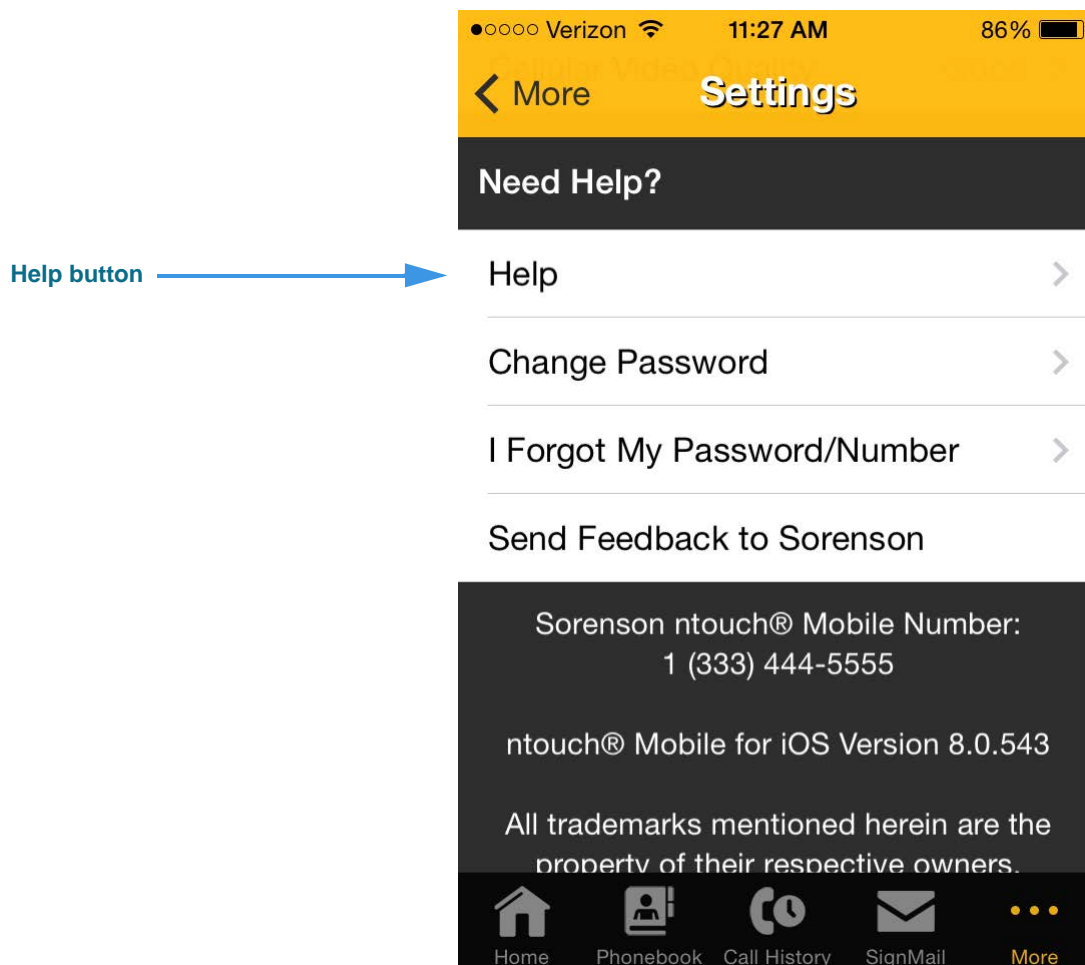


Figure 128 — More screen, Help button

The **Help** button is located near the bottom of the *Settings* screen.

Note: If you want to access the Help screen from the Account Information screen, look for the **Help** button under the *Need Help?* area of that screen.

Use App Help

Step 2. Tap the **Help** button to open the Help screen shown below.

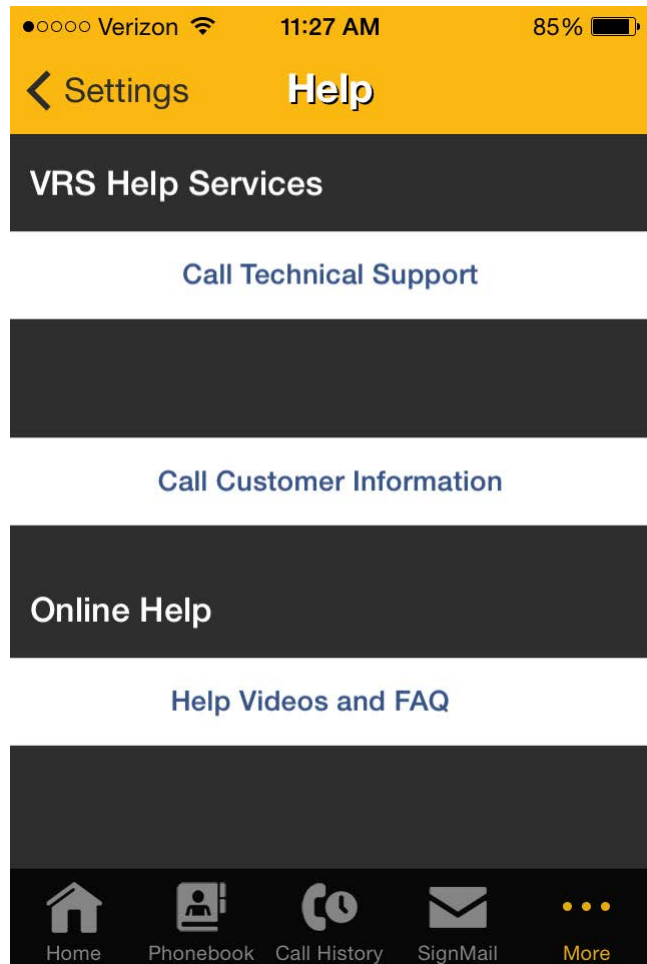


Figure 129 — Help screen

The buttons on this screen link to the various ntouch Mobile Help options. You can call Technical Support or Customer Service (CIR). Here is also a variety of online help available.

The Help options may be updated over time, so remember to check this screen often.

Step 3. Tap the Help Videos and FAQ button open the screen shown below.

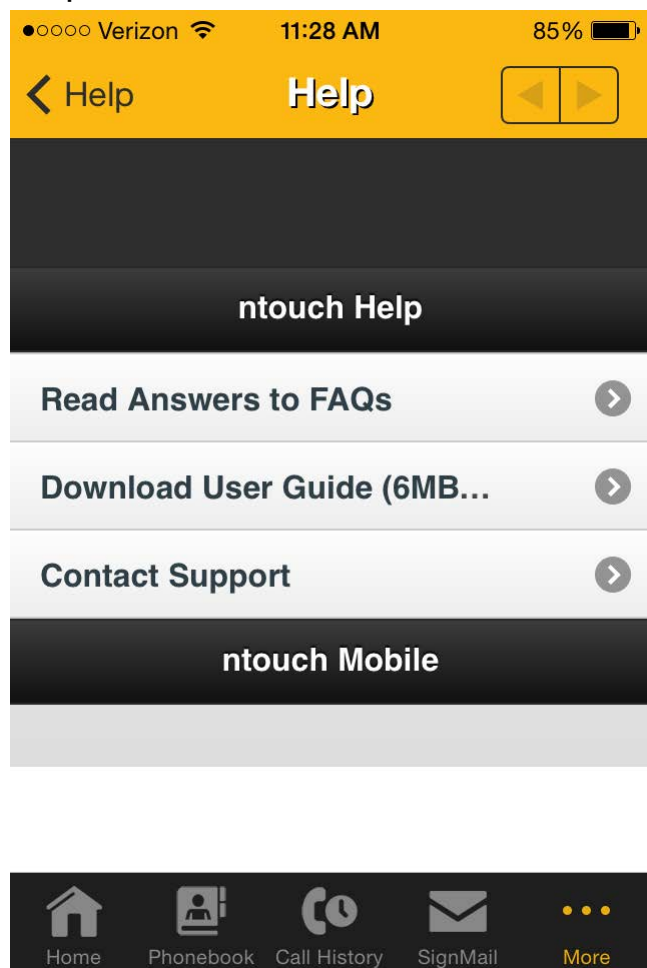


Figure 130 — *Help* screen, online help options

You can read answers to Frequently Asked Questions (FAQs), download this User Guide, or contact Sorenson's support services.